

T Phone

5G mobilni telefon



Priručnik za korisnike
Montenegro

O ovom uputstvu

Hvala vam što ste izabrali T phone 5G mobilni telefon. Kako bi ovaj uređaj stalno bio u optimalnom stanju, pročitajte ovo uputstvo i sačuvajte ga za ubuduće.

 
Sadržaj

O ovom uputstvu	2	4.5 Chrome	14
1 Prvi koraci.....	3	4.6 Kalendar	14
1.1 Pregled.....	3	4.7 Kamera	15
1.2 Podešavanja	4	4.8 Fotografije	16
1.3 Početni ekran	5	4.9 Sat.....	17
1.4 Statusna traka	5	5 Google aplikacije.....	18
2 O vašem telefonu	6	6 Još aplikacija	19
2.1 Uključivanje/isključivanje	6	7 Bezbjednost	19
2.2 Baterija	6	7.1 Zaključavanje ekrana.....	19
3 Personalizujte svoj telefon.....	7	7.2 Zaključavanje SIM kartice.....	19
3.1 Jezik.....	7	7.3 Podešavanja zaključanog ekrana	19
3.2 Datum i vrijeme.....	7	7.4 Senzor otiska prsta	20
3.3 Ekran.....	8	7.5 Otključavanje prepoznavanjem lica	20
3.4 Pozadina.....	8	7.6 Pametno zaključavanje	20
3.5 Zvuk	8	7.7 Enkripcija i akreditivi	20
3.6 Digitalna dobrobit i roditeljske zabrane	9	8 Nalog.....	20
4 Aplikacije	9	8.1 Informacije o nalogu	20
4.1 Pozivi	9	8.2 Ažuriranje softvera	20
4.2 Kontakti.....	10	9 Bezbjednosne i regulatorne informacije.....	21
4.3 Poruke	11	10 Specifikacije.....	24
4.4 Gmail	12	11 Rješavanje problema	25

1 Prvi koraci

1.1 Pregled

Napomena: Senzor za otisak prsta nalazi se na dugmetu za uključivanje.

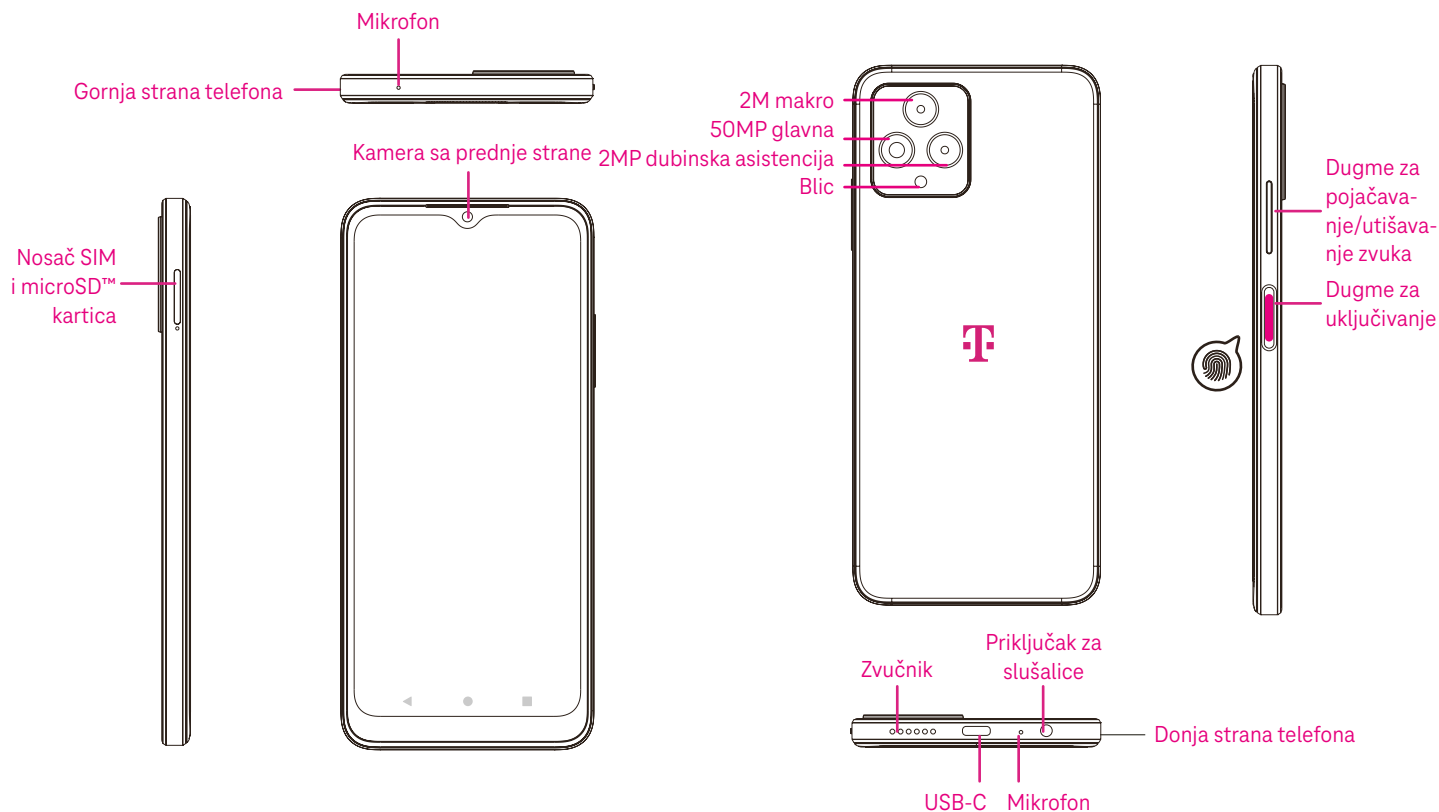

■ Dugme za nedavno korišćene aplikacije

- Didirnite da biste vidjeli nedavno korišćene aplikacije. Prevucite nagore na ekranu da sklonite konkretan umanjeni prikaz iz liste ili prevucite skroz nalijevo i dodirnite **ZATVORI SVE** da sklonite sve umanjene prikaze iz liste.
- Pritiskom na **Nedavno korišćene aplikacije** takođe se omogućava pristup **Snimcima ekrana**. Dodirnite Snimak ekrana da odmah napravite snimak onoga što je na ekranu.

● Dugme za Početni ekran

- Dok ste u bilo kojoj aplikaciji ili ekranu, dodirnite da se vratite na Početni ekran.
- Dodirnite i zadržite da pokrenete Google asistenta pomoću kog možete da potražite informacije na internetu, otvorite aplikacije na svom telefonu ili da pošaljete poruke.

◀ Dugme za kretanje nazad

Dodirnite da biste se vratili na prethodni ekran ili da biste zatvorili polje za dijalog, meni sa opcijama ili panel sa obavještenjima.

Dugme za uključivanje

- Brzo pritisnite i pustite da zaključate ili upalite ekran.
- Pritisnite i zadržite da pokrenete Google asistenta.

- Pritisnite i zadržite dugme za **Uključivanje** i dugme za **Pojačavanje zvuka** da biste izabrali između Hitan slučaj, Isključi ili Pokreni ponovo.
- Pritisnite i zadržite dugme za **Uključivanje** i dugme za **Utišavanje zvuka** da biste napravili snimak ekrana i sačuvali ga.
- Pritisnite i zadržite dugme za **Uključivanje** najmanje 10 sekundi za prinudno ponovno pokretanje.
- Pritisnite dugme za **Uključivanje** dva puta da uključite kameru.

Dugme za pojačavanje/utišavanje zvuka

- Koristite dugmad za zvuk gore ili dole da podesite jačinu zvona, jačinu tona tokom telefonskog poziva ili medija tokom slušanja muzike, gledanja videa ili puštanja sadržaja.
- Pritisnite dugme za pojačavanje/utišavanje zvuka tokom dolaznog poziva da utišate zvono.
- Dok koristite kameru, pritisnite dugmad za zvuk gore ili dole da napravite fotografiju.

1.2 Podešavanje

Ubacivanje Nano SIM kartice

Da biste obavljali telefonske pozive preko vaše mreže morate da ubacite Nano SIM karticu.

 


Vaš telefon podržava samo Nano SIM kartice. Kako ne biste oštetili svoj telefon, ne pokušavajte da ubacite SIM kartice drugih vrsta kao što su Mini ili Mikro kartice.

Kako biste izvadili nosač SIM kartice, ubacite iglicu za SIM karticu koja se nalazi u pakovanju i potom lagano izvucite nosač





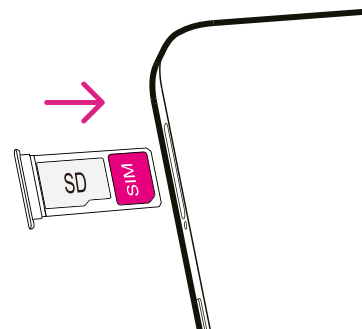



Ubacite ili izvadite Nano SIM karticu i microSD karticu u odgovarajuće mjesto kako je prikazano



Napomena: Čak i kada SIM kartica nije ubačena, vaš telefon će se ipak uključiti i moći ćete da se povežete na Wi-Fi mrežu i koristite neke funkcije na telefonu.

 
Podesite svoj telefon

Prvi put kada uključite telefon, trebalo bi da podesite sljedeće opcije:

- Dodirnite ▼ da izaberete jezik na telefonu, a potom dodirnite **START**.
- Izaberite dostupnu Wi-Fi mrežu. Ili dodirnite **Podešavanje bez interneta** i **Nastavi**.
- Podesite datum i vrijeme ako je potrebno, a potom dodirnite **Sljedeće**.
- Uključite  da biste telefonu dozvolili da koristi lokaciju, u suprotnom, isključite .
- Uključite  da biste dozvolili skeniranje, u suprotnom, isključite .
- Uključite  da izaberete Prikupljanja dijagnostike uređaja ili ne, u suprotnom, isključite .
- Kliknite **Više** da nastavite i pritisnite **Prihvatom**.
- Odredite PIN za zaključani ekran, u suprotnom, pritisnite **Preskoči** da biste nastavili.

1.3 Početni ekran

Radi brzog pristupa, na početni ekran možete da postavite sve stavke koje najčešće koristite (aplikacije, prečice, vidžete, foldere). Dodirnite dugme za Početni ekran kako biste se vratili na Početni ekran.

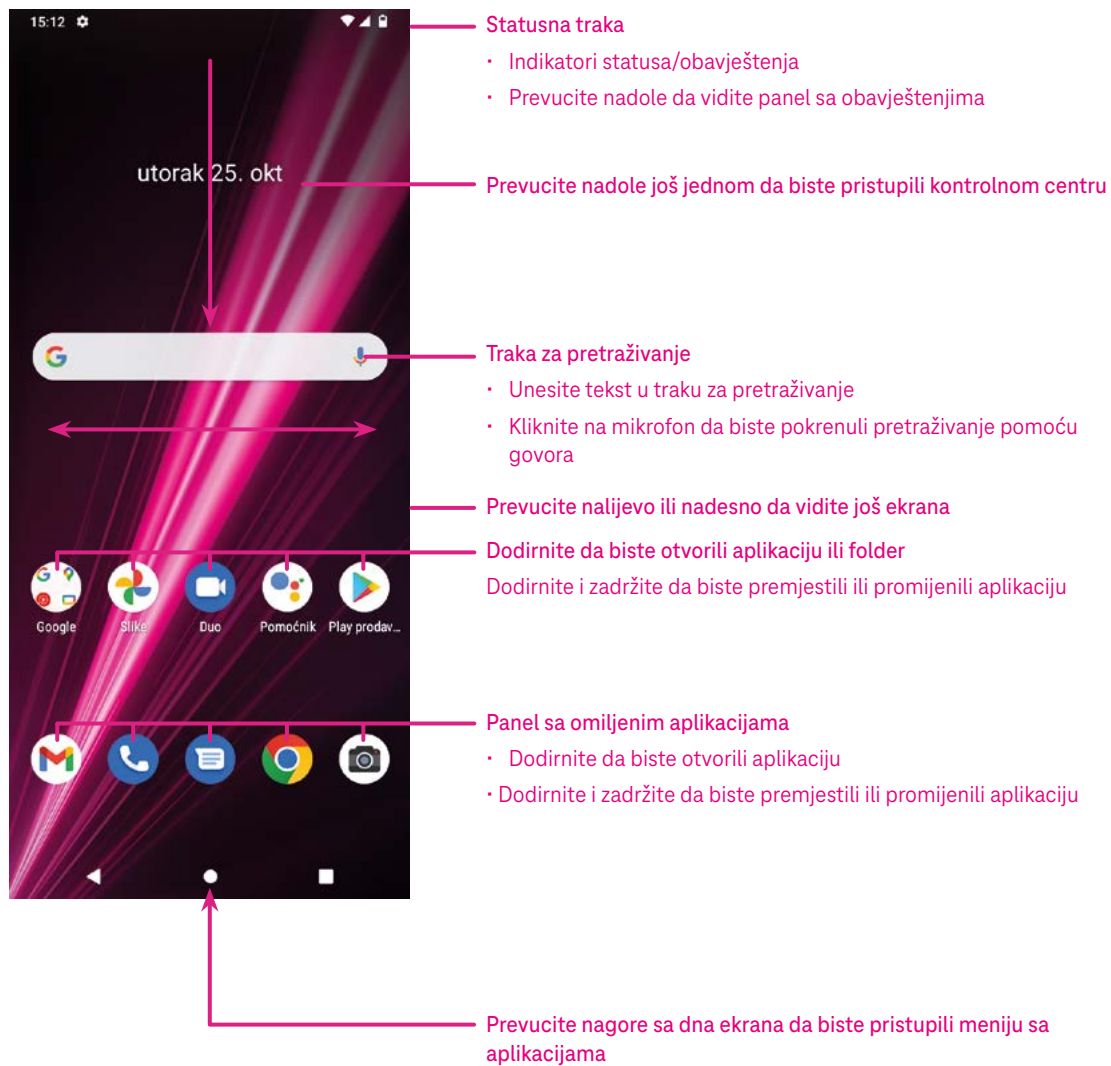

1.4 Statusna traka

Statusna traka se pojavljuje na vrhu Početnog ekrana i uključuje ikone koje označavaju status vašeg telefona i nova obavještenja.

Ikona	Status	Ikona	Status
	Wi-Fi® aktivan		Baterija (potpuno napunjena)
	Mreža (pun signal)		Nova poruka
5G	5G usluga podataka		Nečujni režim
	Način rada u avionu		Ne uznemiravaj režim
	Alarm podešen		Nova Gmail poruka
	Baterija (puni se)		Snimač ekrana
	Lokacija		NFC omogućen

2 O vašem telefonu.....

2.1 Uključivanje/isključivanje

Da biste uključili uređaj, zadržite dugme za Uključivanje dok se telefon ne uključi. Otključajte svoj telefon (koristeći prevlačenje, šablon, PIN, lozinku, otisak prsta ili prepoznavanje lica) ako je potrebno. Kada je otključan, prikazaće se Početni ekran.

Ako ne znate svoj PIN kod ili ste ga zaboravili, kontaktirajte Korisničku podršku. Radi bezbjednosti, nemojte da čuvate svoj PIN kod u telefonu.

Da biste isključili uređaj, pritisnite dugme za Uključivanje i dugme za Pojačavanje zvuka dok se ne pojave opcije, a potom izaberite Isključi.

Punjenje

Prikopčajte mali kraj kabla za punjenje u priključak za punjenje i uključite punjač u utičnicu.



- Prikopčajte USB-C kabel u priključak za punjenje kako je prikazano.
- Uključite punjač u utičnicu.

Napomena: Molimo vas da koristite USB-C kabel koji se nalazi u kutiji. Punjač se prodaje odvojeno. Korišćenjem pogrešnog kabla i punjača možete da oštetite priključak za punjenje ili smanjite učinak baterije.


2.2 Baterija

Aktivirajte ova prilagođavanja kako bi životni vijek baterije bio optimalan.

Uključite režim uštede baterije

- Idite na Podešavanja > Baterija > Ušteda baterije.
- Dodirnite Koristi uštedu baterije da aktivirate režim uštede baterije.

Smanjite jačinu osvijetljenosti ekrana

- Idite na Podešavanja > Ekran > Jačina osvijetljenosti.
- Smanjite osvijetljenost prevlačenjem  ulijevo.


Vremensko ograničenje ekrana

- Idite na Podešavanja > Ekran > Vremensko ograničenje ekrana.
- Izaberite trajanje vremenskog ograničenja ekrana.

3 Personalizujte svoj telefon.....

3.1 Jezik

Izaberite između više jezika koje vaš telefon podržava.

- Idite na Podešavanja > Sistem > Jezici i unos > Jezici.
- Dodirnite + **Dodaj jezik** da izaberete jezik iz liste.
- Dodirnite i zadržite  pored jezika koji želite i prevucite ga na vrh liste.

3.2 Datum i vrijeme

Idite na Podešavanja > Sistem > Datum i vrijeme.

Koristite vrijeme koje pruža mreža

Dodirnite da koristite vrijeme koje pruža mreža. Izaberite između:

- Koristite vrijeme koje pruža mreža
- Koristite vrijeme koje pruža GPS
- Isključeno

Automatska vremenska zona

Uključite da omogućite vremensku zonu koju pruža mreža.

Ako je opcija Koristite vrijeme koje pruža mreža isključeno, datum i vrijeme možete ručno da odredite:

- Dodirnite **Podesi datum** da otvorite dijalog u kojem možete ručno da odredite datum.
- Dodirnite **Podesi vrijeme** da otvorite dijalog u kojem možete ručno da odredite vrijeme.

Ako je Automatska vremenska zona isključena, vremensku zonu možete ručno da odredite:

- Dodirnite **Izaberi vremensku zonu** da ručno izaberete region i vremensku zonu.

Koristite lokalno zadato

- Uključite da omogućite lokalno zadato.

Koristite 24-časovni format

- Ako je isključena opcija Koristite lokalno zadato, možete da uključite da koristite 24-časovni format.

3.3 Ekran

Prilagodite podešavanja ekrana i pozadina kako bi vam iskustvo bilo optimalno.

Idite na Podešavanja > Ekran da promijenite sljedeća podešavanja.

Tamna tema

U tamnoj temi se koristi crna pozadina i to pomaže da baterija duže traje na nekim ekranima

Noćno svjetlo

U ovom režimu boja vašeg ekrana dobija žutu nijansu. Time se olakšava gledanje u ekran ili čitanje pri slabom svjetlu i može da vam pomogne da lakše zaspate.

Automatsko okretanje ekrana

Izaberite da li će se ekran automatski okretati ili ne.

Napomena: Korišćenjem vašeg uređaja u pejzažnom položaju dok nosite polarizovane naočare za sunce može blokirati svjetlo na ekranu.

Skinite polarizovan naočare za sunce ili uređaj koristite u portretnom položaju kako bi nastavili sa upotrebom.

3.4 Pozadina

- Dodirnite Fotografije kako biste izabrali između fotografija sačuvanih na vašem uređaju.
- Dodirnite Podešavanja > Pozadina i stilovi da promijenite pozadinu svog zaključanog i/ili početnog ekrana koristeći unaprijed dodate fotografije.

3.5 Zvuk

Podešavanje jačine zvuka

- Pritisnite dugmad za pojačavanje/utišavanje zvuka koja se nalaze sa desne strane uređaja kako biste podesili jačinu zvona i obavještenja.
- Takođe možete da odete na Podešavanja > Zvuk kako biste podesili jačinu zvuka za medije, pozive, zvono i obavještenja i alarme.

Podešavanje tonova

Idite na podešavanja > Zvuk > Zvono telefona.

Podešavanje ostalih zvukova

Svi drugi zvukovi su u vezi sa obavještenjima, alarmima, brojčanikom, zaključavanjem ekerana i punjenjem i mogu da se podese na sljedeći način:

Idite na Podešavanja > Zvuk.








3.6 Digitalna dobrobit i roditeljske zabrane

- Ovaj meni koristite da saznate koliko vremena ste proveli na telefonu pa čak i u svakoj aplikaciji. Možete da prilagodite vremensko ograničenje za korišćenje telefona.
- Pored toga, roditelji mogu da ograniče vrijeme korišćenja telefona za svoju djecu i da kontrolišu njihove navike pregledanja.



4 Aplikacije

4.1 Pozivi


Pozivanje

- Da obavite poziv, dodirnite .
- Prijedlozi brojeva telefona se prikazuju dok kucate brojeve na brojčaniku.
- Unesite željeni broj putem brojčanika i dodirnite  da uputite poziv. Takođe možete da izaberete kontakt iz Omiljenih , Nedavnih  ili Kontakata  dodirrom na kartice.
- Broj koji unesete može da se sačuva u Kontakte dodirrom na **Kreiraj novi kontakt**.
- Ako pogriješite, pogrešne cifre možete da obrišete dodirrom na .
- Da završite poziv, dodirnite .

Međunarodni pozivi

Da obavite međunarodni poziv, dodirnite i zadržite  da unesete +, potom unesite međunarodni pozivni broj poslije kog slijedi cijeli broj telefona i onda dodirnite .




Pozivanje brojeva za hitne slučajeve

 
Ako je vaš telefon u dometu mreže, unesite broj za hitne slučajeve i dodirnite .

Ovo funkcioniše čak i bez SIM kartice i bez kucanja PIN koda.

Javljanje na pozive ili odbijanje poziva




Kada primete poziv:

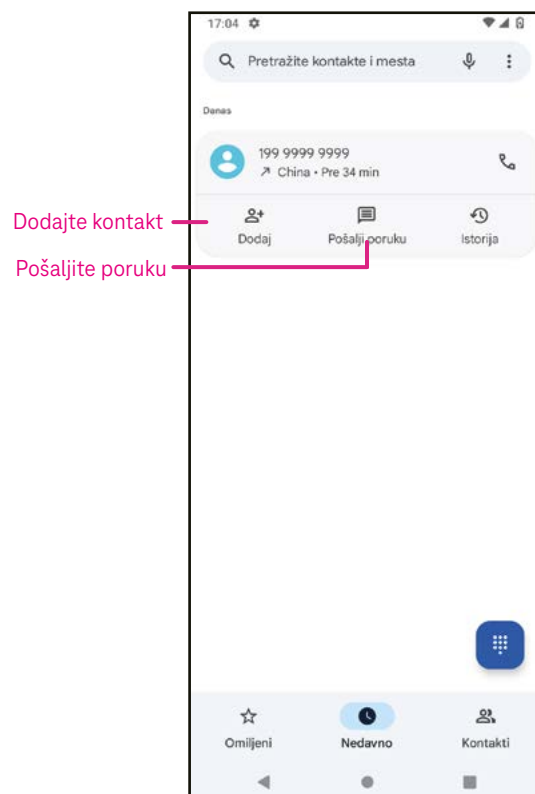- Prevucite  nagore da se javite.
- Prevucite  nadole da odbijete.
- Dodirnite  da odbijete poziv slanjem unaprijed određene poruke.
- Da isključite zvuk zvona dolaznog poziva, pritisnite dugme za pojačavanje/utišavanje zvuka.

 


Glasovna pošta

Govorna pošta funkcioniše poput telefonske sekretarice za propuštene pozive.

- Da biste pristupili govornoj pošti, dodirnite i zadržite 1.
- Da odredite svoj broj govorne pošte: dodirnite **Telefon**  i idite u meni  > Podešavanja > Glasovna pošta > Napredna podešavanja > Podešavanja > Broj govorne pošte.
- Ako primite glasovnu poštu,  pojavljuje se na statusnoj traci. Otvorite panel sa obavještenjima i dodirnite **Govorna pošta**.

Dodirnite i zadržite da biste pristupili govornoj pošti

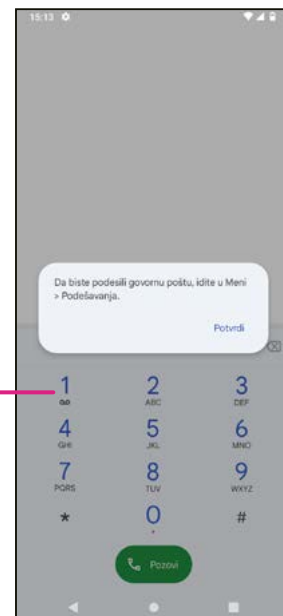

4.2 Kontakti

Kontakti omogućavaju brz i lak pristup kontaktu kojeg želite da kontaktirate.

Da biste pristupili ovoj funkciji, dodirnite Kontakti  u meniju Aplikacije.

Možete da pregledate i kreirate kontakte na svom telefonu i da ih sinhronizujete sa Gmail kontaktima ili drugim aplikacijama na internetu ili na svom telefonu.




Kada završite, dodirnite Sačuvaj


Izaberite fotografiju za taj kontakt ili je snimite

Dodirnite da biste otvorili dostupne oznake

Dodavanje kontakta



- Dodirnite  na listi kontakata da kreirate novi kontakt.
- Unesite ime kontakta i druge podatke o kontaktu. Prevlačenjem ekrana gore i dole možete da se prebacite sa jednog polja na drugo.
- Kada završite, dodirnite **SAČUVAJ**.
- Da izađete bez čuvanja, možete da dodirnete **X** i onda da dodirnete **Odbaci**.

 
Uređivanje vaših kontakata

Dodirnite  na ekranu sa pojedinostima o kontaktu da biste uredili.

Kada završite, dodirnite **SAČUVAJ**.



Dodavanje/izbacivanje iz Omiljenih⁽¹⁾

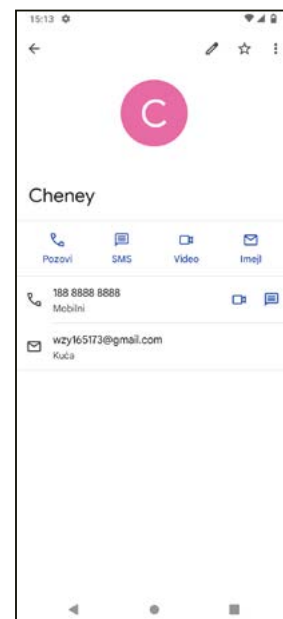- Dodirnite kontakt da pogledate pojedinosti, a onda dodirnite  da dodate kontakt u omiljene.
- Dodirnite  ponovo da uklonite kontakt iz omiljenih.



Brisanje kontakta

Na ekranu sa listom kontakata:

- Dodirnite i zadržite kontakt koji želite da obrišete, a onda dodirnite  i **Obriši** da biste obrisali.
- Označite kvadratić svih kontakata, a onda dodirnite  i **Obriši** da biste obrisali sve kontakte.



Na ekranu sa detaljima kontakata:

- Dodirnite  a potom izaberite **Izbriši**. Izaberite **Izbriši** kada se od vas zatraži da potvrdite.



Kontakt koji ste izbrisali će se takođe izbrisati iz drugih aplikacija na telefonu ili internetu sljedeći put kada sinhronizujete svoj telefon.

Dijeljenje kontakta

Možete da podijelite pojedinačni kontakt sa drugima slanjem vCard kontakta putem Poruka, E-pošte i Bluetoothom. Izaberite kontakt koji želite da podijelite, dodirnite  i potom izaberite .

Dostupne opcije

Iz liste kontakata možete da izvršite dodatna podešavanja dodirom na **Popravi i upravljaj**.

Popravi i upravljaj


Uvoz/Izvoz

Uvezite ili izvezite kontakte između telefona, SIM kartice, microSD kartice ili memorije telefona.


Podešavanja:

- Vaše informacije Dodirnite da podesite svoj profil.
- Nalozi Dodirnite da dodate nalog i konfigurirate odgovarajuće informacije.
- Poredaj po Dodirnite da poredate listu po imenu ili prezimenu.
- Format imena Dodirnite da izaberete da li će se prvo prikazati ime ili prezime.
- Tema Dodirnite da promijenite u svijetlu ili tamnu temu.
- Podrazmijevani nalog za nove kontakte Dodirnite da izaberete podrazmijevano mjesto za čuvanje novog kontakta.
- Fonetsko ime Dodirnite da izaberete da se prikaže ili sakrije fonetsko ime.
- Blokirani brojevi Ovdje dodajte brojeve tako da od njih ne primete pozive ili tekstualne poruke.



4.3 Poruke

 
Koristite aplikaciju za poruke  da šaljete i primete tekstualne (SMS) ili multimedijalne (MMS) poruke.

Pisanje poruka

Na ekranu sa listom poruka dodirnite  da napišete tekstualne/multimedijalne poruke.

Slanje tekstualnih poruka

- Unesite ime ili broj telefona primaoca u polje **Za** ili dodirnite  da dodate primaoca.
- Dodirnite polje **Tekstualna poruka** da unesete tekst poruke.
- Dodirnite i zadržite  da pristupite emotikonima.

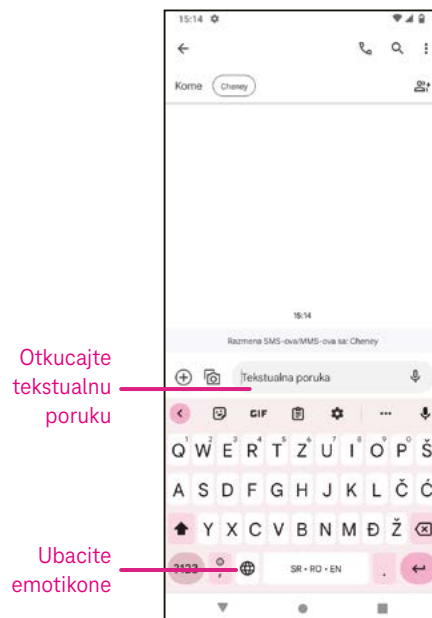

- Kada ste završili, dodirnite ► da pošaljete tekstualnu poruku.

SMS poruka duža od 150 karaktera naplaćuje se kao više SMS poruka. Brojač se nalazi sa desne strane polja za tekst da vas podsjeti koliko karaktera može da se unese u jednoj poruci.



Posebna slova (sa dijakritičkim znakovima) takođe povećavaju veličinu SMS poruke te se primaocu možda pošalje više SMS poruka.

Slanje multimedijalnih poruka

MMS vam omogućava da pošaljete video snimke, fotografije, audio zapise i vCard na druge kompatibilne mobilne telefone i adrese e-pošte.

- Unesite broj telefona primaoca u polje Za.
- Dodirnite polje Tekstualna poruka da unesete tekst poruke.
- Dodirnite ⊕ da ubacite emotikon, svoju lokaciju, kontakt ili dokument; Dodirnite 📷 da izaberete fotografiju ili video.
- Kada ste završili, dodirnite ► da pošaljete multimedijalnu poruku.

Upravljanje porukama

Kada primite poruku, 📧 će se pojaviti na Statusnoj traci kao obavještenje. Povucite nadole Statusnu traku da otvorite Panel sa obavještenjima, dodirnite novu poruku da je otvorite i pročitate. Takođe možete da otvorite aplikaciju za poruke i dodirnete poruku da je otvorite. Poruke se prikazuju u vidu razgovora.

Dodirnite poruku da otvorite ekran za sastavljanje poruka:

 
- Dodirnite 📞 da pozovete taj broj.
- Dodirnite ⋮ da sačuvate taj broj u kontakte ili pogledate detalje o kontaktu ako je taj broj već sačuvan.
- Da odgovorite na poruku, unesite tekst. Kada ste završili, dodirnite ►.
- Ako poruku dodirnete i zadržite, biće dostupne sljedeće opcije: 📄 kopiraj, 🗑️ izbriši, 📤 podijeli, ➦ prosljedi, 👁️ pogledaj detalje.

4.4 Gmail

Podešavanje Gmail-a





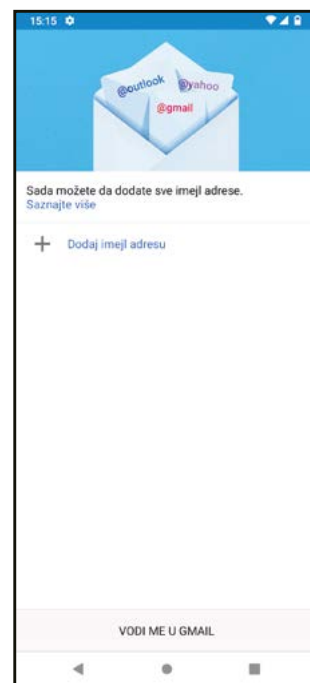


Da podesite svoj nalog za e-poštu, prevucite nagore na početnom ekranu i potom izaberite Gmail

- Izaberite + da dodate adresu e-pošte.
- Postupak za podešavanje e-pošte će vas voditi kroz korake da podesite svoj nalog za e-poštu.
- Izaberite vrstu naloga za e-poštu koji imate i unesite adresu e-pošte i lozinku za nalog koji želite da podesite.
- Ako vaš mobilni operater u uređaju ne omogućava nalog koji ste unijeli, dodirnite **Drugo** i unesite adresu e-pošte, dodirnite **SLJEDEĆE** da izaberete vrstu naloga i unesete lozinku za svoju e-poštu, potom tačno unesite server i port u interfejsu Podešavanja dolaznog servera i u interfejsu Podešavanja odlaznog servera. Dodirnite **Završi** da dovršite podešavanje.



- Da dodate još jednu nalog za e-poštu, kliknite + **Dodaj adresu e-pošte**. Izaberite Drugo iz opcija za podešavanje e-pošte. Ili možete da dodirnete ime naloga u gornjem desnom uglu i izaberete **Dodaj još jedan nalog** da primijenite ovu funkciju.

Slanje e-pošte

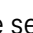- Dodirnite  na ekranu Prijemno sanduče.
- Unesite adresu(e) e-pošte primaoca(laca) u polje **Za**.
- Ako je potrebno, dodirnite  > **Cc/Bcc** da poruci dodate kopiju ili skrivenu kopiju.
- Unesite naslov i sadržaj poruke.
- Dodirnite  da dodate prilog.
- Ako ne želite odmah da pošaljete e-poštu možete da dodirnete  i **Sačuvaj nacrt** ili dodirnite dugme **Nazad** da sačuvate kopiju.
- Dodirnite  da pošaljete.
- Ako ne želite da pošaljete ili sačuvate e-poštu, možete da dodirnete  i da onda izaberete **Odbaci**.
- Da dodate potpis koji će se nalaziti u svim vašim porukama e-pošte, dodirnite  i izaberite **Potpis**, a onda izaberite nalog za koji želite da kreirate ili izmijenite potpis, dodirnite **Mobilni potpis** da biste uredili.

Napomena: Ako vidite grešku "pogrešna lozinka" pri podešavanju Gmail naloga u aplikaciji Gmail, razmotrite sljedeće opcije:

Opcija 1: Generišite lozinku za aplikaciju

Lozinka za aplikaciju je pristupni kod od 16 cifara kojom se aplikaciji ili uređaju daje dozvola da pristupi vašem Google nalogu. Ako koristite verifikaciju u 2 koraka i vidite grešku "pogrešna lozinka" kada pokušate da pristupite svom Google nalogu, lozinka za aplikaciju bi mogla da riješi problem.

Da generišete lozinku za aplikaciju

- Posjetite stranicu za lozinku za vašu aplikaciju <https://myaccount.google.com/security/signinoptions/two-step-verification>. Može se od vas zatražiti da se prijavite na svoj Google nalog.
- U dnu kliknite na **Izaberi aplikaciju** i izaberite aplikaciju koju koristite.
- Kliknite na **Izaberi uređaj** i izaberite uređaj koji koristite.
- Izaberite **Generiši**.
- Slijedite uputstva da unesete lozinku za aplikaciju (kod od 16 karaktera u žutom polju) na vašem uređaju.
- Izaberite **ZAVRŠI**.
- Kada ste završili, više nećete ponovo vidjeti kod za lozinku za aplikaciju. Međutim, vidjećete listu aplikacija i uređaja za koje ste kreirali lozinke za aplikaciju.

Ako se generisanjem lozinke za aplikaciju ne riješi problem, nastavite na Opciju 2 ili Opciju 3.

Opcija 2: Promijenite svoja podešavanja da dozvolite manje bezbjedne aplikacije

- Idite na odjeljak "Manje bezbjedne aplikacije" <https://www.google.com/settings/security/lesssecureapps> u Moj nalog.
- Pored "Pristup za manje bezbjedne aplikacije" izaberite **Uključi**.
- Sada svoju e-poštu možete da podesite koristeći korisničko ime i lozinku. Ako i dalje vidite grešku "pogrešna lozinka", nastavite na Opciju 3.


Opcija 3: Pistupite Gmail-u putem internet pregledača

Ako ne želite da promijenite svoja podešavanja bezbjednosti, slijedite ove korake da pristupite svom Gmail-u:

- Na početnoj strani pritisnite dugme **U redu** i pritisnite na **Pregledač**. Unesite <https://www.google.com/gmail/> u traku za URL u pregledaču.
- Unesite svoje ime i lozinku da se prijavite.

4.5 Chrome

Uživajte u surfovanju internetom koristeći pregledač Chrome.


Da biste pristupili ovoj funkciji, dodirnite Chrome  na Početnom ekranu.

 
4.6 Kalendar

Kako biste vodili računa o važnim sastancima, okupljanjima i drugom, možete da koristite Kalendar.

Da pristupite ovoj funkciji, prevucite nagore na Početnom ekranu, a onda dodirnite **Kalendar**.

Pregledanje kalendara

Kalendar se može prikazati po prikazima **Raspored**, **Dan**, **3 dana**, **Sedmica** ili **Mjesec**. Dodirnite  i izaberite željeni prikaz kalendara.

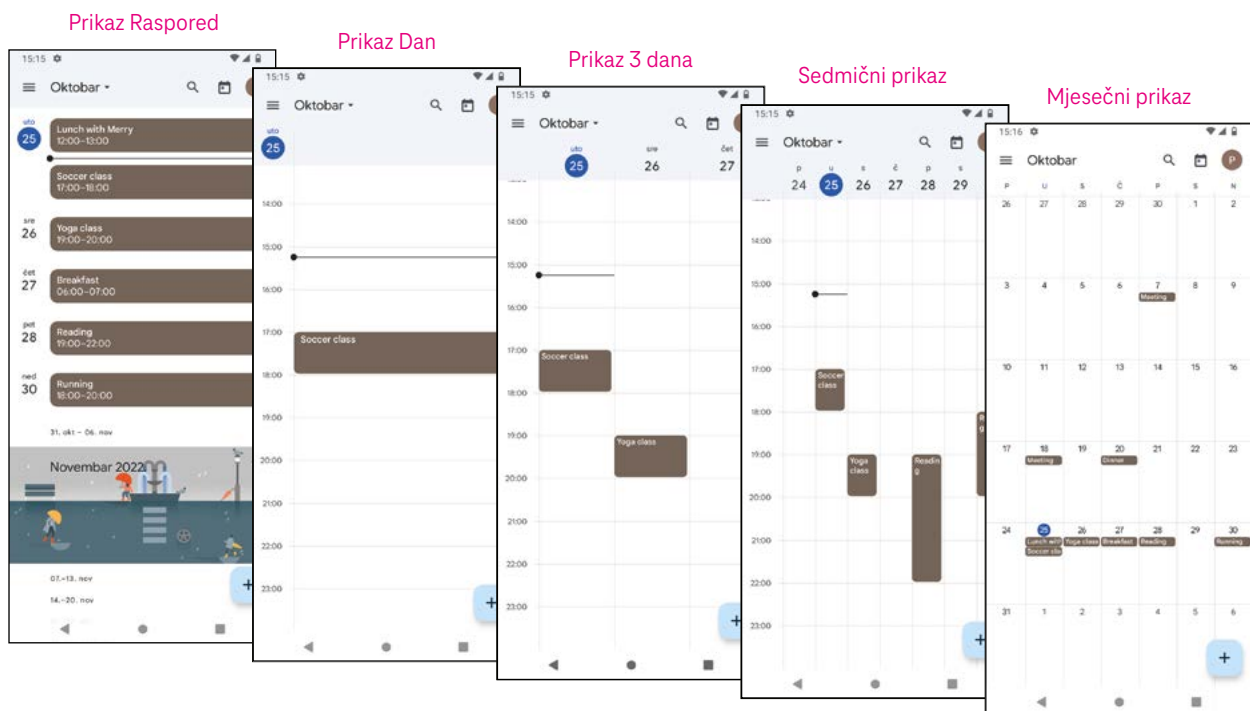



Kreiranje novog događaja

Nove događaje možete da dodate u bilo kom prikazu Kalendara.

- Dodirnite **+**.
- Popunite sve neophodne informacije za taj novi događaj. Ako je u pitanju cjelodnevni događaj, možete da uključite **Cjeli dan**.
- Pozovite goste na taj događaj. Unesite adrese e-pošte odvojene zaptetama gostiju koje želite da pozovete na događaj. Gosti će dobiti pozivnicu iz Kalendara i E-pošte.
- Kada ste završili, dodirnite **Sačuva** gore na ekranu.

Da brzo kreirate događaj u prikazima Dan, 3 dana ili Sedmica, dodirnite prazno mjesto da izaberete ciljano područje koje će onda promijeniti u , a onda dodirnite ikonu da kreirate novi događaj.

Brisanje ili uređivanje događaja

- Da izbrisete ili uredite događaj, dodirnite događaj da uđete u ekran sa pojedinostima, a onda dodirnite  da uredite događaj.
- Dodirnite  i **Izbriši** da uklonite događaj.

Podsjetnik za događaje

Ako je za događaj podešen podsjetnik, predstojeći događaj će se pojaviti na početnom ekranu.



- Dodirnite naziv događaja da vidite listu obavještenja od Kalendara.

4.7 Kamera

 
Pristupanje kameri

Na početnom ekranu dodirnite **Kamera**.




Snimanje fotografije

- Kadrirajte objekat ili pejzaž u tražilu, a onda dodirnite ekran da fokusirate ako je potrebno.
- Dodirnite  da snimate fotografiju koja će se automatski sačuvati.
- Da snimate uzastopne fotografije, dodirnite i zadržite .

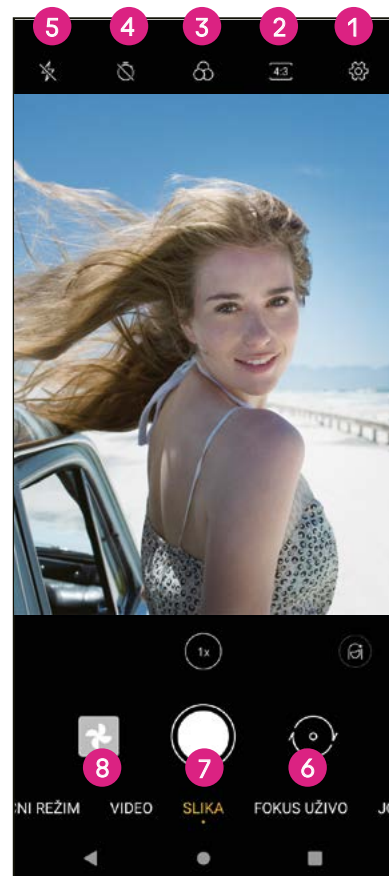




- 1 Pristupite više opcija
- 2 Izaberite veličinu snimka
- 3 Izaberite filter
- 4 Podesite sekunde odbrojavanja
- 5 Izaberite režim blica da izaberete režim blica: Isključen, Auto, Uključen ili Uvijek
- 6 Prebacujte sa prednje na kameru sa zadnje strane
- 7 Snimate fotografiju
- 8 Pregledajte fotografije ili video snimke koje ste snimili



Snimanje video snimka

- Dodirnite VIDEO da uđete u Video režim.
- Dodirnite  u sredini ekrana da počnete video snimanje.
- Možete takođe da dodirnete  da snimate fotografiju tokom video snimanja.
- Dodirnite  da zaustavite snimanje. Video snima će se automatski sačuvati.

Pregledanje, Uređivanje i Dijeljenje

- Dodirnite  a onda Gmail, Bluetooth, ili Poruka da podijelite fotografiju ili video snimak.
- Dodirnite  da uredite.
- Dodirnite  da potražite ono što vidite pomoću aplikacije Google Lens.
- Dodirnite  da izbrišete.
- Dodirnite  da se vratite na režim Kamere.




4.8 Fotografije


Aplikacija Fotografije služi kao media plejer pomoću kog pregledate fotografije i puštate video snimke. Fotografije i video snimci se prikazuju po momentima i albumima u aplikaciji Fotografije.

- Direktno dodirnite fotografiju/video snimak da pregledate ili pustite.
- Prevucite lijevo/desno da pregledate prethodnu ili sljedeću fotografiju/video snimak.

 
 
Rad sa fotografijama

Sa fotografijama možete da radite rotirajući ili opsjecajući ih, dijeleći ih sa prijateljima, postavljnjem za fotografiju kontakta ili kao pozadinu, itd.

- Pronađite fotografiju na kojoj želite da radite i dodirnite fotografiju u pregledu preko cijelog ekrana.
- Dodirnite  da podijelite fotografiju ili dodirnite  da fotografiju izbrišete. Dodirnite  i izaberite **Koristi kao** da fotografiju postavite kao fotografiju kontakta ili kao pozadinu.

Dodirnite  da uđete u ekran za uređivanje.

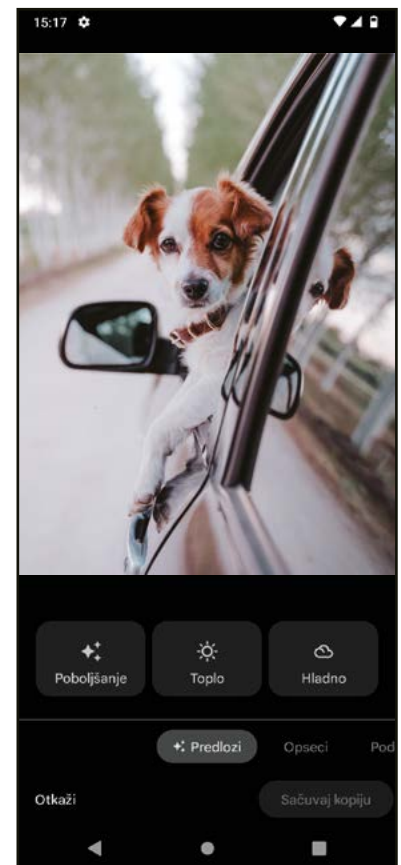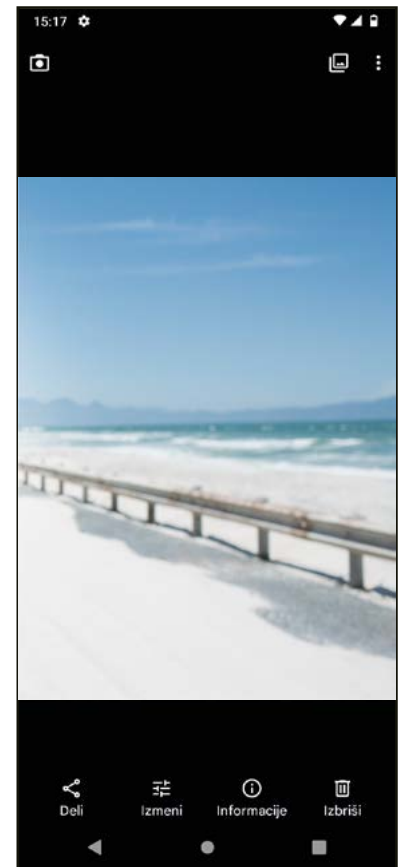

Prijedlozi	Izaberite Poboljšaj, Toplo ili Hladno da podesite boju fotografije.
Opsijeci	Izaberite između Auto, Opsijeci, Rotiraj, Pregledaj i Poništi.
Podesi	Upravljaj osvjetljenošću, kontrastom i još toga.
Filteri	Izaberite između različitih kao što su Vivid, West, Palma i još toga.
Više	Oznake: personalizujte svoju fotografiju crtanjem po njoj ili dodavanjem riječi na nju.






4.9 Sat





Da pristupite Satu, prevucite nagore na Početnom ekranu, a onda dodirnite **Sat**.

Podešavanje vremena u svijetu






- Dodirnite  na ekranu sata.
- Dodirnite  da dodate vremensku zonu.

Podešavanje alarma






- Dodirnite  na ekranu sata.
- Uključite  da omogućite postojeći alarm, ili dodirnite  da dodate novi alarm. Pojaviće se sljedeće opcije:

-  **Dodaj oznaku** Dodirnite da odredite naziv alarma.
-  **Zvuk zvona** Dodirnite da izaberete zvuk zvona za alarm.
-  **Vibriraj** Označite kvadratić da aktivirate vibraciju.
- Otkazi** Dodirnite da isključite alarm.
-  **Izbriši** Dodirnite da izbrišete alarm.

Podešavanje tajmera

- Dodirnite  na ekranu sata.
- Unesite vrijeme po redoslijedu sekunde, minute, sati.
- Dodirnite  da započnete Odbrojavanje.
- Dodirnite  da dodate još jedan tajmer u panelu.
- Dodirnite  da završite Odbrojavanje.
- Dodirnite  da izbrišete odbrojavanje trenutnog tajmera.

Podešavanje štoperice

- Dodirnite  na ekranu sata.
- Dodirnite  da započnete tajmer.
- Dodirnite  da se prikaže lista rekorda prema ažuriranom vremenu.
- Dodirnite  da zaustavite ukupno i vremena po krugu.
- Dodirnite  da započnete novi tajmer.

Vrijeme spavanja

Odredite vrijeme spavanja kako biste utišali svoj telefon i izabrali da slušate umirujuće zvukove. Odredite vrijeme buđenja da ponovo primete obavještenja.

5 Google aplikacije

Google aplikacije su unaprijed instalirane na vašem telefonu radi unapređenja efikasnosti rada i da pruže prijatno korisničko iskustvo. Ovo uputstvo ukratko predstavlja te aplikacije. Za detaljne karakteristike i korisničke priručnike, pogledajte odgovarajuće internet stranice ili uvod dat u tim aplikacijama. Registrujte se pomoću Google naloga da uživate u punoj funkcionalnosti.



Google

Vaše omiljene stranice, istorija pregledanja i podešavanja na svim uređajima na kojima je pregledač instaliran mogu se sinhronizovati preko vašeg Google naloga.



Gmail

Kao servis preko interneta za e-poštu kompanije Google, Gmail je konfigurisan kada prvi put podesite svoj telefon. Pomoću ove aplikacije možete da šaljete i primete e-poštu, upravljate e-porukama i oznaka, da ih arhivirate i još toga. E-pošta se može automatski sinhronizovati sa vašim Gmail nalogom.



Mape

Google Mape nude satelitski prikaz, ulične mape, panoramski prikaz ulica od 360°, uslove u saobraćaju u realnom vremenu i planiranje putanje kada putujete pješke, automobilom ili javnim prevozom. Koristeći ovu aplikaciju možete da pronađete svoju lokaciju, potražite neko mjesto i dobijete prijedloge isplaniranih putanja za vaša putovanja.



YouTube

YouTube je internet aplikacija za dijeljenje video snimaka na kojoj korisnici mogu da postavljaju, pregledaju i podijele video snimke. Dostupni sadržaj podrazumijeva video klipove, TV klipove, muzičke spotove i drugi sadržaj kao što su video blogovi, kratki originalni video snimci i obrazovni video snimci. Aplikacija podržava funkciju striminga koja vam omogućava da počnete da gledate video snimak skoro u isto vrijeme kad se oni počnu preuzimati sa interneta.



Disk

Servis za čuvanje datoteka i sinhronizaciju koji je kreirao Google i koji korisnicima omogućava da čuvaju datoteke u oblaku, da dijele i uređuju datoteke. Datoteke na Disku se bezbjedno čuvaju i može im se pristupiti sa bilo kog uređaja prijavljivanjem na Google nalog. Datoteke i folderi se mogu privatno dijeliti sa drugim korisnicima Google naloga.

U Play prodavnici potražite aplikaciju koja vam je potrebna, preuzmite je i onda slijedite uputstva za instaliranje kako biste instalirali aplikaciju. Možete takođe da je deinstalirate aplikaciju, ažurirate je i upravljate svojim preuzimanjima.



Duo

Ovo je mobilna aplikacija za video razgovore koja korisnicima omogućava da upute video pozive ljudima iz svoje liste kontakata nakon što su njihovi brojevi telefona potvrđeni.



Fotografije

Google Fotografije čuva i pravi rezervnu kopiju vaših fotografija i video snimaka. Takođe automatski analizira fotografije i organizuje ih po grupama tako da možete lako da pronađete fotografije koje su vam potrebne.



YT Music

YT Music Downloader je program kompanije Windows koji pojednostavljuje preuzimanje video snimaka i muzike sa YouTube-a. YT Music Downloader vam omogućava da preuzmete video snimke i/ili audio snimke sa YouTube-a. Program je usmjeren na muziku tako da možete da sačuvate muzičke spotove (ili bilo koje video snimke) ili konvertujete te video snimke samo u muzički zapis i aplikacija će ih automatski sačuvati u MP3 formatu. Kada mu date odgovarajući YouTube link, program vrlo brzo konvertuje i čuva te stavke kao datoteku i kada završi imate pristup toj muzici bez povezivanja na internet kao i na bilo kojem drugom uređaju na koji te datoteke prebacite.

 
6 Još aplikacija.....

Prevucite nagore sa dna ekrana da biste pristupili tim drugim aplikacijama.



Play prodavnica

Služi kao zvanična prodavnica aplikacija za operativni sistem Android i omogućava korisnicima da pregledaju i preuzimaju aplikacije i igre. Aplikacije su ili besplatne ili se naplaćuju.

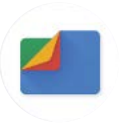

Files

Aplikacija Files prikazuje sve podatke sačuvane na telefonu, uključujući i spoljašnju SD karticu i internu memoriju, kao što su aplikacije, medijske datoteke preuzete sa Google Play prodavnice, YouTube-a ili drugih mjesta; video zapise, fotografije ili audio snimke koje ste snimili; ostale podatke poslate preko Bluetooth-a, USB kabelom, itd.

7 Bezbjednost

7.1 Zaključavanje ekrana

Na Početnom ekranu pristupite Podešavanjima u kontrolnom centru ili iz spiska pretrage aplikacija. Idite na Bezbjednost > Zaključavanje ekrana

Zaključavanje ekrana vam omogućava da obezbijedite svoj telefon da ga ne koriste drugi bez vaše dozvole. Uključite sljedeće bezbjednosne opcije: Šablon, PIN ili lozinka. Ko god da uključi vaš telefon, tražiće mu se da otključa ekran kako bi pristupio uređaju. Vaš uređaj može da otključa bilo ko ako izaberete Nijedan ili Prevlačenje.

7.2 Zaključavanje SIM kartice

PIN SIM kartice sprečava pristup mobilnim mrežama. Kada je uključeno, svaki uređaj u kom postoji SIM kartica će tražiti PIN nakon ponovnog pokretanja. SIM PIN nije isto što i šifra za zaključavanje kojom se uređaj otključava.

7.3 Podešavanja zaključanog ekrana

Prilagodite šta se prikazuje na vašem zaključanom ekranu.

7.4 Senzor otiska prsta

Koristite otisak svog prsta da otključate ekran.

Uđite u Podešavanja > Bezbjednost > Otisak prsta da uključite ovu funkciju.

Napomena: morate da podesite šablon, PIN ili lozinku prije korišćenja senzora otiska prsta.

7.5 Otključavanje prepoznavanjem lica

Otključavanje prepoznavanjem lica vam omogućava da otključate svoj uređaj pomoću podataka o vašem licu. Podesite ih prateći korake na ekranu. Vodite računa da ste licem okrenuti prema ekranu kada koristite prepoznavanje lica.

Napomena: morate da podesite šablon, PIN ili lozinku prije korišćenja otključavanja prepoznavanjem lica.

7.6 Pametno zaključavanje

Po podrazumijevanim podešavanjima ova funkcija nije uključena; morate da podesite zaključavanje ekrana da biste je uključili. Ako je pametno zaključavanje uključeno, vaš uređaj ostaje zaključan kada se bezbjedno nalazi kod vas.

7.7 Enkripcija i akreditivi

Pod Napredno, dodirnite da vidite status enkripcije vašeg telefona i stavke o akreditivima. Možete da izmijenite i izbrinete sve sačuvane akreditive.

8 Nalog.....

8.1 Informacije o nalogu

Informacijama o nalogu možete takođe da pristupite preko svog telefona.

- Idite na Podešavanja > O telefonu

8.2 Ažuriranje softvera

Da pristupite Ažuriranju softvera, slijedite korake ispod:

- Povežite vaš uređaj na Wi-Fi mrežu i vodite računa da je veza za prenos podataka jaka.
- Vodite računa da je baterija u potpunosti napunjena prije nego što počnete sa ažuriranjem softvera. Trenutni nivo baterije vašeg uređaja možete da pronađete na vašem uređaju pod Podešavanja > Baterija.
- Idite na Podešavanja > Sistem > Ažuriranje sistema.
- Ako želite da ažurirate sistem, dodirnite **Provjeri ima li ažuriranja** i kada se to završi, na vašem telefonu će biti najnovija verzija softvera.

9 Bezbjednosne i regulatorne informacije

Pročitajte ovo poglavlje prije korištenja svog mobilnog uređaja.

Bezbjednost i upotreba

Proizvođač se odriče bilo kakve odgovornosti za štetu koja je mogla nastati kao posljedica nepravilne upotrebe ili upotrebe suprotne uputstvima iz ovog priručnika. Korišćenje povezanih uređaja predmet je Uslova i odredbi kompanije T-Mobile.

Bezbjednost u saobraćaju

Uvijek se pridržavajte lokalnih zakona i propisa kojima se uređuje korišćenje bežičnih mobilnih uređaja i njihovih dodataka u područjima gdje se vozite. Korišćenje mobilnog uređaja tokom vožnje može da bude zabranjeno ili ograničeno u pojedinom područjima.

Uslovi korišćenja

Ne zaboravite da se pridržavate pravila lokalnih organa za korišćenje mobilnih uređaja u letilicama.

Upozorenja u vezi sa rukovanjem

Svoj mobilni uređaj koristite samo u skladu sa lokalnim zakonima i propisima i pridržavajte se svih obavještenja istaknutih na javnim mjestima.

Pročitajte i slijedite uputstva proizvođača vašeg ugradnog medicinskog uređaja. Ako imate bilo kakvih pitanja u vezi sa korišćenjem svog mobilnog uređaja zajedno sa ugradnim medicinskim uređajima, obratite se svom ljekaru.

- Preporučuje se odgovarajući nadzor kada djeca koriste vaš mobilni uređaj.
- Ne pokušavajte da rastavite svoj mobilni uređaj. Garancije prestaje da važi ako rastavite svoj mobilni uređaj.
- Uvijek pažljivo rukujte svojim mobilnim uređajem i držite ga na čistom mjestu bez prašine.
- Ne dopustite da vaš mobilni uređaj bude izložen nepovoljnim vremenskim ili uslovima u životnoj sredini (vlaga, vlažan vazduh, kiša, prodor tečnosti, prašine, morskog vazduha, itd.). Opseg radne temperature koju preporučuje proizvođač je od 0°C (32°F) do +40°C (104°F)
- **Napomena: Maksimalna vrijednost zavisi od stanja uređaja, materijala u njegovoj okolini i od boje i teksture kućišta.**
- Na temperaturi preko 40°C (104°F) čitljivost na ekranu mobilnog uređaja može da bude smanjena, ali to je privremeno i nije ništa ozbiljno.
- Ne otvarajte i ne pokušavajte da ofarbate ili popravite svoj mobilni uređaj.
- Nemojte da ga ispuštate, bacate ili pokušate da savijete svoj mobilni uređaj.
- Mobilni uređaj nemojte da koristite ako je keran oštećen, napukao ili je polomljen kako biste izbjegli povredu.
- Koristite samo baterije, punjače i dodatnu opremu koje preporučuje proizvođač uređaja i njegova povezana lica i koji su kompatibilni sa vašim modelom mobilnog uređaja. Proizvođač uređaja i njegova povezana lica odriču se odgovornosti za štetu koja je nastala korišćenjem drugih punjača ili baterija.

Provjerite lokalne zakone i propise koji su na snazi u mjestu gdje živite kako biste saznali koji je najbolji način za odlaganje vašeg mobilnog uređaja.



ZAŠTITIE SVOJ SLUH

Kako biste spriječili eventualno oštećenje sluha, ne slušajte na visokim nivoima jačine zvuka u dužem vremenskom periodu. Budite oprezni dok držite svoj uređaj blizu uva kada koristite zvučnik.

Privatnost

Vodite računa morate da poštujete zakone i propise svoje države ili drugih države(a) u kojoj ćete koristiti svoj mobilni uređaj za fotografisanje i snimanje zvukova svojim mobilnim uređajem. U skladu sa tim zakonima i propisima, može da bude strogo zabranjeno da snimate fotografije i/ii da snimate glasove drugih ljudi ili bilo koje druge lične atribute i da ih puštate i distribuišete, jer to može da se smatra narušavanjem privatnosti.

Isključiva je odgovornost korisnika da obezbijedi prethodno odobrenje, ako je potrebno, za snimanje privatnih ili povjerljivih razgovora ili fotografisanje drugih osoba; proizvođač, prodavac ili dobavljač vašeg mobilnog uređaja (uključujući operatera) se odriču svake odgovornosti koja može nastati zbog nepravilne upotrebe mobilnog uređaja.

Pravne informacije

Kako bismo vam omogućili bolji pristup ovim važnim informacijama, ovim materijalima se može pristupiti iz menija Podešavanja na vašem telefonu. Pogledajte ove materijale prije korištenja svog mobilnog uređaja. Kako biste pristupili ovim materijalima na vašem mobilnom uređaju, prevucite nagore na početnom ekranu i dodirnite Podešavanja > O telefonu > Pravne informacije i izaberite temu.

Regulatorni podaci (e-oznaka)

Vaš mobilni uređaj koristi elektronsku oznaku (e-oznaku) koja sadrži regulatorne informacije o vašem uređaju. Da biste vidjeli regulatorne informacije za ovaj uređaj na uređaju, prevucite nagore na početnom ekrane, a zatim dodirnite Podešavanja > O telefonu > Regulatorne oznake.



Ovaj pametni telefon je testiran i klasifikovan za upotrebu sa slušnim aparatima za neke od bežičnih tehnologija koje pametni telefon koristi. Međutim, u ovom pametnom telefonu se mogu koristiti i druge bežične tehnologije koje nisu testirane za upotrebu sa slušnim aparatima. Važno je da temeljno i na različitim lokacijama isprobate različite funkcije svog pametnog telefona da biste utvrdili da li čujete bilo kakvu ometajuću buku kada koristite ovaj pametni telefon sa slušnim aparatom ili kohlearnim implantom. Konsultujte se sa svojim provajderom bežičnih usluga o njegovim pravilima za vraćanje i zamjene, kao i za informacije o kompatibilnosti slušnih aparata.

Na vašem uređaju postoji radio odašiljač i prijemnik. Dizajniran je i proizveden tako da ne prekoračuje ograničenja za izlaganje radio frekvenciji (RF) koje je odredio CONFORMITE EUROPEENNE (CE). Ograničenja za izlaganje RF koje je odredio CE za bežične mobilne uređaje koriste mjernu jedinicu koja se zove specifična stopa apsorpcije (SAR), koja predstavlja mjeru za količinu RF energije koju apsorbuje tijelo tokom korištenja mobilnog uređaja. CE ograničenje za javno izlaganje mobilnim telefonima je nivo SAR od 2,0 vata po kilogramu (2,0W/kg). A najveća SAR vrijednost za ovaj uređaj kada je testiran blizu glave bila je 0,99 W/kg*, kada je testiran blizu tijela je 1,49 W/kg*

Ovaj uređaj ispunjava CE ograničenja za izlaganje radijaciji koja su određena za nekontrolisanu okolinu. Kako bi se obezbijedilo poštovanje smjernica o izlaganju RF, uređaj se mora koristiti najmanje 5 mm od tijela.

Da biste vidjeli dodatne SAR informacije na svom telefonu, prevucite nagore na početnom ekranu, potom dodirnite Podešavanja > O telefonu > Pravne informacije > Izlaganje RF.

Baterija i dodatna oprema

Preduzmite sljedeće mjere predostrožnosti za korištenje baterije:

- Ne pokušavajte otvoriti bateriju (zbog rizika od otrovnih isparenja i opekotina).
- Ne rastavljajte ili izazivajte kratak spoj u bateriji.
- Nemojte spaljivati ili odlagati iskorištenu bateriju u kućno smeće niti je čuvati na temperaturama iznad 60°.
- Nemojte rastavljati ili otvarati, drobiti, savijati ili deformisati, bušiti ili sjeći.
- Nemojte modifikovati ili prepravljati, pokušavati da ubacite strane predmete u bateriju, potapati je ili je izlagati vodi ili drugim tečnostima, izlagati vatri, eksploziji ili drugim opasnostima.

Proizvodi na kojima postoji simbol ispod moraju se odnijeti na mjesta za prikupljanje po isteku njihovog radnog vijeka:



- Opštinski centri za odlaganje otpada sa posebnim kantama za ovu vrstu opreme.
- Kante za prikupljanje na mjestima prodaje.

Da saznate na koji način možete da reciklirate svoj mobilni uređaj, posjetite internet stranicu CTIA na adresi www.ctia.org/news/how-to-recycle-your-mobile-device

OPREZ: AKO BATERIJU ZAMIJENITE POGREŠNOM VRSTOM, UREĐAJ MOŽE DA EKSPLODIRA. ISKORIŠTENE BATERIJE ODLOŽITE U SKLADU SA UPUTSTVIMA.



Informacije o recikliranju

Pozovite korisničku podršku za recikliranje na broj telefona 1-855-368-0829 radi uputstava o recikliranju ili jednostavno spomenite ovo: U Sjedinjenom Državama o CTIA programu recikliranja možete više da saznate na adresi <http://www.recyclewirelessphones.com>.

Punjači

Kućni AC punjači/Putni punjači rade u temperaturnom opsegu: 0°C (32°F) do 45°C (113°F).

Zbog različitih električnih specifikacija koje se primjenjuju, punjač koji ste kupili u jednoj državi možda neće raditi u drugoj državi. Trebalo bi da ih koristite samo u ovu svrhu.

Ovim uređajem bi trebalo rukovati samo sa preporučenim punjačem(punjačima).

Putni punjač: Ulaz: 100-240V~ 50/60Hz 0,5A

Izlaz: 5V 3A

Licence



Logotip microSD zaštitni je znak SD-3C, LLC.



Oznake u vidu riječi i logotipa The Bluetooth® vlasništvo su kompanije Bluetooth SIG, Inc. i svako korištenje tih oznaka od strane proizvođača uređaja i njegovih povezanih lica je pod licencom. Ostali zaštitni znaci i trgovački nazivi pripadaju njihovim vlasnicima.



Logotip Wi-Fi je sertifikaciona oznaka Wi-Fi Alijanse.

10 Specifikacije

	T Phone
Ekran	6,52" HD+ w/2,5D staklo
Kamere	Sa zadnje strane: 50MP glavna + 2MP dubinska + 2MP makro + LED blic Sa prednje strane: 5MP 2K @ 30 fps video
Memorija	4GB RAM / 64GB ROM / do 2TB Micro SD kartica
Baterija	4500 mAh
Punjenje	USB-C, 15W
5GHz	DA
Procesor	MediaTek Dimensity 700 / Octa Core - 2* 2,2GHz + 6*2GHz
Bezbednost	Otključavanje licem, senzor otiska prsta
Zaštita od vode	IP52 / IPX2
NFC/Bluetooth	Ne / 5.1
Slušalice	podržava 3,5 mm ulaz za slušalice
Operativni sistem	Android 12 + OS MR nadogradnja
Dimenzije	166,6*76,42*8,76 mm
Težina	195 g

Režim	Raspon	Izlazna snaga
GSM	B2	29,5dBm
	B3	29,5dBm
	B5	32,5dBm
	B8	32,5dBm
UTMS	B1	23,0dBm
	B2	23,0dBm
	B5	23,0dBm
	B8	23,0dBm
LTE	B1	23,0dBm
	B2	23,0dBm
	B3	23,0dBm
	B4	23,0dBm
	B5	23,0dBm
	B7	23,0dBm
	B8	23,0dBm
	B20	23,0dBm
	B28	23,0dBm
	B38	26,0dBm
NR	N1	23,0dBm
	N3	23,0dBm
	N7	23,0dBm
	N28	23,0dBm
	N38	23,0dBm
	N78	26,0dBm
WIFI	2,4GHz	20,5dBm
	5GHz	20,5dBm
Bluetooth	2,4GHZ	9dBm

11 Rješavanje problema.....

Razmotrite neke od ovih uobičajenih problema i rješenja za njih.

Moj telefon ne prima dolazne pozive

- Provjerite da li je telefon uključen i spojite se na mrežu.
- Provjerite da li je mreža preopterećena ili je nedostupna.
- Provjeriti status vašeg paketa usluga.
- Provjerite da li ste uključili prosljeđivanje dolaznih poziva.
- Provjerite da li ste zabranili određene pozive.
- Provjerite da li je vaš telefon u režimu rada u avionu.

Prilikom primanja poziva ne prikazuje se ime/broj pozivaoca na ekranu

- Ako pozivalac nije u vašoj listi kontakata, imate opciju da mu dodijelite ime
- Pozivalac je možda sakrio svoje ime ili broj.

Ne mogu da pronađem svoje kontakte

- Provjerite da li je vaša SIM kartica polomljena.
- Provjerite da li je vaša SIM kartica pravilno ubačena.
- Uvezite u telefon sve kontakte sačuvane na SIM kartici.

Kvalitet zvuka tokom poziva je loš

- Podeiste jačinu zvuka tokom poziva pritiskom na dugme za pojačavanje/utišavanje zvuka.
- Provjerite jačinu signala mreže. Premjestite se na lokaciju sa jačim signalom.
- Provjerite da li su prijemnik, priključak ili zvučnik na vašem telefonu čisti.

Ne mogu da koristim funkcije opisane u ovom priručniku

- Provjerite da li vaš paket usluga podrazumijeva ovu uslugu.
- Provjerite da li su za ovu funkciju potrebni dodatni uređaji.

Ne mogu da pozovem broj kada ga izaberem iz liste svojih kontakata

- Provjerite jeste li pravilno unijeli broj za taj kontakt.
- Provjerite da li ste izabrali pozivni broj zemlje kada upućujete međunarodne pozive.

Moj telefon ne može da se poveže na mrežu ili je prikazano "Nema mreže"

- Pokušajte da se povežete na mrežu tako što ćete se premjestiti na drugu fizičku lokaciju.
- Uvjerite se da je signal mreže dostupan na mjestu gdje se nalazite.
- Provjerite da li je vaša SIM kartica ispravna.
- Provjerite da li su podešavanja vašeg telefona u režimu rada u avionu.
- Ako ste udaljeni od svoje T-Mobile mreže, možda ćete morati uključiti roming u podešavanjima telefona da biste se povezali na drugu mrežu. Može doći do troškova za roming.

Moj telefon ne može da se poveže na internet

- Provjerite da li je internet usluga Mobilnih podaci dostupna u okviru vaše plana bežičnih usluga.
- Provjerite podešavanja na telefonu. Provjerite da su Mobilni podaci uključeni ili da ste povezani na Wi-Fi.
- Uvjerite se da ste na mjestu gdje imate signal mreže za mobilne podatke ili Wi-Fi vezu sa internetom.
- Pokušajte da se povežete kasnije ili na nekoj drugoj lokaciji.

Neispravna SIM kartica

- Provjerite da li je SIM kartica pravilno ubačena (vidite "Ubacivanje Nano SIM kartice").
- Provjerite da li čip na vašoj SIM kartici oštećen.
- Provjerite da li se usluga povezana sa vašom SIM karticom poklapa sa mrežom na kojoj ste.

Moj telefon ne upućuje odlazne pozive

- Provjerite da li ste pozvali ispravan broj i da ste dodirnuli Pozovi na svom telefonu.
- Za međunarodne pozive, provjerite pozivne brojeve zemlje i područja.
- Provjerite da li je vaš telefon povezan sa mrežom i da mreža nije preopterećena ili nedostupna.
- Provjeriti status vašeg paketa usluga.
- Provjerite da li ste zabranili odlazne pozive.

Moj telefon ne može da se uključi

- Ako telefon ne može da se uključi, puniti ga najmanje 10 minuta kako biste obezbijedili potrebnu minimalnu napunjenost baterije. Potom ga ponovo uključite.

Moj telefon ne reaguje nekoliko minuta

- Ako vaš telefon ne reaguje, isključite svoj telefon tako što ćete pritisnuti i zadržati dugme za uključivanje sve dok se telefon ne isključi i pokrene ponovo.

Moj telefon se sam isključuje

- Ako se vaš telefon sam isključuje, provjerite da li je dugme za uključivanje pritisnuto slučajno.
- Provjerite nivo napunjenosti baterije.
- Ako i dalje nije uspjelo, vratite telefon na fabrička podešavanja pomoću opcija za resetovanje u podešavanjima telefona. Vodite računa da napravite rezervnu kopiju svojih podataka.

Moj telefon ne može da se puni pravilno

- Provjerite da li koristite pravi punjač koji je došao uz telefon.
- Provjerite je li baterija potpuno ispražnjena; ako je baterija bila prazna dugo vremena, može proći oko 10 minuta da se na ekranu prikaže indikator punjenja baterije.
- Provjerite da li se baterija puni pod normalnim uslovima (0°C (32°F) do 45°C (113°F)).

Ne mogu da dodam kontakt

- Provjerite je li lista kontakata na SIM kartici puna; obrišite neke unose ili sačuvajte unose na telefon.

Pozivaoci ne mogu da ostave poruke na mojoj govornoj pošti

- Pozovite svog mrežnog operatera da provjerite dostupnost usluge.
- Podesite svoju govornu poštu tako da vaši pozivaoci mogu da ostave poruku.

Ne mogu da pristupim svojoj govornoj pošti

- Provjerite je li T-Mobile broj za govornu poštu pravilno unesen u "Broj za govornu poštu".
- Pokušajte kasnije ako je mreža zauzeta.

Ne mogu da šaljem niti primam MMS

- Provjerite memoriju telefona jer je možda puna.
- Kontaktirajte korisničku podršku da provjerite dostupnost usluge i podešavanja za MMS.
- Potvrdite sa korisničkom podrškom broj servisnog centra ili MMS profil.
- Servisni centar je možda preopterećen. Pokušajte ponovo kasnije.
- Pokrenite novi niz poruka. Vaš niz poruka je možda dosegao svoj limit.

Zaključan PIN SIM kartice

- Kontaktirajte korisničku podršku kako biste dobili PUK (Personal Unblocking Key) kod.

Ne mogu svoj telefon da povežem sa računarom

- Instalirajte aplikaciju Smart Suite.
- Provjerite da li su USB drajveri pravilno instalirani.
- Otvorite panel sa obavještenjima da provjerite je li uključen Smart Suite Agent.
- Provjerite da li ste označili kvadratić USB debugging.
- Provjerite da li vaš računar ispunjava uslove za instaliranje aplikacije Smart Suite.
- Provjerite da li koristite pravi kabel koji je došao u kutiji.

Ne mogu da preuzimam datoteke

- Provjerite ima li dovoljno memorije na telefonu za preuzimanje.
- Izaberite microSD karticu kao lokaciju za čuvanje preuzetih datoteka.
- Provjeriti status vašeg paketa usluga.

Drugi ne mogu da preopznaju telefon preko Bluetooth-a

- Provjerite je li Bluetooth uključen i da li je vaš telefon vidljiv za druge korisnike.
- Provjerite jesu li ta dva urešaja u dometu za pronalaženje preko Bluetooth-a.

Baterija se prebrzo prazni

- Vodite računa da ste ispoštovali puno vrijeme za punjenje baterije (minimalno 2,3 sata).
- Nakon djelimičnog punjenja, indikator napunjenosti baterije možda neće biti precizan.
- Sačekajte najmanje 10 minuta nakon što se ga isključili sa punjača da dobijete preciznu indikaciju.
- Podesite osvijetljenost ekrana po potrebi.
- Podesite interval za automatsko provjeravanje e-pošte na što je duže moguće.
- Ažurirajte vijesti i informacije o vremenu ručno ili povećajte interval za automatsko provjeravanje.
- Izadite iz aplikacije koje rade u pozadini ako se ne koriste duži vremenski period.
- Isključite Bluetooth, Wi-Fi, ili GPS kada se ne koriste.

Telefon se ugrije nakon dužih poziva, igranja igrice, surfovanja internetom ili uključenih drugih zahtjevnih aplikacija

- To grijanje je normalna posljedica toga što procesor obrađuje veliki broj podataka. Prekidanjem gore navedenih radnji će se vaš telefon vratiti na normalnu temperaturu.

Kada se izvrši resetovanje na fabrička podešavanja, ne mogu da koristim telefon bez unošenja akreditiva za Google nalog

- Nakon resetovanja morate da unesete ispravne akreditive za Google nalog koji su korišćeni na ovom telefonu.
- Ako ste zaboravili svoje akreditive za Google nalog, dovršite postupak vraćanja za Google nalog.

Telefon ne zvoni kada stigne dolazni poziv ili poruka

- Provjerite da li je aktiviran režim Ne uznemiravaj (idite na Podešavanja > Zvuk > Ne uznemiravaj).
- Pritisnite dugme za pojačavanje/utišavanje zvuka da podesite jačinu zvuka.

T Phone

5G Mobile Phone



User Manual
English

About this manual.....

Thank you for choosing the T phone 5G Mobile Phone. In order to maintain your device in optimal condition, please read this manual and keep it for future reference.


Table of content

About this manual.....	2	4.5 Chrome	14
1 Getting started.....	3	4.6 Calendar.....	14
1.1 Overview	3	4.7 Camera.....	15
1.2 Setup	4	4.8 Photos	16
1.3 Home screen	5	4.9 Clock.....	17
1.4 Status bar.....	5	5 Google applications.....	18
2 About your phone	6	6 More applications	19
2.1 Power on/off.....	6	7 Security	19
2.2 Battery.....	6	7.1 Screen lock	19
3 Personalize your phone	7	7.2 SIM card lock.....	19
3.1 Language	7	7.3 Lock screen preferences.....	19
3.2 Date & time.....	7	7.4 Fingerprint sensor	20
3.3 Display.....	8	7.5 Face unlock.....	20
3.4 Wallpaper	8	7.6 Smart lock.....	20
3.5 Sound	8	7.7 Encryption & credentials	20
3.6 Digital wellbeing & parental controls	9	8 Account	20
4 Applications.....	9	8.1 Account information	20
4.1 Call.....	9	8.2 Software update	20
4.2 Contacts.....	10	9 Safety & regulatory information	21
4.3 Messages.....	11	10 Specification.....	24
4.4 Gmail	12	11 Troubleshooting	25

1 Getting Started.....

1.1 Overview

 Note: The fingerprint sensor is located on the power key.

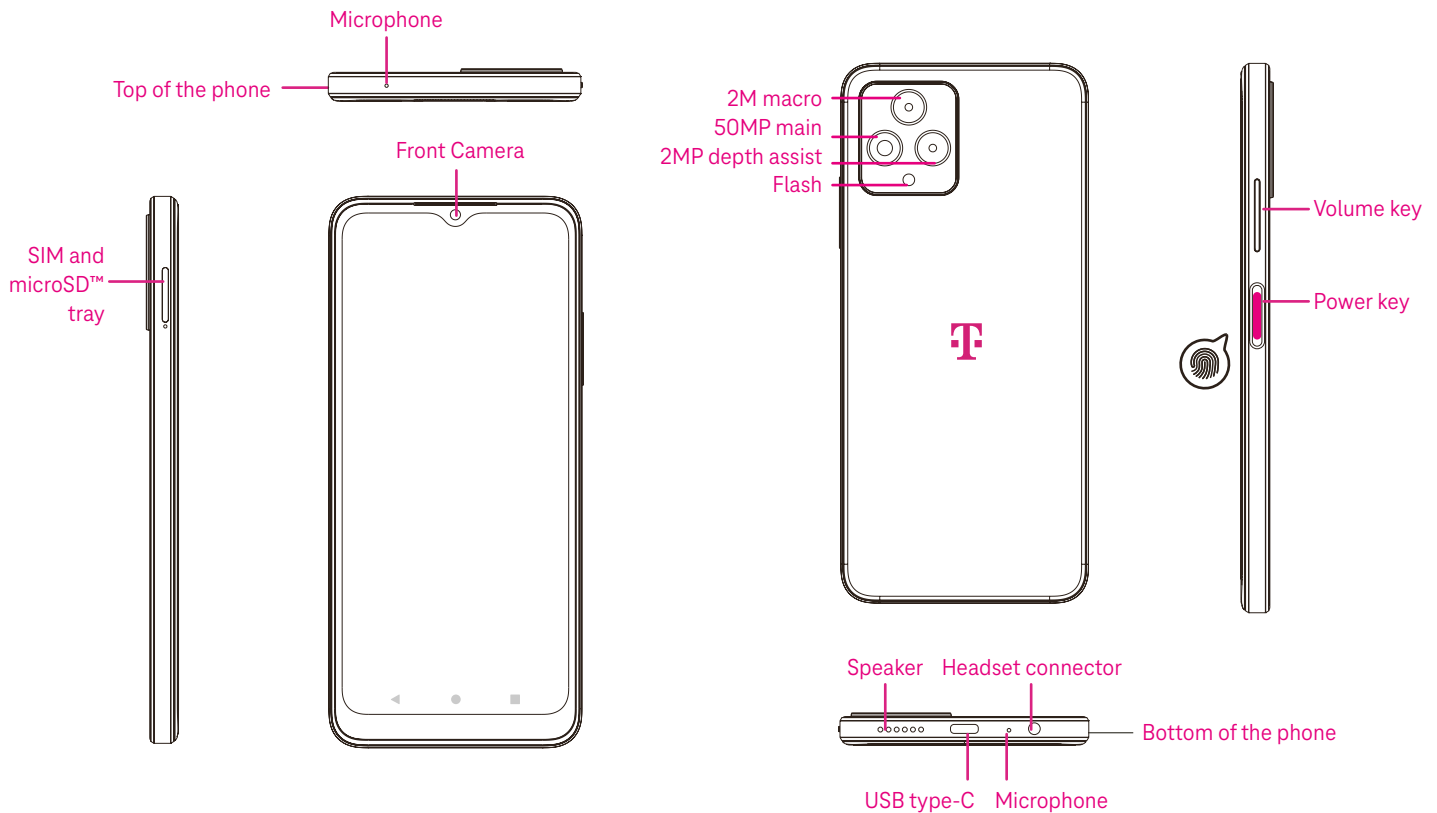

■ Recent Apps button

- Touch to view recently used applications. Swipe up on the screen to remove a specific thumbnail from the list, or scroll all the way to the left and touch **CLEAR ALL** to remove all thumbnails from the list.
- Pressing the **Recent Apps** button will also allow access to **Screenshot**. Touch Screenshot to immediately capture what is on the screen.

● Home button

- From any application or screen, touch to return to the Home screen.
- Touch and hold to launch Google Assistant, with which you can search for information online, open apps on your phone, or send messages.

◀ Back button

Touch to go back to the previous screen, or to close a dialog box, options menu, or the Notification panel.

Power key

- Press and release quickly to lock or light up the screen.
- Press and hold to launch Google Assistant.

- Press and hold the **Power** key and **Volume up** key to select from Emergency, Power off or Restart.
- Press and hold the **Power** key and **Volume down** key to take a screenshot and save it.
- Press and hold the **Power** key for at least 10 seconds to force reboot.
- Press the **Power** key twice to access the camera.

Volume key

- Use the Volume up or down keys to adjust the ringtone volume, the call volume during a phone call, or the media volume while listening to music, watching a video, or streaming content.
- Press the Volume key during an incoming call to mute the ringtone.
- While using the Camera, press the Volume up or down key to take a photo.

 
1.2 Set up

Inserting Nano SIM card

You must insert your Nano SIM card to make phone calls using your network.



Your phone only supports Nano SIM cards. In order to avoid damaging your phone, do not attempt to insert other SIM types, such as Mini or Micro cards.

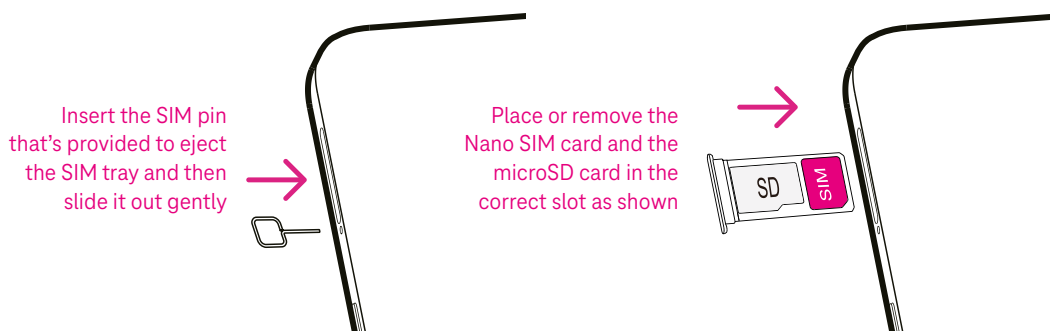

Note: Even if no SIM card is installed, your phone will still power on and you will be able to connect to a Wi-Fi network and use some of the phone's features.

 
Set up your phone

The first time you power on the phone, you should set the following options:

- Touch ▼ to select the phone's language, then touch **START**.
- Select an available Wi-Fi network. Or touch **Set up offline** and **Continue**.
- Adjust the Date & time if needed, then touch **Next**.
- Toggle to allow the phone to use location, otherwise toggle off .
- Toggle to allow scanning, otherwise toggle off .
- Toggle to opt in or out of the Device Diagnostics Collection, otherwise toggle off .
- Click **More** to continue, and press **Accept**.
- Set PIN for a screen lock, otherwise touch **Skip** to continue.

1.3 Home screen

You can bring all of the items that you use most frequently (applications, shortcuts, widgets, folders) to your Home screen for quick access. Touch the Home button to return to the Home screen.

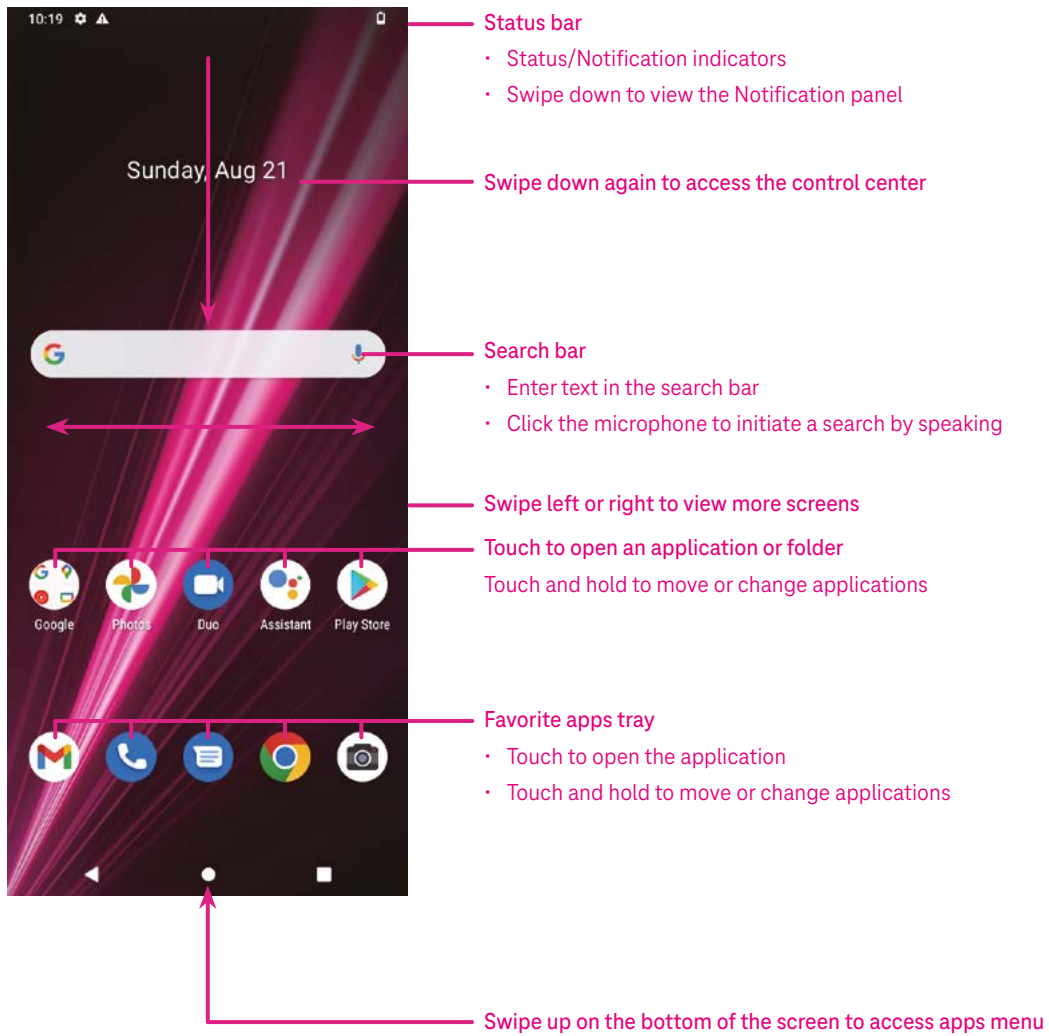

1.4 Status bar

The Status bar appears at the top of your Home screen and includes icons indicating your phone’s status and new notification alerts.

Icon	Status	Icon	Status
	Wi-Fi® active		Battery (fully charged)
	Network (Full signal)		New message
	5G data service		Silent mode
	Airplane mode		Do Not Disturb mode
	Alarm set		New Gmail message
	Battery (charging)		Screen Recorder
	Location		NFC enabled

2 About your phone

2.1 Power on/off

 
To turn the device on, hold down the **Power** key until the phone powers on. Unlock your phone (using Swipe, Pattern, PIN, Password, Fingerprint or Face key) if necessary. Once unlocked, the Home screen is displayed.

If you don't know your PIN code or if you have forgotten it, contact Customer Care. For safety, please do not store PIN code in your phone.

To power the device off, press the **Power** key and **Volume up** key until options appear, then select **Power off**.

Charging

Insert the small end of the charging cable into the charge port and plug the charger into an electrical outlet.

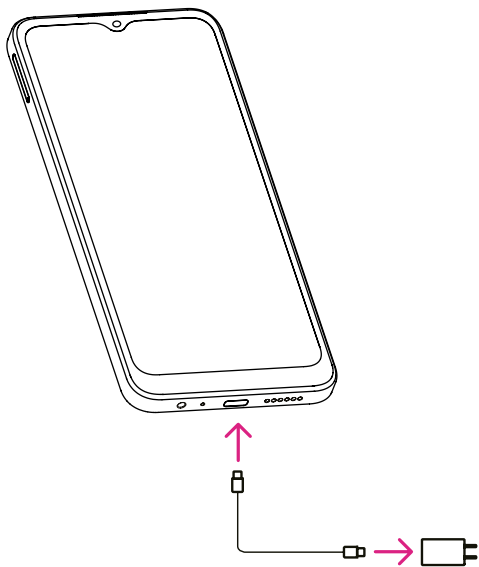

- Insert the USB type-C cable into the charge port as shown.
- Connect charger to power outlet.

Note: Please use the USB type-C cable included in the box. Wall charger sold separately. Using the wrong cable and charger may damage the charging port or reduce battery performance.


2.2 Battery

Make these adjustments to optimize your battery life.

Turn on power saving mode

- Go to Settings > Battery > Battery saver.
- Touch **Use Battery Saver** to activate the battery saving mode.

Lower screen brightness

- Go to Settings > Display > Brightness level.
- Lower the brightness by sliding  to the left.


Screen timeout

- Go to Settings > Display > Screen timeout.
- Select the screen timeout duration.

3 Personalize your phone.....

3.1 Language

Choose from multiple languages supported on your device.

- Go to Settings > System > Languages & input > Languages.
- Touch + **Add a language** to select a language from the list.
- Touch and hold  next to your desired language and drag it to the top of the list.

3.2 Date & time

Go to Settings > System > Date & time.

Use network-provided time

Touch to use network-provided time. Choose between:

- Use network-provided time
- Use GPS-provided time
- Off

Automatic time zone

Turn on to enable the network-provided time zone.

If Use network-provided time is turned off, you can manually set the date and time:

- Touch **Set Date** to open a dialog in which you can manually set the date.
- Touch **Set time** to open a dialog in which you can manually set the time.

If Automatic time zone is turned off, you can manually select the time zone:

- Touch **Select time zone** to select the region and time zone manually.

Use locale default

- Turn on to enable locale default.

Use 24-hour format

- If Use locale default is off, you can turn on to use 24-hour format.

3.3 Display

Make adjustments to the display settings and wallpapers to optimize your experience.

Go to Settings > Display to alter the following settings.

Dark theme

Dark theme uses a black background and help keep battery alive longer on some screens.

Night Light

This mode tints your screen amber. This makes it easier to look at your screen or read in dim light, and may help you fall asleep more easily.

Auto-rotate screen

Select whether the screen rotates automatically or not.

Note: Using your device in landscape mode while wearing polarized sunglasses may cut light from the screen. Take your polarized sunglasses off or use your device in portrait orientation to continue use.

3.4 Wallpaper

- Touch Photos to select from images that are stored on your device.
- Touch Settings > Wallpaper & style to change a wallpaper for your lock screen and/or homescreen from pre-loaded images.

3.5 Sound

Adjusting volume

- Press the volume keys that are located on the right side of the device to adjust the Ringtone & Notification volume.
- You can also go to Settings > Sound to adjust the volume for media, call, ring & notification and alarm.

Adjusting tones

Go to Settings > Sound > Phone ringtone.

Adjusting other sounds

All other sounds that are related to notification, alarm, dial pad, screen locking and charging can be adjusted to by doing the following:

Go to Settings > Sound.








3.6 Digital wellbeing & parental controls

- Use this menu to find out how much time you have spent on the phone and even on each app. You can customize the time limit for using the phone.
- In addition, parents can restrict their children's usage time and manage their browsing habits.



4 Applications

4.1 Call

Calling

- To make a call, touch .
- Suggested numbers are displayed as you enter numbers on the dial pad.
- Enter the desired number from the dial pad and touch  to place the call. You can also select a contact from **Favorites** , **Recents**  or **Contacts**  by touching the tabs.
- The number you entered can be saved to Contacts by touching **Create new contact**.
- If you make a mistake, you can delete the incorrect digits by touching .
- To hang up a call, touch .

International call

To make an international call, touch and hold  to enter +, then enter the international country prefix followed by the full phone number and touch .




Emergency call

 
If your phone has network coverage, dial the emergency number and touch .

This works even without a SIM card and without typing the PIN code.

Answering or rejecting a call




When you receive a call:

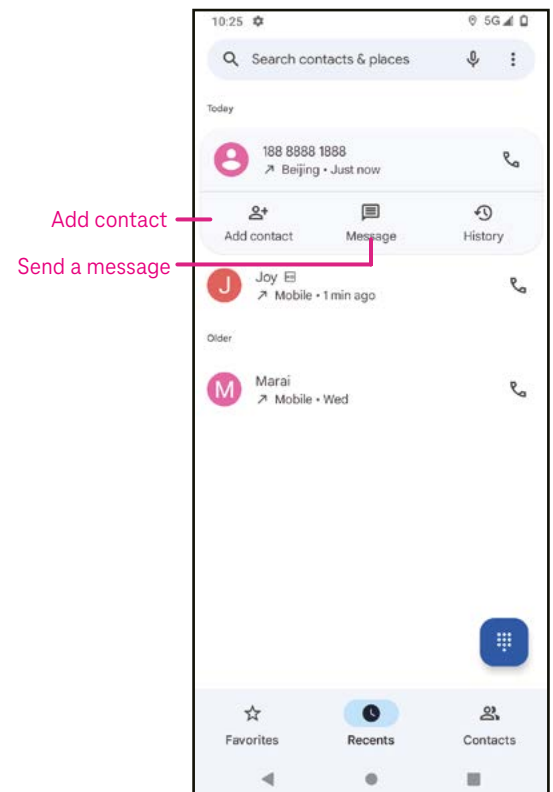- Slide  up to answer.
- Slide  down to reject.
- Touch  to reject the call by sending a preset message.
- To mute the ringtone of an incoming call, press the Volume key.



Vicemail

Your voicemail works like an answering machine for your missed calls.


- To access your voicemail, touch and hold 1.
- To set your voicemail number: touch **Phone**  and go to menu  > Settings > Voicemail > Advanced Settings > Setup > Voicemail number.
- If you receive a voicemail,  appears in the Status bar. Open the Notification panel and touch **Voicemail**.

Touch and hold to access voicemail



4.2 Contacts

Contacts enables quick and easy access to the contact you want to reach.

To access this function, touch **Contacts**  from the Apps menu.

You can view and create contacts on your phone and synchronize them with your Gmail contacts or other applications on the web or on your phone.





When finished, touch Save


Select a picture or take a photo for the contact

Touch to open available labels

Adding a contact



- Touch  in the contact list to create a new contact.
- Enter the contact's name and other contact information. By scrolling the screen up and down, you can move from one field to another.
- When finished, touch **SAVE**.
- To exit without saving, you can touch  and then touch **Discard**.

 
Editing your contacts

Touch  in the contact details screen to edit.

When finished, touch **SAVE**.



Add to/remove from Favorites⁽¹⁾

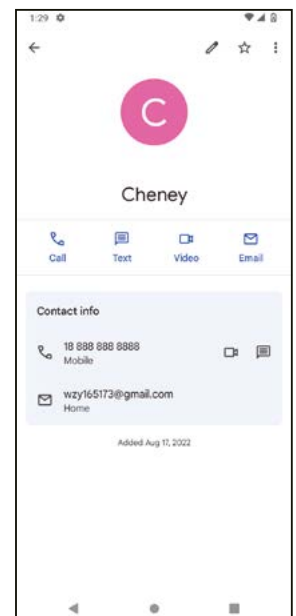- Touch a contact to view details then touch  to add the contact to favorites.
- Touch  again to remove a contact from favorites.




Deleting a contact

From the contact list screen:

- Touch and hold the contact you want to delete, then touch  and **Delete** to delete.
- Mark the checkbox of all contacts, then touch  and **Delete** to delete all contacts.


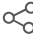
From the contact details screen:

- Touch  then select **Delete**. Select **Delete** when prompted to confirm.



The contact you have deleted will also be removed from other applications on the phone or web the next time you synchronize your phone.

Sharing a contact

You can share a single contact with others by sending the contact's vCard to them via Messages, Email, and Bluetooth. Select a contact you want to share, touch  and then select .

Available options

From the contact list, you may also make further adjustments by touching **Fix & manage**.

Fix & manage


Import/Export

Import or export contacts between phone, SIM card, microSD card and phone storage.

Settings:

- Your info Touch to set up your profile.
- Accounts Touch to add account and configure related info.
- Sort by Touch to sort the list by the first name or last name.
- Name format Touch to choose whether to display first name first or last name first.
- Theme Touch to change into light or dark theme.
- Default account for new contacts Touch to choose the default place to save a new contact.
- Phonetic name Touch to choose display or hide phonetic name.
- Blocked numbers Add numbers here so that you won't receive the calls or texts from them.



4.3 Messages

 
Use the messaging app  to send and receive text (SMS) and multimedia (MMS) messages.

Creating a message

On the Messaging list screen, touch  to write text/multimedia messages.

Sending a text message

- Enter the name or the phone number of the recipient in the **To** bar or touch  to add recipients.
- Touch the **Text message** bar to enter the text of the message.
- Press and hold  to access emoticons.

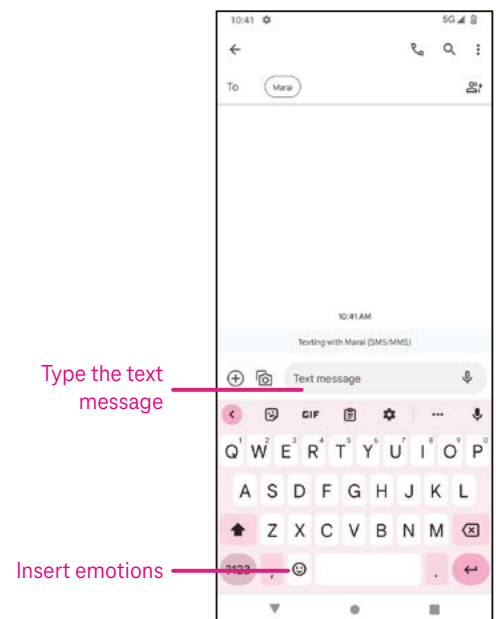

- When finished, touch ➤ to send the text message.

An SMS message of more than 150 characters will be charged as several SMS. A counter will be on the right of the text box to remind you how many characters can be entered in one message.



Specific letters (accented) will also increase the size of the SMS, this may cause multiple SMS to be sent to your recipient.

Sending a multimedia message

MMS enables you to send video clips, images, audio and vCard to other compatible mobiles and e-mail addresses.

- Enter the recipient's phone number in the To bar.
- Touch the **Text message** bar to enter the text of the message.
- Touch ⊕ to attach a emotion, your location, contact or file; Touch 📷 to choose a picture or video.
- When finished, touch ➤ to send the multimedia message.

Managing messages

When receiving a message, 📬 will appear in the Status bar as a notification. Drag down the Status bar to open the Notification panel, touch the new message to open and read it. You can also access the Messaging application and touch the message to open it.

Messages are displayed as a conversation.

Touch a message to enter the message composing screen:

 
- Touch 📞 to call the number.
- Touch 👤 to save the number to contacts or view the contact details if the number has been saved.
- To reply to a message, enter the text. When finished, touch ➤.
- If you touch and hold a message, the following options will be available: 📄 copy, 🗑️ delete, 📤 share, forward, view details.

4.4 Gmail

Setting up Gmail





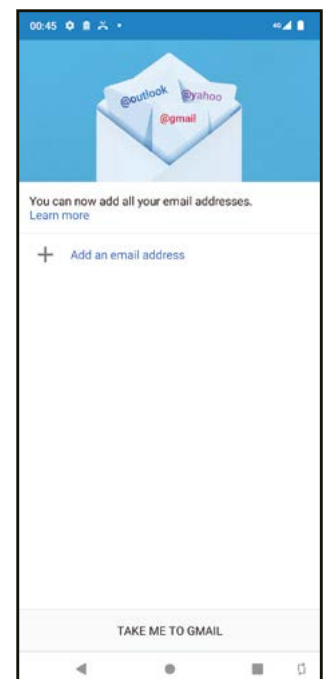


To set up your email account, swipe up from the Home screen, then select Gmail

- Select + to add an email address.
- An email setup process will guide you through the steps to set up an email account.
- Select the type of email account that you have and enter the email address and password of the account you want to set up.
- If the account you entered is not provided by your service provider in the device, touch **Other** and enter the email address, touch **NEXT** to select an account type and enter password of your email, then correctly fill in server and port in both Incoming server settings and Outgoing server settings interfaces. Touch **Finish** to complete setup.



- To add another email account, click + **Add an email address**. Choose Other from the set up email options. Or you can touch the account name on the upper right corner and select **Add another account** to implement this function.

Sending an email

- Touch  from the Inbox screen.
- Enter recipient(s) email address(es) in the **To** field.
- If necessary, touch  > **Cc/Bcc** to add a copy or a blind copy to the message.
- Enter the subject and the content of the message.
- Touch  to add an attachment.
- If you do not want to send the mail right away, you can touch  and **Save draft** or touch the Back key to save a copy.
- Touch  to send.
- If you do not want to send or save the email, you can touch  and then select **Discard**.
- To add a signature that will appear on all of your emails, touch  and select **Settings**, then choose the account that you want to create or modify the signature, touch **Mobile Signature** to edit.

Note: If you are seeing a “password incorrect” error when setting up your Gmail Account in the Gmail app, please review the following options:

Option 1: Generate an App password

An App password is a 16-digit passcode that gives an app or device permission to access your Google Account.

If you use 2-Step-Verification and are seeing a “password incorrect” error when trying to access your Google Account, an App password may solve the problem.

To generate an App password

- Visit your App passwords page <https://myaccount.google.com/security/signinoptions/two-step-verification>. You may be asked to sign in to your Google Account.
- At the bottom, click **Select app** and choose the app you’re using.
- Click **Select device** and choose the device you’re using.
- Select **Generate**.
- Follow the instructions to enter the App password (the 16-character code in the yellow bar) on your device.
- Select **FINISH**.
- Once you are finished, you won’t see that App password code again. However, you will see a list of apps and devices you’ve created App passwords for.

If generating an app password does not fix the issue, please proceed to Option 2 or Option 3.

Option 2: Change your settings to allow less secure apps

- Go to the “Less secure apps” <https://www.google.com/settings/security/lesssecureapps> section in My Account.
- Next to “Access for less secure apps,” select **Turn on**.
- You can now setup your email using your username and password. If you continue to see a “password incorrect” error, please proceed to Option 3.


Option 3: Access Gmail through browser

If you don't want to change your security settings, please follow these steps to access your Gmail:

- From the home page, press the OK button and press on the Browser. Enter <https://www.google.com/gmail/> in the browser URL tab.
- Enter your username and password to log in.

4.5 Chrome

Enjoy surfing the Web using the Chrome browser.


To access this function, touch Chrome  from the Home screen.

 
4.6 Calendar

You can use Calendar to keep track of important meetings, appointments, and more.

To access the function, swipe up from the Home screen, then touch Calendar.



Viewing calendars

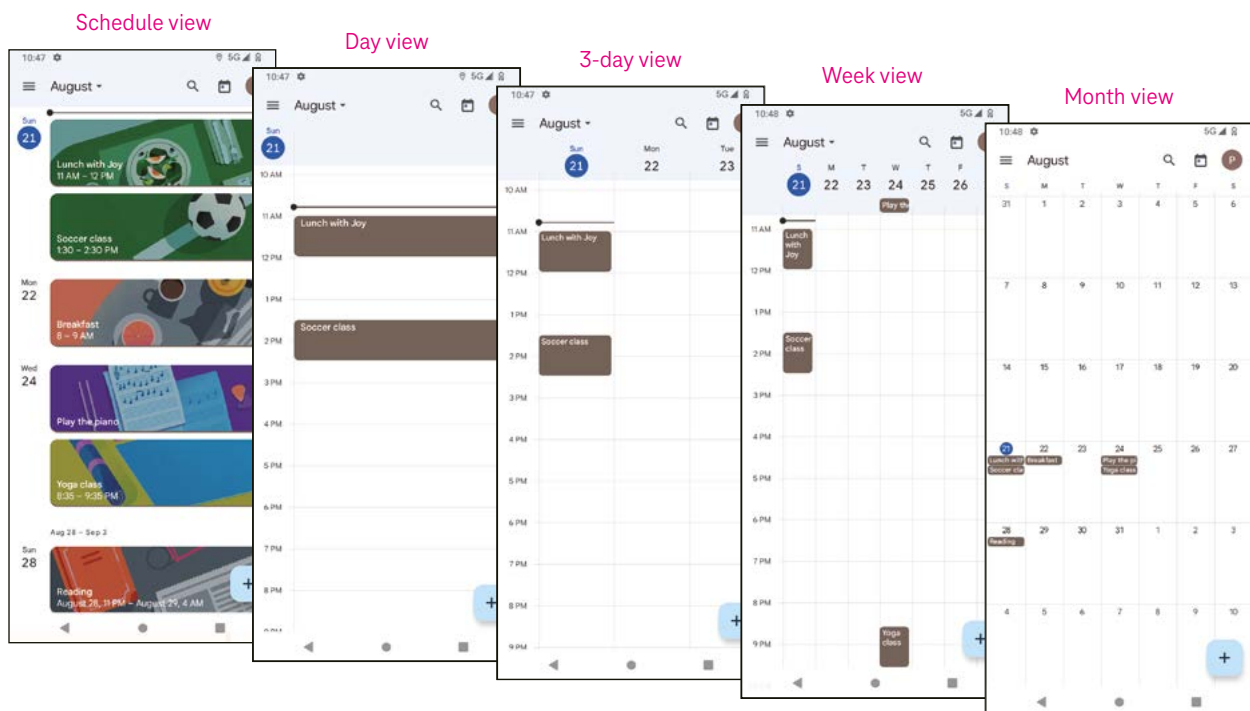
You can display the Calendar in Schedule, Day, 3 days, Week or Month view. Touch  and select your desired calendar view.





Creating a new event

You can add new events from any Calendar view.

- Touch .
- Fill in all required information for this new event. If it is a whole-day event, you can turn  on to All-day.
- Invite guests to the event. Enter the email addresses separated by commas of the guests you want to invite to separate. The guests will receive an invitation from Calendar and Email.
- When finished, touch **Save** from the top of the screen.

To quickly create an event from the Day, 3 Day, or Week views, touch an empty spot to select a target area which will then turn into , and touch the icon to create the new event.

Deleting or editing an event

- To delete or edit an event, touch the event to enter its details screen, then touch  to edit the event.
- Touch  and **Delete** to remove the event.

Event reminder

If a reminder is set for an event, the upcoming event will appear in the home screen.



- Touch an event name to view the Calendar notification list.

4.7 Camera

 
Accessing the camera

From the Home screen, touch **Camera**.




Taking a picture

- Position the object or landscape in the viewfinder, and touch the screen to focus if necessary.
- Touch  to take the picture which will be automatically saved.
- To take burst shots, touch and hold .

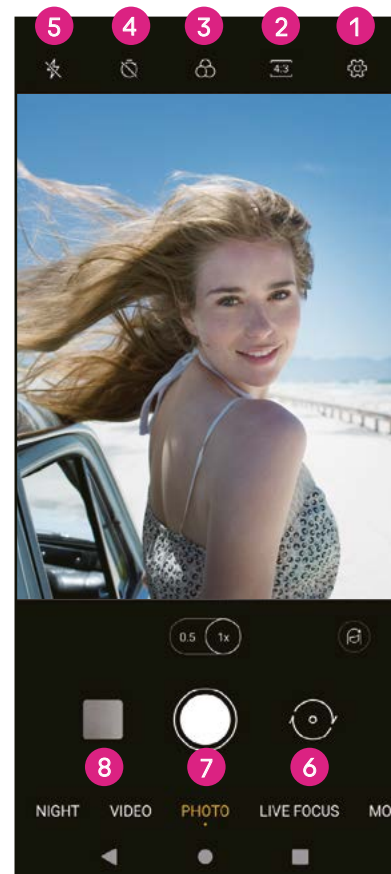




- 1 Access more options
- 2 Select shot size
- 3 Select a filter
- 4 Set countdown seconds
- 5 Select flash mode to select flash mode: Off, Auto, On, or Always
- 6 Switch between front/back camera
- 7 Take a photo
- 8 View photos or videos you have taken



Making a video

- Touch **VIDEO** to enter the Video mode.
- Touch  in the center of the screen to start video recording.
- You can also touch  to take a picture during video recording.
- Touch  to stop recording. The video will be automatically saved.

Viewing, Editing, & Sharing

- Touch  then **Gmail**, **Bluetooth**, or **Message** to share the photo or video.
- Touch  to edit.
- Touch  to search what you see with Google Lens.
- Touch  to delete.
- Touch  to go back to Camera mode.

4.8 Photos




Photos acts as a media player for you to view photos and play videos.


Pictures and videos are displayed by moments and albums in Photos.

- Touch the picture/video directly to view or play.
- Swipe left/right to view previous or next pictures/videos.

 
Working with photos

You can work with pictures by rotating or cropping them, sharing them with friends, setting them as a contact photo or wallpaper, etc.

- Locate the picture you want to work on and touch the picture in the fullscreen picture view.
- Touch  to share the picture, or touch  to delete the picture. Touch  and select **Use as** to set the picture as Contact photo or Wallpaper.

Tap  to enter editing screen.

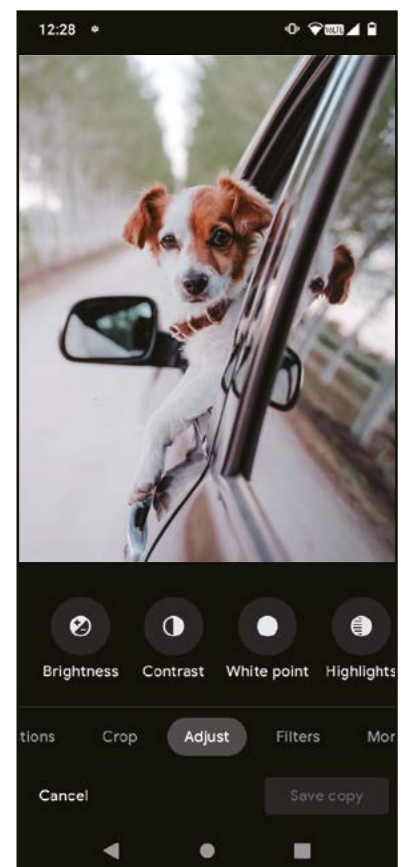

Suggestions	Choose Enhance, Warm, or Cool to adjust the picture color.
Crop	Select between Auto, Crop, Rotate, Preview, and Reset.
Adjust	Manage brightness, contrast, and more.
Filters	Choose between a variety such as Vivid, West, Palma, and more.
More	Markup: personalize your picture by drawing on it or adding words to it.






4.9 Clock





To access Clock, swipe up from the Home screen, then touch **Clock**.

Setting world clocks






- Touch  on the clock screen.
- Touch  to add a time zone.

Setting alarms






- Touch  on the clock screen.
- Turn on  to enable existing alarm, or touch  to add a new alarm. The following options will appear:

	Add label	Touch to set a name for the alarm.
	Ringtone	Touch to select a ringtone for the alarm.
	Vibrate	Mark the checkbox to activate vibration.
	Dismiss	Touch to turn off the alarm.
	Delete	Touch to delete the alarm.

Setting timer

- Touch  on the clock screen.
- Enter time in the sequence of seconds, minutes, and hours.
- Touch  to activate Countdown.
- Touch  to add another timer in panel.
- Touch  to deactivate Countdown.
- Touch  to delete current countdown timer.

Setting stopwatch

- Touch  on the clock screen.
- Touch  to start the timer.
- Touch  to show a list of records according to the updated time.
- Touch  to halt the total and lap times.
- Touch  to start a new timer.

Bedtime

Set a bedtime to silence your phone and choose to listen to soothing sounds. Set a wakeup time to receive alerts again.

5 Google applications

Google apps are preinstalled on your phone to improve work efficiency and provide an enjoyable user experience.

This manual briefly introduces the apps. For detailed features and user guides, refer to related websites or the introduction provided in the apps.

Register with a Google Account to enjoy full functionality.



Google

Your bookmarks, browsing history, and settings across all devices on which the browser is installed can be synchronized with your Google Account.



Gmail

As Google's web-based email service, Gmail is configured when you first set up your phone. With this application, you can send and receive emails, manage emails by labels, archive them, and more. Emails can be automatically synchronized with your Gmail account.



Maps

Google Maps offers satellite imagery, street maps, 360° panoramic views of streets, real-time traffic conditions, and route planning for traveling by foot, car, or public transportation. By using this application, you can find your own location, search for a place, and get suggested route planning for your trips.



YouTube

YouTube is an online video-sharing application where users can upload, view, and share videos. Available content includes video clips, TV clips, music videos, and other content such as video blogging, short original videos, and educational videos. It supports a streaming function that allows you to start watching videos almost as soon as they begin downloading from the internet.



Drive

A file storage and synchronization service created by Google, which allows users to store files in the cloud, share and edit files. Files in Drive are kept secure and can be accessed from any device by logging in to your Google Account. Files or folders can be shared privately with other Google Account users.

In Play Store, search for the app you need, download it and then follow the installation guide to install the app. You can also uninstall, update an app, and manage your downloads.



Duo

This is a video chat mobile app that allows users to make video calls to people in their contact list once their phone numbers are verified.



Photos

Google Photos stores and backs up your photos and videos. It also automatically analyzes photos and organizes them into groups so that you can quickly find the photos you need.



YT Music

YT Music Downloader is a Windows program that simplifies downloading videos and music from YouTube. YT Music Downloader lets you download videos and/or audio from YouTube. The program is geared toward music, so you can save music videos (or any videos) or convert those videos to just music, and the app will automatically save them in the MP3 format. Provided an appropriate YouTube link, the program is very fast at converting and saving these items to file, and once done, you have access to this music offline and via any other devices to which you transfer these files.

 
6 More applications.....

Swipe up from the bottom of the screen to access these other apps.



Play Store

Serves as the official app store for the Android operating system, allowing users to browse and download applications and games. Applications are either free of charge or at a cost.

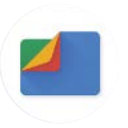

Files

Files displays all data stored on the phone, including both external SD card and internal storage, such as applications, media files downloaded from Google Play Store, YouTube or other locations; videos, pictures or audio you have captured; other data transferred via Bluetooth, USB cable, etc.

7 Security.....

7.1 Screen lock

From the Home screen, access Settings in the control center or from the search apps list. Go to Security > Screen lock.

Screen lock allows you to secure your phone from being used by others without your permission. Activate the following security options: Pattern, PIN, or Password. Whoever turns on your phone will be required to unlock the screen in order to access your device. Your device can be unlocked by anyone if you select None or Swipe.

7.2 SIM card lock

A SIM PIN prevents access to the cellular data networks. When it's enabled, any device containing the SIM card will request the PIN upon restart. A SIM PIN is not the same as the lock code used to unlock the device.

7.3 Lock screen preferences

Customize what displays on your lock screen.

7.4 Fingerprint sensor

Use your Fingerprint to unlock the screen.

Access Settings > Security > Fingerprint to activate this function.

Note: you need to set a pattern, PIN, or password before using Fingerprint sensor.

7.5 Face unlock

Face unlock allows you to unlock your device with your facial data. Set it according to the on-screen steps. Make sure you are facing the phone screen when using face recognition.

Note: you need to set a pattern, PIN, or password before using face unlock.

7.6 Smart lock

This function is inactive by default; you need to set a screen lock to activate it. If Smart lock is turned on, your device remains unlocked when it is safe with you.

7.7 Encryption & credentials

Under Advanced, touch to view your device encryption status and the credentials items. You can modify and clear all of the stored credentials.

8 Account

8.1 Account information

You can also access account information from your phone.

- Go to Settings > About phone

8.2 Software update

To access Software Updates, follow the steps below:

- Connect your device to a Wi-Fi network and make sure it has a strong data connection.
- Ensure your battery is fully charged before starting the software update. Your device's current battery level can be found on your device under Settings > Battery.
- Go to Settings > System > System update.
- If you want to update the system, tap **Check for update** and when that's finished, your phone will have the latest version of the software.

9 Safety & regulatory information

Read this chapter carefully before using your mobile device.

Safety and Use

The manufacturer disclaims any liability for damage, which may result as a consequence of improper use or use contrary to the instructions contained herein. Use of connected devices subject to T-Mobile's Terms and Conditions.

Traffic Safety

Always obey the local laws and regulations addressing the use of wireless mobile devices and their accessories in the areas where you drive. The use of mobile devices while driving may be prohibited or restricted in certain areas.

Conditions of Use

Remember to abide by local authority rules of mobile device use on aircrafts.

Operational Warnings

Only use your mobile device in accordance with local laws and regulations and obey all posted notices in public areas.

Read and follow the directions from the manufacturer of your implantable medical device. If you have any questions about using your mobile device with your implantable medical device, consult your healthcare provider.

- It is recommended to have proper supervision while small children use your mobile device.
- Do not attempt to disassemble your mobile device. If you disassemble your mobile device, the warranty will not apply.
- Always handle your mobile device with care and keep it in a clean and dust-free place.
- Do not allow your mobile device to be exposed to adverse weather or environmental conditions (moisture, humidity, rain, infiltration of liquids, dust, sea air, etc.). The manufacturer's recommended operating temperature range is 0°C (32°F) to +40°C (104°F)
- **Note: The max value depends on the device condition, materials around it and the housing paint and texture.**
- At over 40°C (104°F), the legibility of the mobile device's display may be impaired, though this is temporary and not serious.
- Do not open or attempt to paint or repair your mobile device.
- Do not drop, throw or try to bend your mobile device.
- Do not use the mobile device if the screen is damaged, cracked or broken to avoid any injury.
- Use only batteries, battery chargers, and accessories which are recommended by device manufacturer and its affiliates and are compatible with your mobile device model. Device manufacturer and its affiliates disclaim any liability for damage caused by the use of other chargers or batteries.

Please check local laws and regulations in your jurisdiction to learn how to best dispose of your mobile device.



PROTECT YOUR HEARING

To prevent possible hearing damage, do not listen at high volume levels for long periods. Exercise caution when holding your device near your ear while the loudspeaker is in use.

Privacy

Please note that you must respect the laws and regulations of your jurisdiction or other jurisdiction(s) where you will use your mobile device regarding taking photographs and recording sounds with your mobile device. Pursuant to such laws and regulations, it may be strictly forbidden to take photographs and/or to record the voices of other people or any of their personal attributes, and reproduce or distribute them, as this may be considered to be an invasion of privacy.

It is the user's sole responsibility to ensure that prior authorization be obtained, if necessary, in order to record private or confidential conversations or take a photograph of another person; the manufacturer, the seller or vendor of your mobile device (including the operator) disclaim any liability which may result from the improper use of the mobile device.

Legal Information

In order to provide you with better access to this important information, we've made the materials accessible from the phone's Settings menu. Review these materials prior to using your mobile device. To access the materials on your mobile device, swipe up from the home screen, and tap Settings > About phone > Legal information, and select a topic.

Regulatory Information (e-label)

Your mobile device uses an electronic label (e-label) that provides regulatory information about your device. To view the regulatory information for this device on the device, swipe up from the home screen, then tap Settings > About phone > Regulatory labels.



This smartphone has been tested and rated for use with hearing aids for some of the wireless technologies that the smartphone uses. However, other wireless technologies may be used in this smartphone that have not been tested for use with hearing aids. It is important to try the different features of your smartphone thoroughly and in different locations to determine if you hear any interfering noise when using this smartphone with your hearing aid or cochlear implant. Consult your wireless service provider about its return and exchange policies, and for information about hearing aid compatibility.

Your device includes a radio transmitter and receiver. It is designed and manufactured not to exceed the exposure limits for Radio Frequency (RF) set by the CONFORMITE EUROPEENNE(CE). The RF exposure limits set by the CE for wireless mobile devices utilize a unit of measurement referred to as Specific Absorption Rate (SAR), which is a measure of the amount of RF energy absorbed by the body when using a mobile device. The CE limit for public exposure from cellular telephones is a SAR level of 2.0 watts per kilogram (2.0 W/kg). And the highest SAR value for this device when tested at the head was 0.99 W/kg*, when tested at the body was 1.49W/kg*

This device complies with CE radiation exposure limits set forth for an uncontrolled environment. To ensure compliance with the RF exposure guidelines, the device must be used at least 5mm from your body.

To view additional SAR information on your phone, swipe up from the home screen, then tap **Settings > About phone > Legal information > RF Exposure**.

Battery and Accessories

Observe the following precautions for battery use:

- Do not attempt to open the battery (due to the risk of toxic fumes and burns).
- Do not disassemble or cause a short-circuit in the battery.
- Do not burn or dispose of a used battery in household garbage or store it at temperatures above 60° C.
- Do not disassemble or open, crush, bend or deform, puncture or shred.
- Do not modify or remanufacture, attempt to insert foreign objects into the battery, immerse or expose to water or other liquids, expose to fire, explosion or other hazards.

Products that have the below symbol must be taken to collection points at the end of their life:



- Municipal waste disposal centers with specific bins for these items of equipment.
- Collection bins at points of sale.

You can learn more about how to recycle your mobile device by visiting the CTIA website at www.ctia.org/news/how-to-recycle-your-mobile-device

CAUTION: IF BATTERY IS REPLACED BY AN INCORRECT TYPE, DEVICE MIGHT EXPLODE. DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTION.



Recycling Information

Call Recycle Customer Support at 1-855-368-0829 for recycling instructions or just mention this: In the United States you may learn more about CTIA's Recycling Program at <http://www.recyclewirelessphones.com>.


Chargers

Home A.C./Travel chargers will operate within the temperature range of: 0°C (32°F) to 45°C (113°F).

Due to different applicable electrical specifications, a charger you purchased in one jurisdiction may not work in another jurisdiction. They should be used for this purpose only.

This product should be operated with the recommended power supply unit(s).

Travel charger: Input: 100–240V~ 50/60Hz 0.5A

Output: 5V  3A

Licenses



microSD logo is a trademark of SD-3C, LLC.



The Bluetooth® word mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by Device Manufacturer and its affiliates is under license. Other trademarks and trade names are those of their respective owners.



The Wi-Fi Logo is a certification mark of the Wi-Fi Alliance.

10 Specification

	T Phone
Display	6.52" HD+ w/2.5D Glass
Cameras	Rear Facing: 50MP Main + 2MP Depth + 2MP Macro + LED Flash Front Facing: 5MP 2K @ 30 fps video
Memory	4GB RAM / 64GB ROM / up to 2TB Micro SD Card
Battery	4500 mAh
Charging	USB-C, 15W
5G	YES
Chipset	MediaTek Dimensity 700 / Octa Core - 2* 2,2GHz + 6*2GHz
Security	Face Unlock, Fingerprint Sensor
Water Protection	IP52 / IPX2
NFC/Bluetooth	No / 5.1
Headphones	support 3.5mm earphone jack
Operating System	Android 12 + OS Upgrade MR
Dimensions	166.6*76.42*8.76 mm
Weight	195 g

Mode	Band	Output power
GSM	B2	29.5dBm
	B3	29.5dBm
	B5	32.5dBm
	B8	32.5dBm
UTMS	B1	23.0dBm
	B2	23.0dBm
	B5	23.0dBm
	B8	23.0dBm
LTE	B1	23.0dBm
	B2	23.0dBm
	B3	23.0dBm
	B4	23.0dBm
	B5	23.0dBm
	B7	23.0dBm
	B8	23.0dBm
	B20	23.0dBm
	B28	23.0dBm
	B38	26.0dBm
NR	N1	23.0dBm
	N3	23.0dBm
	N7	23.0dBm
	N28	23.0dBm
	N38	23.0dBm
	N78	26.0dBm
WIFI	2.4G	20.5dBm
	5G	20.5dBm
Bluetooth	2,4GHZ	9dBm

11 Troubleshooting.....

Review some of these common issues and their solutions.

My phone can't receive incoming calls

- Make sure that your phone is switched on and connected to a network.
- Check for overloaded or unavailable network.
- Check your subscription status.
- Make sure that you have not forwarded incoming calls.
- Make sure that you have not barred certain calls.
- Make sure that your phone is not in airplane mode.

The caller's name/number doesn't appear when a call is received

- If the caller is not in your contact list, you have the option to subscribe to NameID
- Your caller may have concealed his name or number.

I can't find my contacts

- Make sure that your SIM card is not broken.
- Make sure that your SIM card is inserted properly.
- Import all contacts stored in SIM card to phone.

The sound quality of the calls is poor

- Adjust the volume during a call by pressing the Volume key.
- Check the network strength. Move to a location with stronger signal strength.
- Make sure that the receiver, connector or speaker on your phone is clean.

I can't use the features described in the manual

- Check to make sure that your subscription includes this service.
- Make sure that this feature doesn't require any additional accessory.

When I select a number from my contacts, the number can't be dialed

- Make sure that you have correctly recorded the number in your file.
- Make sure that you have selected the country code when calling an international number.

My phone can't connect to a network or "No service" is displayed

- Try connecting to the network by moving to another physical location.
- Verify the network coverage in your current area.
- Check that your SIM card is valid.
- Make sure your phone's setting is not in airplane mode.
- If you are away from your T-Mobile network, you may need to enable roaming in the phone's settings to connect to another network. Roaming charges may apply.

My phone can't connect to the internet

- Make sure that Cellular Data internet service is available in your wireless service plan.
- Check your phone's settings. Make sure Cellular Data is enabled or Wi-Fi connected.
- Make sure that you are in a place with network coverage for cellular data or Wi-Fi internet connection.
- Try connecting at a later time or from another location.

Invalid SIM card

- Make sure that the SIM card has been correctly inserted (see "Inserting Nano SIM card").
- Make sure that the chip on your SIM card is not damaged.
- Make sure that the service of your SIM card matches the network you're on.

My phone can't make outgoing calls

- Make sure that you have dialed a valid number and have touched Call on your phone.
- For international calls, check the country and area codes.
- Make sure that your phone is connected to a network, and the network is not overloaded or unavailable.
- Check your subscription status.
- Make sure that you have not barred outgoing calls.

My phone can't be switched on

- If the phone can't be switched on, charge for at least 10 minutes to ensure the minimum battery power needed. Then switch it on again.

My phone has not responded for several minutes

- If your phone doesn't respond, turn off your phone by pressing and holding the Power key until it turns off and then restart it again.

My phone turns off by itself

- If your phone turns off by itself, make sure that the Power key is not accidentally pressed.
- Check the battery charge level.
- If it still doesn't work, Factory reset the phone via the Reset options in the phone's Settings. Make sure you have backed up your data.

My phone can't charge properly

- Make sure that you are using the proper charger that comes with the phone.
- Make sure that your battery is not completely discharged; if the battery power has been discharged for a long time, it may take around 10 minutes to display the battery charging indicator on the screen.
- Make sure that charging is carried out under normal conditions (0°C (32°F) to 45°C (113°F)).

I can't add a contact

- Make sure that your SIM card contact list are not full; delete some files or save the files to the phone.

My callers can't leave messages on my voicemail

- Contact your network carrier to check service availability.
- Set up your voicemail so that your caller can leave a message.

I can't access my voicemail

- Make sure that T-Mobile's voicemail number is correctly entered in "Voicemail number".
- Try later if the network is busy.

I can't send and receive MMS

- Check your phone storage as it might be full.
- Contact customer care to check service availability and MMS parameters.
- Verify the server center number or your MMS profile with customer care.
- The server center may be swamped. Try again later.
- Start a new Messaging string. Your messaging string may have reached its limit.

SIM card PIN locked

- Contact customer care to obtain the PUK (Personal Unblocking Key) code.

I can't connect my phone to my computer

- Install Smart Suite.
- Check that your USB driver is installed properly.
- Open the Notification panel to check if the Smart Suite Agent has been activated.
- Check that you have marked the USB debugging checkbox.
- Check that your computer meets the requirements for Smart Suite installation.
- Make sure that you're using the right cable from the box.

I can't download new files

- Make sure that there is enough phone storage space for your download.
- Select the microSD card as the location to store downloaded files.
- Check your subscription status.

The phone can't be detected by others via Bluetooth

- Make sure that Bluetooth is turned on and your phone is visible to other users.
- Make sure that the two devices are within Bluetooth's detection range.

The battery drains too fast

- Make sure that you follow the complete charge time (minimum 2.3 hours).
- After a partial charge, the battery level indicator may not be exact.
- Wait for at least 10 minutes after removing the charger to obtain an exact indication.
- Adjust the brightness of screen as appropriate.
- Extend the email auto-check interval for as long as possible.
- Update news and weather information manually or increase their auto-check interval.
- Exit background-running applications if they are not being used for extended periods of time.
- Deactivate Bluetooth, Wi-Fi, or GPS when not in use.

The phone becomes warm following prolonged calls, game playing, internet surfing or running other complex applications

- This heating is a normal consequence of the CPU handling excessive data. Ending the above actions will make your phone return to normal temperature.

After Factory data reset is performed, I can't use my phone without entering Google Account credentials

- After reset is performed, you must enter the original Google Account credentials that were used on this phone.
- If you don't remember your Google Account credentials, complete Google Account recovery procedures.

The phone doesn't ring when a call or message arrives

- Make sure that Do Not Disturb mode (go to Settings > Sound > Do Not Disturb) is not activated.
- Press the Volume key to adjust volume.