

T Tablet

5G mobilni tablet



Priručnik za korisnike
Montenegro

O ovom uputstvu

 
Hvala vam što ste izabrali T Tablet 5G mobilni tablet. Kako bi ovaj uređaj stalno bio u optimalnom stanju, pročitajte ovo uputstvo i sačuvajte ga za ubuduće.

Sadržaj

O ovom uputstvu	2	4 Aplikacije	11
1 Prvi koraci	3	4.1 Kontakti	11
1.1 Pregled	3	4.2 Poruke	12
1.2 Podešavanje	4	4.3 Gmail	14
1.3 Početni ekran	5	4.4 Kalendar	15
1.4 Statusna traka	6	4.5 Kamera	16
1.5 Režim podijeljenog ekrana	6	4.6 Fotografije	17
2 O vašem tabletu	7	4.7 Sat	18
2.1 Uključivanje/isključivanje	7	5 Google aplikacije	19
2.2 Baterija	7	6 Bezbjednost	21
3 Personalizujte svoj tablet	8	6.1 Zaključavanje ekrana	21
3.1 Jezik	8	6.2 Otključavanje prepoznavanjem lica	22
3.2 Datum i vrijeme	8	6.3 Pametno otključavanje	22
3.3 Ekran	9	6.4 Zaključavanje SIM kartice	22
3.4 Pozadina	9	6.5 Enkripcija i akreditivi	22
3.5 Zvuk	9	7 Nalog	22
3.6 Digitalna dobrobit i roditeljske zabrane	10	7.1 Informacije o nalogu	22
3.7 Pokreti	10	7.2 Ažuriranje softvera	22
3.8 Više korisnika	10	8 Bezbjednosne i regulatorne informacije	23
3.9 Rezervna kopija i vraćanje na fabrička podešavanja	11	9 Specifikacije	26
		10 Rješavanje problema	28

1 Prvi koraci.....

1.1 Pregled

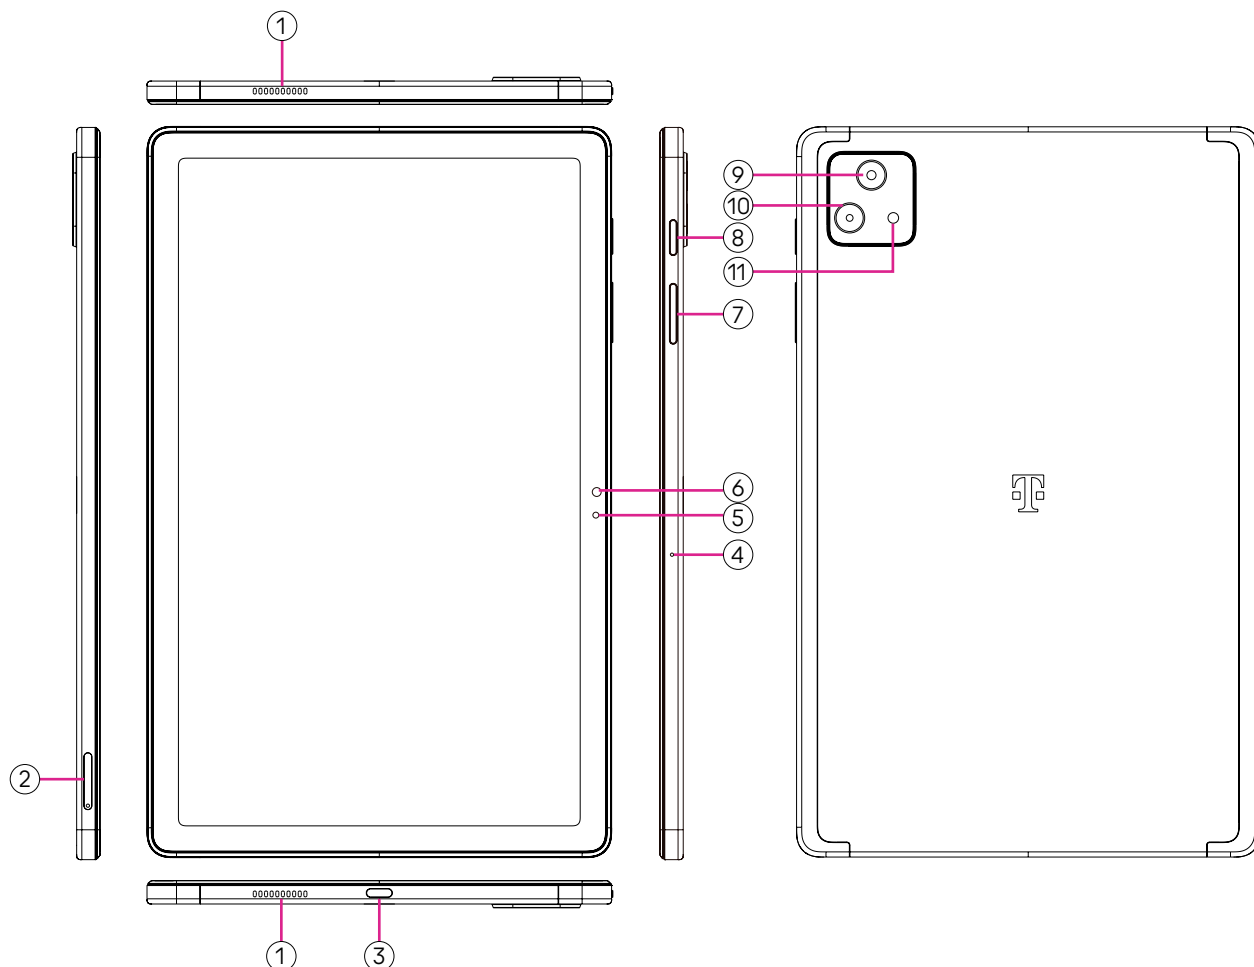

- | | | |
|---|---|----------------------|
| ① Zvučnici | ② Slot SIM kartice | ③ USB konektor |
| ④ Mikrofon | ⑤ Senzor svjetlosti | ⑥ 8MP prednja kamera |
| ⑦ Dugme za pojačavanje/
utišavanje zvuka | ⑧ Dugme za uključivanje/
isključivanje | ⑨ 8MP glavna kamera |
| ⑩ 2M dubinska asistencija | ⑪ Blic | |

Dugme za uključivanje/isključivanje

- Brzo pritisnite i pustite da zaključate ili upalite ekran.
- Pritisnite i zadržite da pokrenete **Google asistenta**.
- Pritisnite i zadržite dugme za **Uključivanje** i dugme za **Pojačavanje zvuka** da biste izabrali između Isključi ili Pokreni ponovo.
- Pritisnite i zadržite dugme za **Uključivanje** i dugme za **Utišavanje zvuka** da biste napravili snimak ekrana i sačuvali ga.
- Pritisnite i zadržite dugme za **Uključivanje** i dugme za **Pojačavanje zvuka** najmanje 10 sekundi za prinudno restartovanje.
- Pritisnite dugme za **Uključivanje** dva puta da uključite kameru.

Dugme za pojačavanje/utišavanje zvuka

- Koristite dugmad za pojačavanje ili utišavanje zvuka da podesite jačinu zvona, jačinu medija tokom slušanja muzike, gledanja videa ili puštanja sadržaja.
- Dok koristite kameru, pritisnite dugmad za zvuk gore ili dole da napravite fotografiju.

1.2 Podešavanje

 
Ubacivanje Nano SIM kartice

Da biste slali poruke preko tableta preko vaše mreže morate da ubacite Nano SIM karticu.



Vaš tablet podržava samo Nano SIM kartice. Kako ne biste oštetili svoj tablet, ne pokušavajte da ubacite SIM kartice drugih vrsta kao što su Mini ili Mikro kartice.

Kako biste izvadili nosač SIM kartice, ubacite iglicu za SIM karticu koja se nalazi u pakovanju i potom lagano izvucite nosač

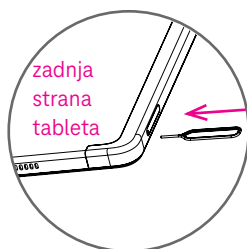

Ubacite ili izvadite Nano SIM karticu i microSD karticu u odgovarajuće mjesto kako je prikazano



Napomena: Čak i kada SIM kartica nije ubačena, vaš tablet će se ipak uključiti i moći ćete da se povežete na Wi-Fi mrežu i koristite neke funkcije na tabletu.

Registrowanje E-sim kartice

- Povežite se na WiFi, dodirnite **Podešavanja > Mobilna mreža > +**.
- Dodirnite **Preuzmite SIM karticu umjesto toga? > Sljedeće**.
- Skenirajte QR kod i sačekajte da se preuzme.
- Nakon preuzimanja, dodirnite **Podešavanja** da podesite E-sim karticu.

Podešavanje E-sim kartice







Nakon što se preuzeli dokument za konfigurisanje E-sim kartice, povežite se na mobilnu mrežu, izaberite E-sim dokument i dodirnite **DA**.

Izbrišite dokument za konfigurisanje E-sim kartice

Povežite uređaj na WiFi ili mobilne podatke. Dodirnite **Podešavanja > Mobilna mreža > Operater >  > IZBRIŠI**.

Podesite svoj tablet

Prvi put kada uključite tablet, trebalo bi da podesite sljedeće opcije:

- Dodirnite **Engleski (Sjedinjene države)** da izaberete svoj jezik i dodirnite **Podešavanja za gledanje** da prilagodite funkcije pristupačnosti. Kada ste završili, dodirnite **Start** na izvornom interfejsu da nastavite.
- Izaberite mobilne podatke.
- Izaberite dostupnu Wi-Fi mrežu. Ili dodirnite **Podešavanje bez interneta i Nastavi**.
- Uključite  da biste tabletu dozvolili da koristi lokaciju, u suprotnom, isključite .
- Uključite  da biste dozvolili skeniranje, u suprotnom, isključite .
- Uključite  da biste dozvolili slanje korisničkih i podataka o dijagnostici, u suprotnom, isključite .
- Kliknite **Prihvati** da nastavite.
- Podesite PIN za zaključavanje ekrana ili dodirnite **Preskoči > Ipak preskoči** na ekranu da nastavite.














1.3 Početni ekran

Radi brzog pristupa, na početni ekran možete da postavite sve stavke koje najčešće koristite (aplikacije, prečice, vidžete, foldere).

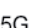


1.4 Statusna traka

Statusna traka se pojavljuje na vrhu Početnog ekrana i uključuje ikone koje označavaju status vašeg tableta i nova obavještenja.

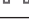Ikona	Status	Ikona	Status
	Wi-Fi® aktivan		Baterija (potpuno napunjena)
	Mreža (pun signal)		Nova poruka
	5G usluga podataka		Nečujni režim
	Način rada u avionu		Ne uznemiravaj režim
	Alarm podešen		Nova Gmail poruka
	Baterija (puni se)		Snimač ekrana
	Lokacija		

1.5 Režim podijeljenog ekrana

Režim podijeljenog ekrana možete da podesite da u isto vrijeme prikazuje dva različita interfejsa na tabletu.

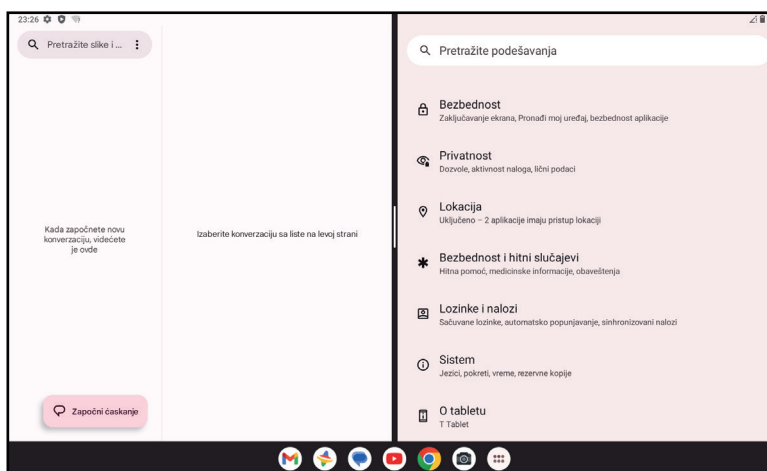

Korišćenje režima podijeljenog ekrana

Zadržite aplikaciju kojoj želite da pristupite, a onda dodirnite **Podijeli desno** ili **Podijeli lijevo**. Izaberite još jednu aplikaciju da biste koristili podijeljeni ekran.

Napomena: Ako u interfejsu nedavno korišćenih aplikacije nema ničega, ne možete da koristite režim podijeljenog ekrana.

Podešavanje režima podijeljenog ekrana

U režimu podijeljenog ekrana možete da podesite veličinu podijeljenog ekrana prevlačenjem | u sredini dva ekrana. Ili zamijenite mjesta dvama ekranima tako što ćete dva puta dodirnuti |.

Izlaženje iz režima podijeljenog ekrana

U režimu podijeljenog ekrana možete da prevučete | do ivice ekrana.

2 O tabletu.....

2.1 Uključivanje/isključivanje

 
Da biste uključili uređaj, zadržite dugme za **Uključivanje** dok se tablet ne uključi. Otključajte svoj tablet (koristeći ništa, prevlačenje, šablon, PIN, lozinku, ili prepoznavanje lica) ako je potrebno. Kada je otključan, prikazaće se Početni ekran.

Ako ne znate svoj PIN kod ili ste ga zaboravili, kontaktirajte Korisničku podršku. Radi bezbjednosti, nemojte da čuvate svoj PIN kod u tabletu.

Da biste isključili uređaj, pritisnite dugme za **Uključivanje** i dugme za **Pojačavanje zvuka** dok se ne pojave opcije, a potom izaberite **Isključi**.

Punjenje

Prikopčajte mali kraj kabla za punjenje u priključak za punjenje i uključite punjač u utičnicu.

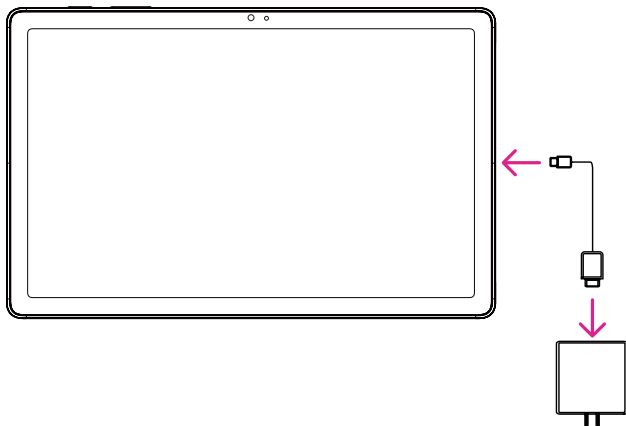

- Prikopčajte USB-C kabel u priključak za punjenje kako je prikazano.
- Uključite punjač u utičnicu.

Napomena: Molimo vas da koristite USB-C kabel koji se nalazi u kutiji. Punjač se prodaje odvojeno. Korišćenjem pogrešnog kabla i punjača možete da oštetite priključak za punjenje ili smanjite učinak baterije.

2.2 Baterija


Aktivirajte ova prilagođavanja kako bi životni vijek baterije bio optimalan.

Uključite režim uštede baterije

- Idite na **Podešavanja > Baterija > Ušteda baterije**.
- Dodirnite **Koristi uštedu baterije > UKLJUČI** da aktivirate režim uštede baterije.

Napomena: Režim uštede baterije neće biti aktiviran tokom punjenja.

Smanjite jačinu osvijetljenosti ekrana

- Idite na **Podešavanja > Ekran > Jačina osvijetljenosti**.
- Smanjite osvijetljenost prevlačenjem  ulijevo.


Vremensko ograničenje ekrana

- Idite na **Podešavanja > Ekran > Vremensko ograničenje ekrana**.
- Izaberite trajanje vremenskog ograničenja ekrana.

3 Personalizujte svoj tablet

3.1 Jezik

Izaberite između više jezika koje vaš telefon podržava.

- Idite na **Podešavanja > Sistem > Jezici i unos > Jezici**.
- Dodirnite + **Dodaj jezik** da izaberete jezik iz liste.
- Dodirnite i zadržite  pored jezika koji želite i prevucite ga na vrh liste.

3.2 Datum i vrijeme

Idite na **Podešavanja > Sistem > Datum i vrijeme**.

Koristite vrijeme koje pruža mreža


Dodirnite **Automatski podesi vrijeme** da pronađete . Izaberite između:

- Koristite vrijeme koje pruža mreža
- Koristite vrijeme koje pruža GPS
- Isključeno

Ako izaberete **Isključeno**, možete ručno da podesite datum i vrijeme:

- Dodirnite **Podesi datum** da otvorite dijalog u kojem možete ručno da podesite datum.
- Dodirnite **Podesi vrijeme** da otvorite dijalog u kojem možete ručno da podesite vrijeme.



Automatska vremenska zona

Uključite  da omogućite vremensku zonu koju pruža mreža. Možete i da uključite opciju **Koristi lokaciju za podešavanje vremenske zone** da dozvolite da se vrijeme na tabletu poklapa sa lokalnim vremenom.

Ako je Automatska vremenska zona isključena, vremensku zonu možete ručno da podesite:

- Dodirnite **Izaberi vremensku zonu** da ručno izaberete region i vremensku zonu.

Koristite lokalno zadato

- Uključite  da omogućite lokalno zadato.
- Ako je isključena opcija **Koristite lokalno zadato**, možete da uključite  da uključite **24-časovni format**.

3.3 Ekran

Prilagodite podešavanja ekrana i pozadina kako bi vam iskustvo bilo optimalno.

Idite na **Podešavanja > Ekran** da promijenite sljedeća podešavanja.

Zaključani ekran

Prilagodite šta se prikazuje na vašem zaključanom ekranu.

Tamna tema

U tamnoj temi se koristi crna pozadina i to pomaže da baterija duže trana na nekim ekranima.

Noćno svjetlo

U ovom režimu boja vašeg ekrana dobija žutu nijansu. Time se olakšava gledanje u ekran ili čitanje pri slabom svjetlu i može da vam pomogne da lakše zaspate.

Automatsko okretanje ekrana

Izaberite da li će se ekran automatski okretati ili ne.

Napomena: Korišćenjem vašeg uređaja u pejzažnom položaju dok nosite polarizovane naočare za sunce može blokirati svjetlo na ekranu.

Skinite polarizovan naočare za sunce ili uređaj koristite u portretnom položaju kako bi nastavili sa upotrebom.

3.4 Pozadina

- Dodirnite Fotografije kako biste izabrali između fotografija sačuvanih na vašem uređaju.
- Dodirnite **Podešavanja > Pozadina i stilovi** da promijenite pozadinu svog zaključanog i/ili početnog ekrana koristeći unaprijed dodate fotografije.

3.5 Zvuk

Podešavanje jačine zvuka

- Pritisnite dugmad za pojačavanje/utišavanje zvuka koja se nalaze sa desne strane uređaja kako biste podesili jačinu zvona i obavještenja.
- Takođe možete da odete na **Podešavanja > Zvuk** kako biste podesili jačinu zvuka za medije, alarm i obavještenja.

Podešavanje ostalih zvukova

Svi drugi zvukovi koji su u vezi sa obavještenjima, medijima, alarmima, zaključavanjem ekrana, punjenjem i dodirivanjem mogu da se podese na sljedeći način:

Idite na **Podešavanja > Zvuk**.

3.6 Digitalna dobrobit i roditeljske zabrane

- Idite na **Podešavanja** i dodirnite **Digitalna dobrobit i roditeljske zabrane** da saznate koliko vremena ste proveli na tabletu pa čak i u svakoj aplikaciji. Možete da prilagodite vremensko ograničenje za korišćenje tableta.
- Pored toga, roditelji mogu da ograniče vrijeme korišćenja telefona za svoju djecu i da kontrolišu njihove navike pregledanja.

3.7 Pokreti

Kretanje kroz sistem možete da promijenite tako što ćete otići u **Podešavanja > Sistem > Pokreti > Kretanje kroz sistem** i onda da izaberete jednu vrstu kretanja.

Kretanje putem pokreta

Dodirnite **Kretanje putem pokreta** da uključite različite pristup različitim interfejsima prevlačenjem preko ekrana tableta.

- Idite na interfejs nedavno korišćenih aplikacija: prevucite nagore sa dna ekrana i zadržite.
- Idite na početni ekran: prevucite nagore sa dna ekrana.
- Idite nazad: prevucite ili sa lijeve ili desne ivice ekrana.

Kretanje pomoću tri prsta

Dodirnite **Kretanje pomoću tri prsta** da prikazete sljedeću dugmad u dnu ekrana.

■ Dugme za nedavno korišćene aplikacije

- Dodirnite da biste vidjeli nedavno korišćene aplikacije. Prevucite nagore na ekranu da sklonite konkretan umanjeni prikaz iz liste ili prevucite skroz nalijevo i dodirnite **ZATVORI SVE** da sklonite sve umanjene prikaze iz liste.
- Pritiskom na **Nedavno korišćene aplikacije** takođe se omogućava pristup **Snimcima ekrana**. Dodirnite **Snimak ekrana** da odmah napravite snimak onoga što je na ekranu.


● Dugme za Početni ekran

- Dok ste u bilo kojoj aplikaciji ili ekranu, dodirnite da se vratite na Početni ekran.
- Dodirnite i zadržite da pokrenete Google asistenta pomoću kog možete da potražite informacije na internetu, otvorite aplikacije na svom tabletu ili da pošaljete poruke.

◀ Dugme za kretanje nazad

Dodirnite da biste se vratili na prethodni ekran ili da biste zatvorili polje za dijalog, meni sa opcijama ili panel sa obavještenjima.

3.8 Više korisnika

Svoj tablet možete da podijelite sa drugim korisnicima tako što ćete otići u **Podešavanja > Sistem > Više korisnika** i uključiti .

Vidjećete sljedeće ponuđene opcije.

- Vi (vlasnik): Dodirnite i možete podesiti podatke o svom profilu.
- Dodaj gosta: Dodirnite da kreirate novog gosta i dovršite ostala podešavanja.
- Dodaj korisnika: Dodirnite da dodate novog korisnika i dozvolite mu da podesi svoj prostor.

Napomena: Dodirnite Dodaj korisnike sa zaključanog ekrana da dozvolite dodavanje korisnika na zaključanom ekranu.

3.9 Rezervna kopija i vraćanje na fabrička podešavanja

- Da prebacite podatke sa svog telefona na drugi, idite u **Podešavanja > Sistem > Rezervna kopija > Napravi rezervnu kopiju na Google disku**, a onda morate da podesite svoj nalog za rezervnu kopiju.
- Da izbrisete sve podatke sa svog uređaja, idite u **Podešavanja > Sistem > Opcije resetovanja > Izbrisi sve podatke (vraćanje na fabrička podešavanja) > Izbrisi sve podatke > Izbrisi sve podatke**. Tablet će se zatim ponovo pokrenuti.

4 Aplikacije



4.1 Kontakti

 
Kontakti omogućavaju brz i lak pristup kontaktu kojeg želite da kontaktirate.

Da biste pristupili ovoj funkciji, dodirnite Kontakti  u meniju Aplikacije.

Možete da pregledate i kreirate kontakte na svom tabletu i da ih sinhronizujete sa Gmail kontaktima ili drugim aplikacijama na internetu ili na svom tabletu.

Dodavanje kontakta

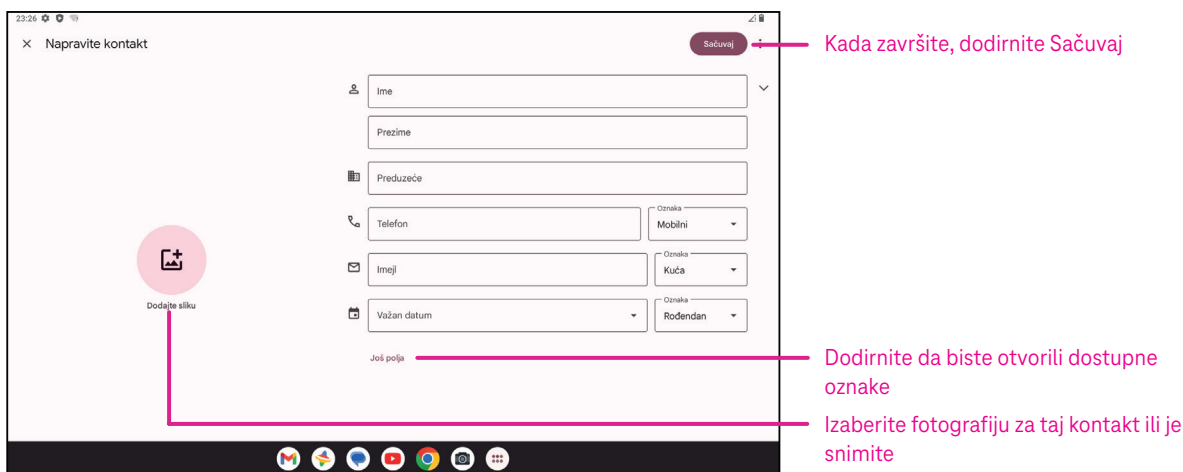

- Dodirnite  na listi kontakata da kreirate novi kontakt.
- Unesite ime kontakta i druge podatke o kontaktu.
- Kada završite, dodirnite **Sačuvaj**.
- Da izađete bez čuvanja, možete da dodirnete  i onda da dodirnete **Odbaci**.



Uređivanje vaših kontakata




Dodirnite  na ekranu sa pojedinostima o kontaktu da biste uredili. Kada završite, dodirnite **Sačuvaj**.

Dodavanje/izbacivanje iz Omiljenih⁽¹⁾

- Dodirnite kontakt da pogledate pojedinosti, a onda dodirnite  da dodate kontakt u omiljene.
- Dodirnite  ponovo da uklonite kontakt iz omiljenih.

Brisanje kontakta

Na ekranu sa listom kontakata:

- Dodirnite i zadržite kontakt koji želite da izbrisete, a onda dodirnite  i **Izbriši** da biste izbrisali.
- Dodirnite  > **Izaberi** da izaberete kontakte, a onda dodirnite  i **Izbriši** da biste izbrisali izabrane kontakte.


Na ekranu sa detaljima kontakata:

- Dodirnite  a potom izaberite **Izbriši**. Izaberite **Izbriši** kada se od vas zatraži da potvrdite.



Kontakt koji ste izbrisali će se takođe izbrisati iz drugih aplikacija na tabletu ili internetu sljedeći put kada sinhronizujete svoj tablet.

Dijeljenje kontakta

Možete da podijelite pojedinačni kontakt sa drugima slanjem vCard kontakta putem Poruka, E-pošte i Bluetoothom. Izaberite kontakt koji želite da podijelite, dodirnite  i potom izaberite **Podijeli**.

Dostupne opcije

Iz liste kontakata možete da izvršite dodatna podešavanja dodirom na **Popravi i upravljaj**.

Uvoz iz datoteke/Izvoz u datoteku:

Uvoz/Izvoz

Uvezite ili izvezite kontakte između tableta, SIM kartice, microSD kartice ili memorije tableta.

Podešavanja:

- | | |
|---|--|
| • Vaše informacije | Dodirnite da podesite svoj profil. |
| • Nalozi | Dodirnite da dodate nalog i konfigurirate odgovarajuće informacije. |
| • Poredaj po | Dodirnite da poredate listu po imenu ili prezimenu. |
| • Format imena | Dodirnite da izaberete da li će se prvo prikazati ime ili prezime. |
| • Tema | Dodirnite da izaberete temu ekrana u aplikaciji za kontakte. |
| • Podrazmijevani nalog za nove kontakte | Dodirnite da izaberete podrazumijevano mjesto za čuvanje novog kontakta. |
| • Fonetsko ime | Dodirnite da izaberete da se prikaže ili sakrije fonetsko ime. |

4.2 Poruke

 
Koristite aplikaciju za poruke  da šaljete i primete tekstualne (SMS) ili multimedijalne (MMS) poruke.

Pisanje poruka

Na ekranu sa listom poruka dodirnite  da napišete tekstualne/multimedijalne poruke.

Slanje tekstualnih poruka

- Unesite ime, broj telefona ili adresu e-pošte primaoca u polje **Za** ili dodirnite 👤+ da dodate primaoca.
- Dodirnite polje **Tekstualna poruka** da unesete tekst poruke.
- Dodirnite i zadržite 😊 da pristupite emotikonima.
- Kada ste završili, dodirnite ➤ da pošaljete tekstualnu poruku.

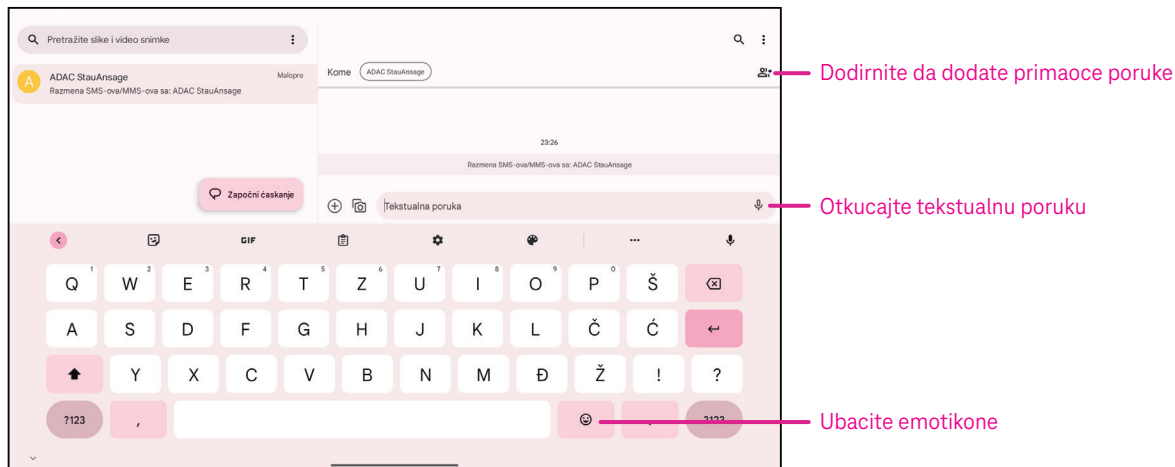

SMS poruka duža od 160 karaktera naplaćuje se kao više SMS poruka. Brojač se nalazi sa desne strane polja za tekst da vas podsjeti koliko karaktera može da se unese u jednoj poruci.



Posebna slova (sa dijakritičkim znakovima) takođe povećavaju veličinu SMS poruke te se primaocu možda pošalje više SMS poruka.

Slanje multimedijalnih poruka

MMS vam omogućava da pošaljete video snimke, fotografije, audio zapise i vCard na druge kompatibilne mobilne telefone i adrese e-pošte.

- Unesite broj telefona primaoca u polje **Za**.
- Dodirnite polje **Tekstualna poruka** da unesete tekst poruke.
- Dodirnite ⊕ da ubacite emotikone, svoju lokaciju, kontakt ili dokument; Dodirnite 📷 da izaberete fotografiju ili video.
- Kada ste završili, dodirnite ➤ da pošaljete multimedijalnu poruku.

Upravljanje porukama

Kada primite poruku, 👤 će se pojaviti na Statusnoj traci kao obavještenje. Povucite nadole Statusnu traku da otvorite Panel sa obavještenjima, dodirnite novu poruku da je otvorite i pročitate. Takođe možete da otvorite aplikaciju za poruke i dodirnete poruku da je otvorite.

Poruke se prikazuju u vidu razgovora.

 
Dodirnite poruku da otvorite ekran za sastavljanje poruka:

- Dodirnite ⋮ da sačuvate taj broj u kontakte, pogledate detalje o kontaktu, arhivirate ili izbrisete poruku,
- Da odgovorite na poruku, unesite tekst. Kada ste završili, dodirnite ➤.
- Ako poruku dodirnete i zadržite, biće dostupne sljedeće opcije: 📄 kopiraj, 🗑️ izbrisi, 👁️ vidi detalje, ☆ dodaj u omiljene.

4.3 Gmail

Podešavanje Gmail-a

Da podesite svoj nalog za e-poštu, prevucite nagore na početnom ekranu i potom izaberite Gmail.

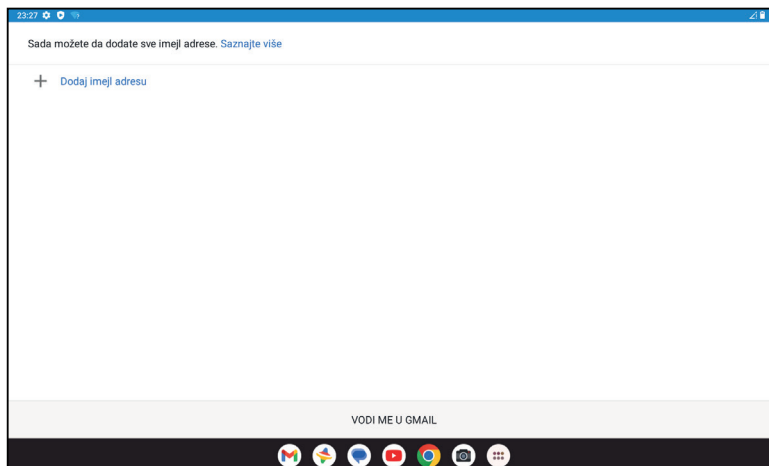

- Izaberite **+** da dodate adresu e-pošte.
- Postupak za podešavanje e-pošte će vas voditi kroz korake da podesite svoj nalog za e-poštu.
- Izaberite vrstu naloga za e-poštu koji imate i unesite adresu e-pošte i lozinku za nalog koji želite da podesite.
- Ako vaš mobilni operater u uređaju ne omogućava nalog koji ste unijeli, dodirnite **Drugo** i unesite adresu e-pošte, dodirnite **SLJEDEĆE** da izaberete vrstu naloga i unesete lozinku za svoju e-poštu, potom tačno unesite server i port u interfejsu Podešavanja dolaznog servera i u interfejsu Podešavanja odlaznog servera. Dodirnite **Završi** da dovršite podešavanje.
- Da dodate još jednu nalog za e-poštu, kliknite **+ Dodaj adresu e-pošte**. Izaberite Drugo iz opcija za podešavanje e-pošte. Ili možete da dodirnete ime naloga u gornjem desnom uglu i izaberete **Dodaj još jedan nalog** da primijenite ovu funkciju (ovo nije dostupno ako se niste prijavili u Google).


Slanje e-pošte

 
- Dodirnite **Compose** na ekranu Prijemno sanduče.
- Unesite adresu(e) e-pošte primaoca(laca) u polje **Za**.
- Ako je potrebno, dodirnite **>Cc/Bcc** da poruci dodate kopiju ili skrivenu kopiju.
- Unesite naslov i sadržaj poruke.
- Dodirnite **📎** da dodate prilog.
- Ako ne želite odmah da pošaljete e-poštu možete da dodirnete **📌** i **Sačuvaj nacrt** ili dodirnite dugme Nazad da sačuvate kopiju.
- Dodirnite **➤** da pošaljete.
- Ako ne želite da pošaljete ili sačuvate e-poštu, možete da dodirnete **📌** i da onda izaberete **Odbaci**.
- Da dodate potpis koji će se nalaziti u svim vašim porukama e-pošte, dodirnite **📌** i izaberite **Podešavanja**, a onda izaberite nalog za koji želite da kreirate ili izmijenite potpis, dodirnite **Mobilni potpis** da biste uredili.

4.4 Kalendar

Kako biste vodili računa o važnim sastancima, okupljanjima i drugom, možete da koristite Kalendar. Da pristupite ovoj funkciji, prevucite nagore na Početnom ekranu, a onda dodirnite **Kalendar**.



Pregledanje kalendara

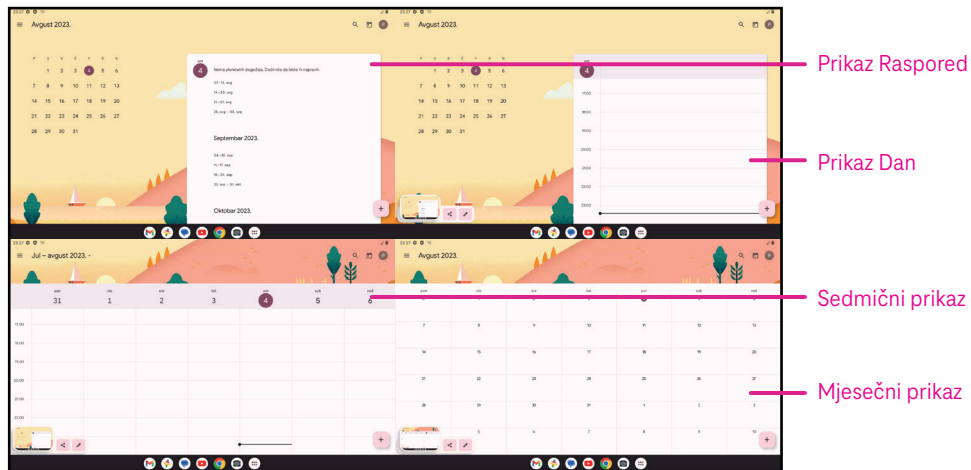
Kalendar se može prikazati po prikazima Raspored, Dan, Sedmica ili Mjesec. Dodirnite  i izaberite željeni prikaz kalendara.





Kreiranje novog događaja

Nove događaje možete da dodate u bilo kom prikazu Kalendara.

- Dodirnite .
- Popunite sve neophodne informacije za taj novi događaj. Ako je u pitanju cjelodnevni događaj, možete da uključite  na Cijeli dan.
- Pozovite goste na taj događaj. Unesite adrese e-pošte odvojene zarezima i tačkama koje želite da pozovete na događaj. Gosti će dobiti pozivnicu iz Kalendara i E-pošte.
- Kada ste završili, dodirnite **Sačuvaj** gore na ekranu.

Da brzo kreirate događaj u prikazima Dan, sedmica ili mjesec dodirnite prazno mjesto da izaberete ciljano područje koje će onda promijeniti u , a onda dodirnite ikonu da kreirate novi događaj.

Brisanje ili uređivanje događaja

- Da izbrisete ili uredite događaj, dodirnite događaj da uđete u ekran sa pojedinostima, a onda dodirnite  da uredite događaj.
- Dodirnite  i **Izbriši** da uklonite događaj, ili **Dupliraj** da kopirate događaj.

Podsjetnik za događaje

Ako je za događaj podešen podsjetnik, predstojeći događaj će se pojaviti na početnom ekranu.



- Dodirnite naziv događaja da vidite listu obavještenja od Kalendara.

4.5 Kamera

Pristupanje kameri

Na početnom ekranu dodirnite **Kamera**.




Snimanje fotografije

- Kadrirajte objekat ili pejzaž u tražilu, a onda dodirnite ekran da fokusirate ako je potrebno.
- Dodirnite  da snimate fotografiju koja će se automatski sačuvati.
- Da snimate uzastopne fotografije, dodirnite i zadržite .








- | | |
|---|--|
| 1 Pristupite više opcija | 8 Izaberite režim uljepšavanja |
| 2 Izaberite veličinu snimka | 9 Prebacujte sa prednje na kameru sa zadnje strane |
| 3 Podesite sekunde odbrojavanja | 10 Snimate fotografiju |
| 4 Izaberite HDR režim | 11 Pregledajte fotografije ili video snimke koje ste snimili |
| 5 Izaberite režim blica da izaberete režim blica: Isključen, Auto, Uključen ili Uvijek | 12 Izaberite režim filtera za snimanje: FOKUS UŽIVO, VIDEO SLIKA, PRO, PANORAMA |
| 6 Izaberite filter | |
| 7 Podesite udaljenost snimanja | |

Snimanje video snimka

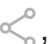- Dodirnite **VIDEO** da uđete u Video režim.
- Dodirnite  u sredini ekrana da počnete video snimanje.
- Možete takođe da dodirnete  da snimate fotografiju tokom video snimanja.
- Dodirnite  da zaustavite snimanje. Video snima će se automatski sačuvati.

Pregledanje, Uređivanje i Dijeljenje

- Dodirnite , a onda izaberite način poput **Poruke** da podijelite fotografiju ili video snimak.
- Dodirnite  da uredite.
- Dodirnite  da potražite ono što vidite pomoću aplikacije Google Lens.
- Dodirnite  da izbrišete.
- Dodirnite  da se vratite na režim Kamere.




4.6 Fotografije

Aplikacija Fotografije služi kao media plejer pomoću kog pregledate fotografije i puštate video snimke. Fotografije i video snimci se prikazuju po momentima i albumima u aplikaciji Fotografije.

- Direktno dodirnite fotografiju/video snimak da pregledate ili pustite.
- Prevucite lijevo/desno da pregledate prethodnu ili sljedeću fotografiju/video snimak.

Rad sa fotografijama

Sa fotografijama možete da radite rotirajući ili opsijecajući ih, dijeleći ih sa prijateljima, postavljenjem za fotografiju kontakta ili kao pozadinu, itd.

- Pronađite fotografiju na kojoj želite da radite i dodirnite fotografiju u pregledu preko cijelog ekrana.
- Dodirnite  da podijelite fotografiju ili dodirnite  da fotografiju izbrišete. Dodirnite  i izaberite **Koristi kao** da fotografiju postavite kao fotografiju kontakta ili kao pozadinu.





Dodirnite  da uđete u ekran za uređivanje.

Prijedlozi	Izaberite Poboljšaj, Toplo ili Hladno da podesite boju fotografije.
Opsijeci	Izaberite između Auto, Opsijeci, Rotiraj, Pregledaj i Poništi.
Podesi	Upravljaj osvjetljenošću, kontrastom i još toga.
Filteri	Izaberite između različitih kao što su Vivid, West, Palma i još toga.
Označi	Personalizujte svoju fotografiju crtanjem po njoj ili dodavanjem riječi na nju.




4.7 Sat





Da pristupite Satu, prevucite nagore na Početnom ekranu, a onda dodirnite Sat.

Podešavanje vremena u svijetu







- Dodirnite  na ekranu sata.
- Dodirnite  da dodate vremensku zonu.

Podešavanje alarma






- Dodirnite  na ekranu sata.
- Uključite  da omogućite postojeći alarm ili dodirnite  da dodate novi alarm. Pojaviće se sljedeće opcije:

	Dodaj oznaku	Dodirnite da odredite naziv alarma.
	Zakaži alarm	Dodirnite da izaberete datum kada će alarm biti podešen.
	Zvuk zvona	Dodirnite da izaberete zvuk zvona za alarm.
	Odbaci	Dodirnite da odbacite alarm.
	Izbriši	Dodirnite da izbrišete alarm.

Podešavanje tajmera

- Dodirnite  na ekranu sata.
- Unesite vrijeme po redoslijedu sekunde, minute, sati.
- Dodirnite  da započnete Odbrojavanje.
- Dodirnite  da dodate još jedan tajmer u panelu.
- Dodirnite  da završite Odbrojavanje.
- Dodirnite  da započnete Odbrojavanje.
- Dodirnite  da izbrišete odbrojavanje trenutnog tajmera.

Podešavanje štoperice

- Dodirnite  na ekranu sata.
- Dodirnite  da započnete tajmer.
- Dodirnite  da se prikaže lista rekorda prema ažuriranom vremenu.
- Dodirnite  da zaustavite ukupno i vremena po krugu.
- Dodirnite  da započnete novi tajmer.

Vrijeme spavanja

Odredite vrijeme spavanja kako biste utišali svoj tablet i izabrali da slušate umirujuće zvukove. Odredite vrijeme buđenja da ponovo primete obavještenja.

5 Google aplikacije

Google aplikacije su unaprijed instalirane na vašem tabletu radi unapređenja efikasnosti rada i da pruže prijatno korisničko iskustvo.

Ovo uputstvo ukratko predstavlja te aplikacije. Za detaljne karakteristike i korisničke priručnike, pogledajte odgovarajuće internet stranice ili uvod dat u tim aplikacijama.

Registrujte se pomoću Google naloga da uživate u punoj funkcionalnosti.



Google

Vaše omiljene stranice, istorija pregledanja i podešavanja na svim uređajima na kojima je pregledač instaliran mogu se sinhronizovati preko vašeg Google naloga.



Gmail

Kao servis preko interneta za e-poštu kompanije Google, Gmail je konfigurisan kada prvi put podesite svoj tablet. Pomoću ove aplikacije možete da šaljete i primite e-poštu, upravljate e-porukama i oznaka, da ih arhivirate i još toga. E-pošta se može automatski sinhronizovati sa vašim Gmail nalogom.



Mape

Google Mape nude satelitski prikaz, ulične mape, panoramski prikaz ulica od 360°, uslove u saobraćaju u realnom vremenu i planiranje putanje kada putujete pješke, automobilom ili javnim prevozom. Koristeći ovu aplikaciju možete da pronađete svoju lokaciju, potražite neko mjesto i dobijete prijedloge isplaniranih putanja za vaša putovanja.



YouTube

YouTube je internet aplikacija za dijeljenje video snimaka na kojoj korisnici mogu da postavljaju, pregledaju i podijele video snimke. Dostupni sadržaj podrazumijeva video klipove, TV klipove, muzičke spotove i drugi sadržaj kao što su video blogovi, kratki originalni video snimci i obrazovni video snimci. Aplikacija podržava funkciju striminga koja vam omogućava da počnete da gledate video snimak skoro u isto vrijeme kad se oni počnu preuzimati sa interneta.



Disk

Servis za čuvanje datoteka i sinhronizaciju koji je kreirao Google i koji korisnicima omogućava da čuvaju datoteke u oblaku, da dijele i uređuju datoteke. Datoteke na Disku se bezbjedno čuvaju i može im se pristupiti sa bilo kog uređaja prijavljivanjem na Google nalog. Datoteke i folderi se mogu privatno dijeliti sa drugim korisnicima Google naloga.



Meet

Ovo je mobilna aplikacija za video razgovore koja korisnicima omogućava da upute video pozive ljudima iz svoje liste kontakata nakon što su njihovi brojevi telefona potvrđeni.



Fotografije

Google Fotografije čuva i pravi rezervnu kopiju vaših fotografija i video snimaka. Takođe automatski analizira fotografije i organizuje ih po grupama tako da možete lako da pronađete fotografije koje su vam potrebne.



Chrome

Uživajte u surfovanju internetom koristeći pregledač Chrome.



YT Music

YT Music Downloader je program kompanije Windows koji pojednostavljuje preuzimanje video snimaka i muzike sa YouTube-a. YT Music Downloader vam omogućava da preuzmete video snimke i/ili audio snimke sa YouTube-a. Program je usmjeren na muziku tako da možete da sačuvate muzičke spotove (ili bilo koje video snimke) ili konvertujete te video snimke samo u muzički zapis i aplikacija će ih automatski sačuvati u MP3 formatu. Kada mu date odgovarajući YouTube link, program vrlo brzo konvertuje i čuva te stavke kao datoteku i kada završi imate pristup toj muzici bez povezivanja na internet kao i na bilo kojem drugom uređaju na koji te datoteke prebacite.



Play prodavnica

Služi kao zvanična prodavnica aplikacija za operativni sistem Android i omogućava korisnicima da pregledaju i preuzimaju aplikacije i igre. Aplikacije su ili besplatne ili se naplaćuju.



Files

Aplikacija Files prikazuje sve podatke sačuvane na tabletu, uključujući i spoljašnju SD karticu i internu memoriju, kao što su aplikacije, medijske datoteke preuzete sa Google Play prodavnice, YouTube-a ili drugih mjesta; video zapise, fotografije ili audio snimke koje ste snimili; ostale podatke poslate preko Bluetooth-a, USB kabelom, itd.



Pomoćnik

Google Pomoćnik vam pomaže da lakše obavite svakodnevne zadatke. Podesite podsjetnike, dobijete brze odgovore, pronađete pu pomoću Google Mape i još toga dok ste u pokretu uz pomoć Google Pomoćnika.



Digitron

Digitron možete da koristite da sabirate, oduzimate, množite i dijelite brojeve. Takođe možete podići broj na potenciju, pronaći kvadratni korijen broja, dodati i oduzeti određeni postotak, pa čak i pronaći postotak broja.



Kalendar

Možete kreirati koliko god kalendara želite i podijeliti ih sa svojim prijateljima. A kalendar će vam pokazati vaš raspored kako bi vam pomogao da lako organizujete svoje vrijeme.



Sat

Sat vam pomaže da razumno upravljate svojim vremenom. Možete da podešavate alarme, odbrojanja i tako dalje.



Kontakti

Ovo je mjesto za čuvanje kontakata.



Pronalaženje uređaja

Omogućava vašem uređaju da zaključate ili izbrišete izgubljen uređaj.



Google One

Aplikacija Google One vam omogućava da napravite rezervnu kopiju svog talbeta i upravljate memorijom svog Google naloga.



Google TV

Google TV vam olakšava da na jednom mjestu pronađete zabavu koju volite i uživajte u njoj. Uz pomoć Google TV možete da: Pronađete šta ćete sledeće da gledate.



Home

Uz pomoć Google Home možete da stvorite organizovaniji i personalizovani pametni dom. Podesite, upravljajte i kontrolišite svoje Google Nest, Wifi, ili druge kompatibilne pametne kućne proizvode kao što su svetla, kamere i još toga.



Kids space

Kids space pruža obrazovne savjete za djecu. Aplikacija podrazumijeva poznate crtane filmove, obrazovne aktivnosti i igre.



Poruke

Šaljite SMS i MMS poruke. Sa svojim kontaktima možete da podijelite neograničen broj poruka, fotografija, video snimaka, dokumenata, emotikona i još toga.



Play Books

Prikazuje vam različite vrste e-knjiga tako kda možete čitati ili preuzeti neke e-knjige koje vam se sviđaju. Tokom čitanja možete i označiti neke rečenice koje vam se sviđaju.



Novčanik

Korisnicima omogućava da pomoću tableta plate robu u maloprodajnim radnjama. Google Novčanik podržava kartice lojalnosti i poklon kartice, kao i plaćanja između pojedinaca putem Gmail-a.



YT Kids

Aplikacije napravljena samo za djecu koja podrazumijeva sve vrste video snimaka za svu djecu. Dostupne su i roditeljske kontrole kako biste podesili nivoe pristanka prema uzrastu.



Bezbjednost

Aplikacija o podešavanjima bezbjednosti. Ovdje možete da podesite reagovanje u hitnim situacijama, detekciju i upozorenja, kontakt podatke za hitne situacije i još toga.

6 Bezbjednost

6.1 Zaključavanje ekrana

Prevucite nagore na Početnom ekranu, pristupite **Podešavanjima** iz liste za traženje aplikacije. Idite na **Bezbjednost** > **Zaključavanje ekrana**.

Zaključavanje ekrana vam omogućava da obezbijedite svoj tablet da ga ne koriste drugi bez vaše dozvole. Uključite sljedeće bezbjednosne opcije: Šablon, PIN ili lozinka. Ko god da uključi vaš tablet, tražiće mu se da otključa ekran kako bi pristupio uređaju. Vaš uređaj može da otključa bilo ko ako izaberete Nijedan ili Prevlačenje.

6.2 Otključavanje prepoznavanjem lica

Otključavanje prepoznavanjem lica vam omogućava da otključate svoj uređaj pomoću podataka o vašem licu. Podesite ih prateći korake na ekranu. Vodite računa da ste licem okrenuti prema ekranu kada koristite prepoznavanje lica.

Napomena: morate da podesite šablon, PIN ili lozinku prije korišćenja otključavanja prepoznavanjem lica.

6.3 Pametno zaključavanje

U **Još podešavanja bezbjednosti**, ova funkcija podrazmijevano nije uključena; morate da podesite zaključavanje ekrana da biste je uključili. Ako je pametno zaključavanje uključeno, vaš uređaj ostaje zaključan kada se bezbjedno nalazi kod vas.

6.4 Zaključavanje SIM kartice

U **Još podešavanja bezbjednosti**, PIN SIM kartice sprečava pristup mobilnim mrežama. Kada je uključeno, svaki uređaj u kom postoji SIM kartica će tražiti PIN nakon ponovnog pokretanja. SIM PIN nije isto što i šifra za zaključavanje kojom se uređaj otključava.

6.5 Enkripcija i akreditivi

Pod **Više podešavanja bezbjednosti** dodirnite da vidite status enkripcije vašeg telefona i stavke o akreditivima. Možete da izmijenite i izbrinete sve sačuvane akreditive.

7 Nalog.....

7.1 Informacije o nalogu

Informacijama o nalogu možete takođe da pristupite preko svog tableta.

- Idite na **Podešavanja > Lozinke i nalozi**.

7.2 Ažuriranje softvera

Da pristupite Ažuriranju softvera, slijedite korake ispod:

- Povežite vaš uređaj na Wi-Fi mrežu i vodite računa da je veza za prenos podataka jaka.
- Vodite računa da je baterija u potpunosti napunjena prije nego što počnete sa ažuriranjem softvera. Trenutni nivo baterije vašeg uređaja možete da pronađete na vašem uređaju pod **Podešavanja > Baterija**.
- Idite na **Podešavanja > Sistem > Ažuriranje sistema**.
- Ako želite da ažurirate sistem, dodirnite **Provjeri ima li ažuriranja** i kada se to završi, na vašem tabletu će biti najnovija verzija softvera.

8 Bezbjednosne i regulatorne informacije

Pročitajte ovo poglavlje prije korištenja svog mobilnog uređaja.

Bezbjednost i upotreba

Proizvođač se odriče bilo kakve odgovornosti za štetu koja je mogla nastati kao posljedica nepravilne upotrebe ili upotrebe suprotne uputstvima iz ovog priručnika. Korišćenje povezanih uređaja predmet je Uslova i odredbi kompanije T-Mobile.

Bezbjednost u saobraćaju

Uvijek se pridržavajte lokalnih zakona i propisa kojima se uređuje korišćenje bežičnih mobilnih uređaja i njihovih dodataka u područjima gdje se vozite. Korišćenje mobilnog uređaja tokom vožnje može da bude zabranjeno ili ograničeno u pojedinom područjima.

Uslovi korišćenja

Ne zaboravite da se pridržavate pravila lokalnih organa za korišćenje mobilnih uređaja u letilicama.

Upozorenja u vezi sa rukovanjem

Svoj mobilni uređaj koristite samo u skladu sa lokalnim zakonima i propisima i pridržavajte se svih obavještenja istaknutih na javnim mjestima.

Pročitajte i slijedite uputstva proizvođača vašeg ugradnog medicinskog uređaja. Ako imate bilo kakvih pitanja u vezi sa korišćenjem svog mobilnog uređaja zajedno sa ugradnim medicinskim uređajima, obratite se svom ljekaru.

- Preporučuje se odgovarajući nadzor kada djeca koriste vaš mobilni uređaj.
- Ne pokušavajte da rastavite svoj mobilni uređaj. Garancije prestaje da važi ako rastavite svoj mobilni uređaj.
- Uvijek pažljivo rukujte svojim mobilnim uređajem i držite ga na čistom mjestu bez prašine.
- Ne dopustite da vaš mobilni uređaj bude izložen nepovoljnim vremenskim ili uslovima u životnoj sredini (vlaga, vlažan vazduh, kiša, prodor tečnosti, prašine, morskog vazduha, itd.). Opseg radne temperature koju preporučuje proizvođač je od 0° C (32° F) do +40° C (104° F)
- **Napomena: Maksimalna vrijednost zavisi od stanja uređaja, materijala u njegovoj okolini i od boje i teksture kućišta.**
- Na temperaturi preko 40° C (104° F) čitljivost na ekranu mobilnog uređaja može da bude smanjena, ali to je privremeno i nije ništa ozbiljno.
- Ne otvarajte i ne pokušavajte da ofarbate ili popravite svoj mobilni uređaj.
- Nemojte da ga ispuštate, bacate ili pokušate da savijete svoj mobilni uređaj.
- Mobilni uređaj nemojte da koristite ako je keran oštećen, napukao ili je polomljen kako biste izbjegli povredu.
- Koristite samo baterije, punjače i dodatnu opremu koje preporučuje proizvođač uređaja i njegova povezana lica i koji su kompatibilni sa vašim modelom mobilnog uređaja. Proizvođač uređaja i njegova povezana lica odriču se odgovornosti za štetu koja je nastala korišćenjem drugih punjača ili baterija.

Provjerite lokalne zakone i propise koji su na snazi u mjestu gdje živite kako biste saznali koji je najbolji način za odlaganje vašeg mobilnog uređaja.



ZAŠTITIE SVOJ SLUH

Kako biste spriječili eventualno oštećenje sluha, ne slušajte na visokim nivoima jačine zvuka u dužem vremenskom periodu. Budite oprezni dok držite svoj uređaj blizu uva kada koristite zvučnik.

Privatnost

Vodite računa morate da poštujuete zakone i propise svoje države ili drugih države(a) u kojoj ćete koristiti svoj mobilni uređaj za fotografisanje i snimanje zvukova svojim mobilnim uređajem. U skladu sa tim zakonima i propisima, može da bude strogo zabranjeno da snimate fotografije i/ii da snimate glasove drugih ljudi ili bilo koje druge lične attribute i da ih puštate i distribuišete, jer to može da se smatra narušavanjem privatnosti.

Isključiva je odgovornost korisnika da obezbijedi prethodno odobrenje, ako je potrebno, za snimanje privatnih ili povjerljivih razgovora ili fotografisanje drugih osoba; proizvođač, prodavac ili dobavljač vašeg mobilnog uređaja (uključujući operatera) se odriču svake odgovornosti koja može nastati zbog nepravilne upotrebe mobilnog uređaja.

Pravne informacije

Kako bismo vam omogućili bolji pristup ovim važnim informacijama, ovim materijalima se može pristupiti iz menija Podešavanja na vašem tabletu. Pogledajte ove materijale prije korištenja svog mobilnog uređaja. Kako biste pristupili ovim materijalima na vašem mobilnom uređaju, prevucite nagore na početnom ekranu i dodirnite **Podešavanja > O tabletu > Pravne informacije** i izaberite temu.

Regulatorni podaci (e-oznaka)

Vaš mobilni uređaj koristi elektronsku oznaku (e-oznaku) koja sadrži regulatorne informacije o vašem uređaju. Da biste vidjeli regulatorne informacije za ovaj uređaj na uređaju, prevucite nagore na početnom ekrane, a zatim dodirnite **Podešavanja > O telefonu > Regulatorne oznake**.



Ovaj tablet je testiran i klasifikovan za upotrebu sa slušnim aparatima za neke od bežičnih tehnologija koje tablet koristi. Međutim, u ovom tabletu se mogu koristiti i druge bežične tehnologije koje nisu testirane za upotrebu sa slušnim aparatima. Važno je da temeljno i na različitim lokacijama isprobate različite funkcije svog tableta da biste utvrdili da li čujete bilo kakvu ometajuću buku kada koristite ovaj tablet sa slušnim aparatom ili kohlearnim implantom. Konsultujte se sa svojim provajderom bežičnih usluga o njegovim pravilima za vraćanje i zamjene, kao i za informacije o kompatibilnosti slušnih aparata.

Na vašem uređaju postoji radio odašiljač i prijemnik. Dizajniran je i proizveden tako da ne prekoračuje ograničenja za izlaganje radio frekvenciji (RF) koje je odredio CONFORMITE EUROPEENNE (CE). Ograničenja za izlaganje RF koje je odredio CE za bežične mobilne uređaje koriste mjernu jedinicu koja se zove specifična stopa apsorpcije (SAR), koja predstavlja mjeru za količinu RF energije koju apsorbuje tijelo tokom korištenja mobilnog uređaja. CE ograničenje za javno izlaganje mobilnim tabletima je nivo SAR od 2,0 vata po kilogramu (2,0 W/kg). A najveća SAR vrijednost za ovaj uređaj kada je testiran blizu tijela bila je 1,34 W/kg* (10 g).

Ovaj uređaj ispunjava CE ograničenja za izlaganje radijaciji koja su određena za nekontrolisanu okolinu. Kako bi se obezbijedilo poštovanje smjernica o izlaganju RF, uređaj se mora koristiti najmanje 0 mm od tijela.

Da biste vidjeli dodatne SAR informacije na svom tabletu, prevucite nagore na početnom ekranu, potom dodirnite **Podešavanja > O tabletu > Pravne informacije > Izlaganje RF**.

Baterija i dodatna oprema

Preduzmite sljedeće mjere predostrožnosti za korištenje baterije:

- Ne pokušavajte otvoriti bateriju (zbog rizika od otrovnih isparenja i opekotina).
- Ne rastavljajte ili izazivajte kratak spoj u bateriji.
- Nemojte spaljivati ili odlagati iskorištenu bateriju u kućno smeće niti je čuvati na temperaturama iznad 45° C.
- Nemojte rastavljati ili otvarati, drobiti, savijati ili deformisati, bušiti ili sjeći.
- Nemojte modifikovati ili prepravljati, pokušavati da ubacite strane predmete u bateriju, potapati je ili je izlagati vodi ili drugim tečnostima, izlagati vatri, eksploziji ili drugim opasnostima.

Proizvodi na kojima postoji simbol ispod moraju se odnijeti na mjesta za prikupljanje po isteku njihovog radnog vijeka:



- Opštinski centri za odlaganje otpada sa posebnim kantama za ovu vrstu opreme.
- Kante za prikupljanje na mjestima prodaje.

Da saznate na koji način možete da reciklirate svoj mobilni uređaj, posjetite internet stranicu CTIA na adresi www.ctia.org/news/how-to-recycle-your-mobile-device

OPREZ: AKO BATERIJU ZAMIJENITE POGREŠNOM VRSTOM, UREĐAJ MOŽE DA EKSPLODIRA. ISKORIŠTENE BATERIJE ODLOŽITE U SKLADU SA UPUTSTVIMA.



Informacije o recikliranju

Pozovite korisničku podršku za recikliranje na broj telefona 1-855-368-0829 radi uputstava o recikliranju ili jednostavno spomenite ovo: U Sjedinjenom Državama o CTIA programu recikliranja možete više da saznate na adresi <http://www.recyclewirelessphones.com>.

Punjači

Kućni AC punjači/Putni punjači rade u temperaturnom opsegu: 0° C (32° F) do 45° C (113° F).

Zbog različitih električnih specifikacija koje se primjenjuju, punjač koji ste kupili u jednoj državi možda neće raditi u drugoj državi. Trebalo bi da ih koristite samo u ovu svrhu.

Ovim uređajem bi trebalo rukovati samo sa preporučenim punjačem(punjačima).

Putni punjač: Ulaz: 100–240 V~ 50/60 Hz 0,5 A

Izlaz: 5V 3A

Licence



Logotip microSD zaštitni je znak SD-3C, LLC.



Oznake u vidu riječi i logotipa Bluetooth® vlasništvo su kompanije Bluetooth SIG, Inc. i svako korištenje tih oznaka od strane proizvođača uređaja i njegovih povezanih lica je pod licencom. Ostali zaštitni znaci i trgovački nazivi pripadaju njihovim vlasnicima.



Logotip Wi-Fi je sertifikaciona oznaka Wi-Fi Alijanse.

9 Specifikacije

Režim	Raspon	Izlazna snaga
GSM	B2	30 dBm +/- 1 dB
	B3	30 dBm +/- 1 dB
	B5	32,5 dBm +/- 1 dB
	85	32,5 dBm +/- 1 dB
WCDMA	B1	23,5 dBm +/- 1 dB
	B2	24 dBm +/- 1 dB
	B5	23,5 dBm +/- 1 dB
	B8	23,5 dBm +/- 1 dB
LTE	LTE B1	23 dBm +/- 1 dB
	LTE B2	23,5 dBm +/- 1 dB
	LTE B3	23 dBm +/- 1 dB
	LTE B4	24 dBm +/- 1 dB
	LTE B5	23 dBm +/- 1 dB
	LTE B7	23 dBm +/- 1 dB
	LTE B8	23 dBm +/- 1 dB
	LTE B20	23 dBm +/- 1 dB
	LTE B28	23 dBm +/- 1 dB
	LTE B38	26 dBm +/- 1 dB
NR	5G N1	23 dBm +/- 1 dB
	5G N3	23 dBm +/- 1 dB
	5G N7	23 dBm +/- 1 dB
	5G N28	23 dBm +/- 1 dB
	5G N38	23 dBm +/- 1 dB
	5G N66	24 dBm +/- 1 dB
	5G N78	26 dBm +/- 1 dB
WIFI 2,4G	2,412–2,472	16 dBm +/- 1 dB
WIFI 5G	5,15–5,25	17 dBm +/- 1 dB
	5,25–5,35	17 dBm +/- 1 dB
	5,47–5,725	17 dBm +/- 1 dB
	5,725–5,85	9 dBm +/- 1 dB
Bluetooth	2,4G	10 dBm +/- 1 dB
GPS	1575,42 MHz	L1

Frekvencijski raspon: 5150 - 5250 MHz:

Upotreba u zatvorenom: Samo u zgradama. Ugradnja i korišćenje u drumskim vozilima i vozovima nije dozvoljena. Ograničena upotreba na otvorenom: Ako se koristi na otvorenom, oprema ne smije biti pričvršćena na fiksnu instalaciju ili na vanjsku karoseriju drumskih vozila, fiksnu infrastrukturu ili fiksnu spoljašnju antenu. Upotreba na sistemima bespilotnih letilica (UAS) ograničena je na raspon 5170 - 5250 MHz.

Frekvencijski raspon: 5250 - 5350 MHz:

Upotreba u zatvorenom: Samo u zgradama. Ugradnja i korišćenje u drumskim vozilima, vozovima i letilicama nije dozvoljena. Upotreba na otvorenom nije dozvoljena. Rukovanje WAS/RLAN instalacijama u velikim letilicama (isključujući helikoptere sa više motora) dozvoljena je do 31. decembra 2028. godine.

Frekvencijski raspon: 5470 - 5725 MHz:

Ugradnja i upotreba u drumskim vozilima, vozovima i letilicama i upotreba za bespilotne letilice (UAS) nisu dozvoljene. Rukovanje WAS/RLAN instalacijama u velikim letilicama (isključujući helikoptere sa više motora), osim u rasponu 5600 - 5650 MHz, dozvoljena je do 31. decembra 2028. godine.

10 Rješavanje problema.....

Razmotrite neke od ovih uobičajenih problema i rješenja za njih.

Ne mogu da pronađem svoje kontakte

- Provjerite da li je vaša SIM kartica polomljena.
- Provjerite da li je vaša SIM kartica pravilno ubačena.
- Uvezite u tablet sve kontakte sačuvane na SIM kartici.

Ne mogu da koristim funkcije opisane u ovom priručniku

- Provjerite da li vaš paket usluga podrazumijeva ovu uslugu.
- Provjerite da li su za ovu funkciju potrebni dodatni uređaji.

Moj tablet ne može da se poveže na mrežu ili je prikazano "Nema mreže"

- Pokušajte da se povežete na mrežu tako što ćete se premjestiti na drugu fizičku lokaciju.
- Uvjerite se da je signal mreže dostupan na mjestu gdje se nalazite.
- Provjerite da li je vaša SIM kartica ispravna.
- Provjerite da li su podešavanja vašeg tableta u režimu rada u avionu.
- Ako ste udaljeni od svoje T-Mobile mreže, možda ćete morati uključiti roming u podešavanjima tableta da biste se povezali na drugu mrežu. Može doći do troškova za roming.

Moj tablet ne može da se poveže na internet

- Provjerite da li je internet usluga Mobilnih podaci dostupna u okviru vaše plana bežičnih usluga.
- Provjerite podešavanja na tabletu. Provjerite da su Mobilni podaci uključeni ili da ste povezani na Wi-Fi.
- Uvjerite se da ste na mjestu gdje imate signal mreže za mobilne podatke ili Wi-Fi vezu sa internetom.
- Pokušajte da se povežete kasnije ili na nekoj drugoj lokaciji.

Neispravna SIM kartica

- Provjerite da li je SIM kartica pravilno ubačena (vidite "Ubacivanje Nano SIM kartice").
- Provjerite da li čip na vašoj SIM kartici oštećen.
- Provjerite da li se usluga povezana sa vašom SIM karticom poklapa sa mrežom na kojoj ste.

Moj tablet ne može da se uključi

- Ako tablet ne može da se uključi, puniti ga najmanje 10 minuta kako biste obezbijedili potrebnu minimalnu napunjenost baterije. Potom ga ponovo uključite.

Moj tablet ne reaguje nekoliko minuta

- Ako vaš tablet ne reaguje, isključite svoj tablet tako što ćete pritisnuti i zadržati dugme za uključivanje sve dok se telefon ne isključi i pokrene ponovo.

Moj tablet se sam isključuje

- Ako se vaš tablet sam isključuje, provjerite da li je dugme za uključivanje pritisnuto slučajno.
- Provjerite nivo napunjenosti baterije.
- Ako i dalje nije uspjelo, vratite tablet na fabrička podešavanja pomoću opcija za resetovanje u podešavanjima tableta. Vodite računa da napravite rezervnu kopiju svojih podataka.

Moj tablet ne može da se puni pravilno

- Provjerite da li koristite pravi punjač koji je došao uz tablet.
- Provjerite je li baterija potpuno ispražnjena; ako je baterija bila prazna dugo vremena, može proći oko 10 minuta da se na ekranu prikaže indikator punjenja baterije.
- Provjerite da li se baterija puni pod normalnim uslovima (0° C (32° F) do 45° C (113° F)).

Ne mogu da dodam kontakt

- Provjerite je li lista kontakata na SIM kartici puna; obrišite neke unose ili sačuvajte unose u tabletu.

Ne mogu da šaljem niti primam MMS

- Provjerite memoriju tableta jer je možda puna.
- Kontaktirajte korisničku podršku da provjerite dostupnost usluge i podešavanja za MMS.
- Potvrdite sa korisničkom podrškom broj servisnog centra ili MMS profil.
- Servisni centar je možda preopterećen. Pokušajte ponovo kasnije.
- Pokrenite novi niz poruka. Vaš niz poruka je možda dosegao svoj limit.

Zaključan PIN SIM kartice

- Kontaktirajte korisničku podršku kako biste dobili PUK (Personal Unblocking Key) kod.

Ne mogu svoj tablet da povežem sa računarom

- Instalirajte aplikaciju Smart Suite.
- Provjerite da li su USB dražveri pravilno instalirani.
- Otvorite panel sa obavještenjima da provjerite je li uključen Smart Suite Agent.
- Provjerite da li ste označili kvadratić USB debugging.
- Provjerite da li vaš računar ispunjava uslove za instaliranje aplikacije Smart Suite.
- Provjerite da li koristite pravi kabel koji je došao u kutiji.

Ne mogu da preuzimam datoteke

- Provjerite ima li dovoljno memorije na tabletu za preuzimanje.
- Izaberite microSD karticu kao lokaciju za čuvanje preuzetih datoteka.
- Provjeriti status vašeg paketa usluga.

Drugi ne mogu da preopznaju tablet preko Bluetooth-a

- Provjerite je li Bluetooth uključen i da li je vaš tablet vidljiv za druge korisnike.
- Provjerite jesu li ta dva urešaja u dometu za pronalaženje preko Bluetooth-a.

Baterija se prebrzo prazni

- Vodite računa da ste ispoštovali puno vrijeme za punjenje baterije (minimalno 3 sata).
- Nakon djelimičnog punjenja, indikator napunjenosti baterije možda neće biti precizan.
- Sačekajte najmanje 10 minuta nakon što se ga isključili sa punjača da dobijete preciznu indikaciju.
- Podesite osvijetljenost ekrana po potrebi.
- Podesite interval za automatsko provjeravanje e-pošte na što je duže moguće.
- Ažurirajte vijesti i informacije o vremenu ručno ili povećajte interval za automatsko provjeravanje.
- Izadite iz aplikacije koje rade u pozadini ako se ne koriste duži vremenski period.
- Isključite Bluetooth, Wi-Fi, ili GPS kada se ne koriste.

Tablet se ugrije nakon dužih igranja igrica, surfovanja internetom ili uključenih drugih zahtjevnih aplikacija

- To grijanje je normalna posljedica toga što procesor obrađuje veliki broj podataka. Prekidanjem gore navedenih radnji će se vaš tablet vratiti na normalnu temperaturu.

Kada se izvrši resetovanje na fabrička podešavanja, ne mogu da koristim tablet bez unošenja akreditiva za Google nalog

- Nakon resetovanja morate da unesete ispravne akreditive za Google nalog koji su korišćeni na ovom tabletu.
- Ako ste zaboravili svoje akreditive za Google nalog, dovršite postupak vraćanja za Google nalog.

Tablet ne zvoni kada stigne poruka

- Provjerite da li je aktiviran režim Ne uznemiravaj (idite na **Podešavanja > Zvuk > Ne uznemiravaj**).
- Pritisnite dugme za pojačavanje/utišavanje zvuka da podesite jačinu zvuka.

T Tablet

5G Mobile Tablet



User Manual
English

About this manual.....


Thank you for choosing the T Tablet 5G Mobile tablet. In order to maintain your device in optimal condition, please read this manual and keep it for future reference.

Table of content

About this manual.....	2	4.1 Contacts.....	11
1 Getting started.....	3	4.2 Messages.....	12
1.1 Overview.....	3	4.3 Gmail.....	14
1.2 Set up.....	4	4.4 Calendar.....	15
1.3 Home screen.....	5	4.5 Camera.....	16
1.4 Status bar.....	6	4.6 Photos.....	17
1.5 Split screen mode.....	6	4.7 Clock.....	18
2 About your tablet.....	7	5 Google applications.....	19
2.1 Power on/off.....	7	6 Security.....	21
2.2 Battery.....	7	6.1 Screen lock.....	21
3 Personalize your tablet.....	8	6.2 Face unlock.....	22
3.1 Language.....	8	6.3 Smart unlock.....	22
3.2 Date & time.....	8	6.4 SIM card lock.....	22
3.3 Display.....	9	6.5 Encryption & credentials.....	22
3.4 Wallpaper.....	9	7 Account.....	22
3.5 Sound.....	9	7.1 Account information.....	22
3.6 Digital wellbeing & parental controls.....	10	7.2 Software update.....	22
3.7 Gestures.....	10	8 Safety & regulatory information.....	23
3.8 Multiple users.....	10	9 Specification.....	26
3.9 Backup & Factory Reset.....	11	10 Troubleshooting.....	28
4 Applications.....	11		

1 Getting Started.....

 1.1 Overview

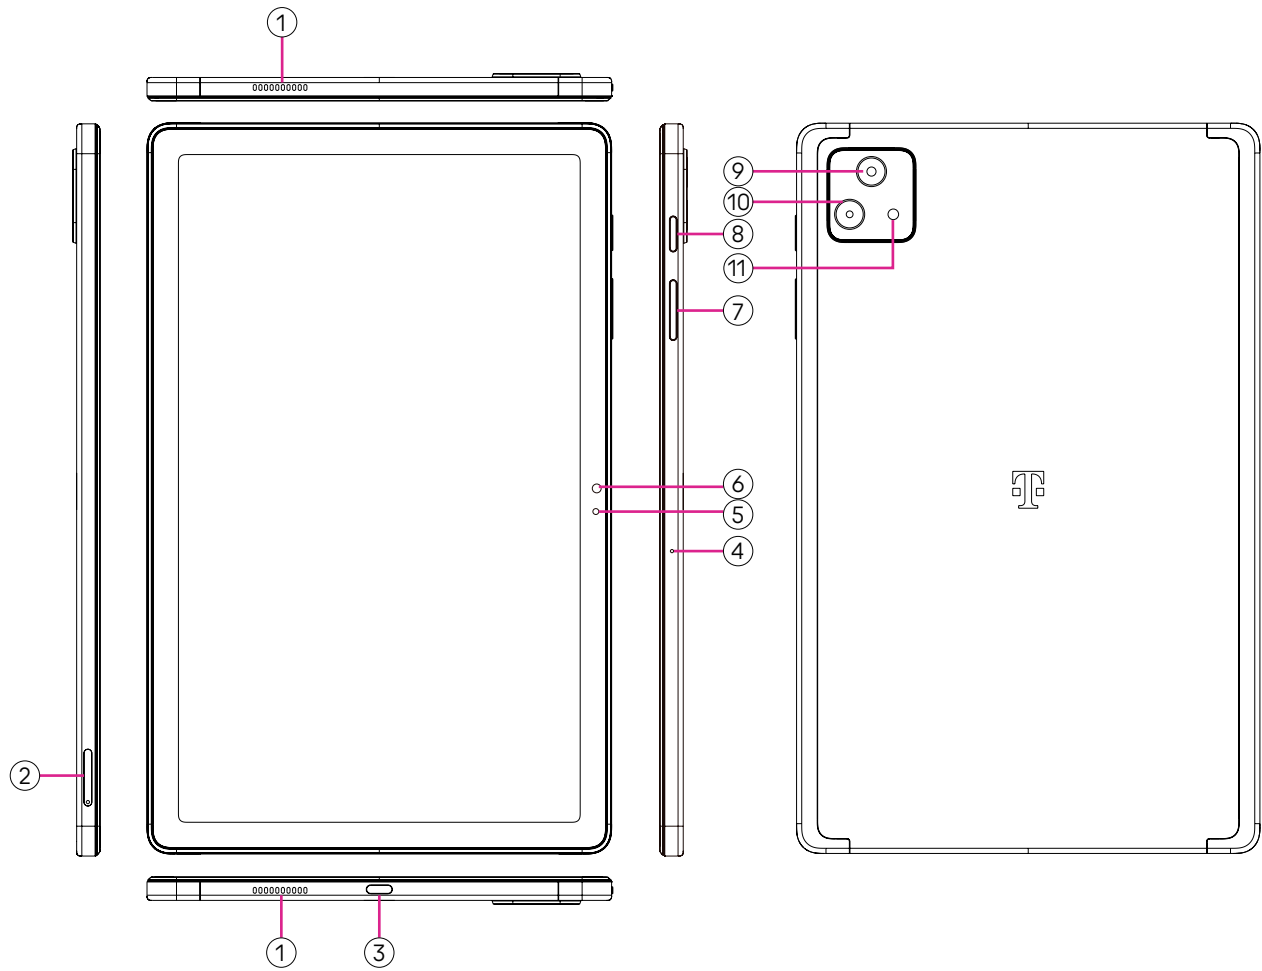

- | | | |
|-------------------|-----------------|--------------------|
| ① Speakers | ② SIM Card Slot | ③ USB Connector |
| ④ Microphone | ⑤ Light Sensor | ⑥ 8MP Front camera |
| ⑦ Volume Button | ⑧ Power Button | ⑨ 8MP Main camera |
| ⑩ 2M depth Assist | ⑪ Flash | |

Power button

- Press and release quickly to lock or light up the screen.
- Press and hold to launch **Google Assistant**.
- Press and hold the **Power** key and **Volume up** key to select from Power off or Restart.
- Press and hold the **Power** key and **Volume down** key to take a screenshot and save it.
- Press and hold the **Power** key and **Volume up** key for at least 10 seconds to force reboot.
- Press the **Power** key twice to access the camera.

Volume button

- Use the Volume up or down keys to adjust the ringtone volume, the media volume while listening to music, watching a video, or streaming content.
- While using the Camera, press the Volume up or down key to take a photo.

 
1.2 Set up

Inserting Nano SIM card

You must insert your Nano SIM card to make tablet messages using your network.



Your tablet only supports Nano SIM cards. In order to avoid damaging your tablet, do not attempt to insert other SIM types, such as Mini or Micro cards.

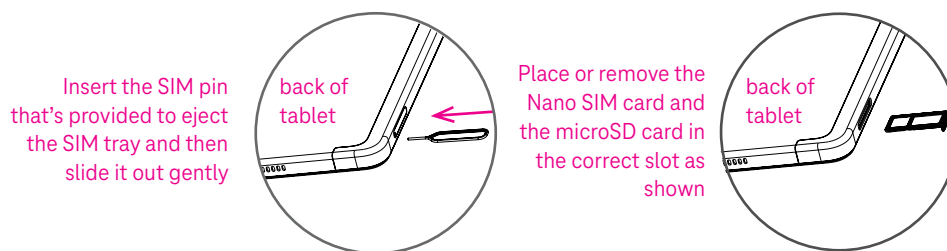

Note: Even if no SIM card is installed, your tablet will still power on and you will be able to connect to a Wi-Fi network and use some of the tablet's features.

Register an E-sim

- Connect to WiFi, touch **Settings** > **Mobile network** > **+**.
- Touch **Download a SIM instead?** > **Next**.
- Scan QR code and wait for Downloading.
- After downloading, touch **Settings** to set E-sim.

Set E-sim

After downloading E-sim configuration document, access to Mobile network, choose the E-sim document and touch **YES**.

Delete E-sim configuration document

Connect the device to WiFi or mobile data. Touch **Settings** > **Mobile network** > **Carrier** >  > **DELETE**.

 
Set up your tablet

The first time you power on the tablet, you should set the following options:

- Touch **English (United States)** to choose your language, and touch **Vision settings** to customize accessibility features. When finished, touch **Start** on original interface to go on.
- Select mobile data.
- Select an available Wi-Fi network. Or touch **Set up offline** and **Continue**.
- Toggle to allow the tablet to use location, otherwise toggle off .
- Toggle to allow scanning, otherwise toggle off .
- Toggle to allow to send usage and diagnostic data, otherwise toggle off .
- Click **Accept** to continue.
- Set a PIN for screen lock, otherwise touch **Skip** > **Skip anyway** on the screen to continue.





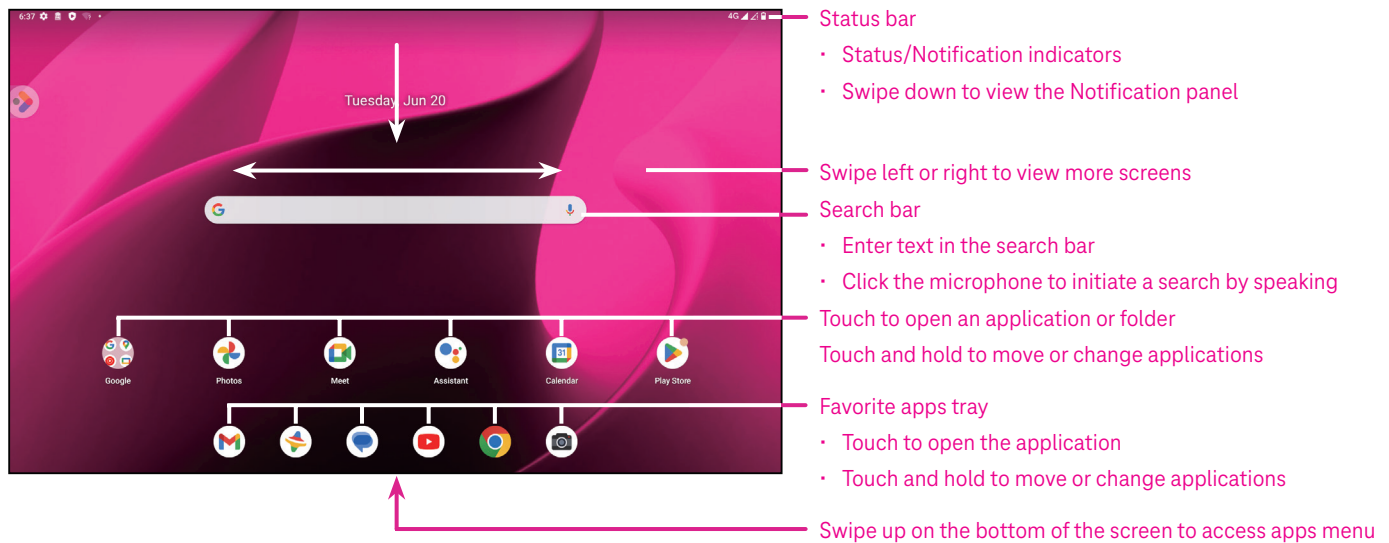







1.3 Home screen

You can bring all of the items that you use most frequently (applications, shortcuts, widgets, folders) to your Home screen for quick access.




1.4 Status bar

The Status bar appears at the top of your Home screen and includes icons indicating your tablet's status and new notification alerts.

Icon	Status	Icon	Status
	Wi-Fi® active		Battery (fully charged)
	Network (Full signal)		New message
5G	5G data service		Silent mode
	Airplane mode		Do Not Disturb mode
	Alarm set		New Gmail message
	Battery (charging)		Screen Recorder
	Location		

1.5 Split screen mode

 You can set split screen mode to show two different interfaces on the tablet at the same time.

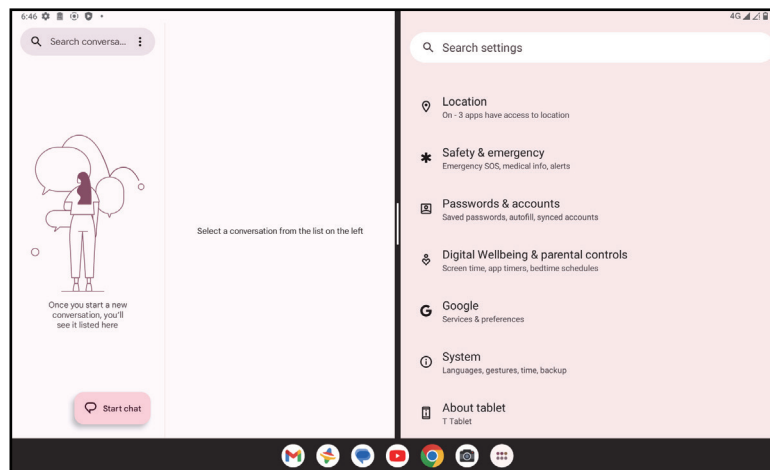


Using split screen mode

Hold the app you want to access, then tap **Split right** or **Split left**. Choose another app to use split screen.

Note: If there is nothing in recently used app interface, you can not use split screen mode.

Settings split screen mode

In split screen mode, you can adjust the split screen size by sliding  in the middle of two screens.

Or exchange two screens' place by tapping  twice.

Exiting split screen mode

In split screen mode, you can slide  to the edge of the screen.

2 About your tablet

2.1 Power on/off

 
To turn the device on, hold down the **Power** key until the tablet powers on. Unlock your tablet (using None, Swipe, Pattern, PIN, Password or Face key) if necessary. Once unlocked, the Home screen is displayed.

If you don't know your PIN code or if you have forgotten it, contact Customer Care. For safety, please do not store PIN code in your tablet.

To power the device off, press the **Power** key and **Volume up** key until options appear, then select **Power off**.

Charging

Insert the small end of the charging cable into the charge port and plug the charger into an electrical outlet.

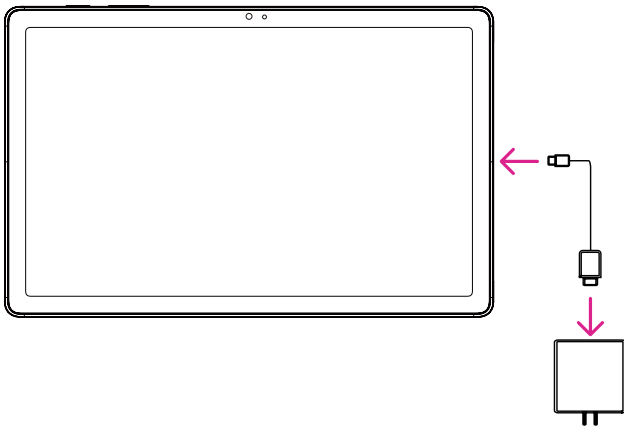

- Insert the USB type-C cable into the charge port as shown.
- Connect charger to power outlet.

Note: Please use the USB type-C cable included in the box. Wall charger sold separately. Using the wrong cable and charger may damage the charging port or reduce battery performance.

2.2 Battery


Make these adjustments to optimize your battery life.

Turn on power saving mode

- Go to **Settings > Battery > Battery Saver**.
- Touch **Use Battery Saver > TURN ON** to activate the battery saving mode.

Note: The Battery Saver mode will not be activated in charging mode.

Lower screen brightness

- Go to **Settings > Display > Brightness level**.
- Lower the brightness by sliding  to the left.


Screen timeout

- Go to **Settings > Display > Screen timeout**.
- Select the screen timeout duration.

3 Personalize your tablet

3.1 Language

Choose from multiple languages supported on your device.

- Go to **Settings > System > Languages & input > Languages**.
- Touch + **Add a language** to select a language from the list.
- Touch and hold  next to your desired language and drag it to the top of the list.

3.2 Date & time

Go to **Settings > System > Date & time**.

Use network-provided time


Touch **Set time automatically** to locate . Choose between:

- Use network-provided time
- Use GPS-provided time
- Off

If choose **Off**, you can manually set the date and time:

- Touch **Set date** to open a dialog in which you can manually set the date.
- Touch **Set time** to open a dialog in which you can manually set the time.



Automatic time zone

Turn on  to enable the network-provided time zone. And you can turn on **Use location to set time zone** to allow tablet time to be matched with local time.

If Automatic time zone is turned off, you can manually set the time zone:

- Touch **Select time zone** to select the region and time zone manually.

Use locale default

- Turn  on to enable locale default.
- If **Use locale default** is off, you can turn on  to enable the **Use 24-hour format**.

3.3 Display

Make adjustments to the display settings and wallpapers to optimize your experience.

Go to **Settings > Display** to alter the following settings.

Lock screen

Customize what displays on your lock screen.

Dark theme

Dark theme uses a black background and help keep battery alive longer on some screens.

Night light

This mode tints your screen amber. This makes it easier to look at your screen or read in dim light, and may help you fall asleep more easily.

Auto-rotate screen

Select whether the screen rotates automatically or not.

Note: Using your device in landscape mode while wearing polarized sunglasses may cut light from the screen. Take your polarized sunglasses off or use your device in portrait orientation to continue use.

3.4 Wallpaper

- Touch Photos to select from images that are stored on your device.
- Touch **Settings > Wallpaper & style** to change a wallpaper for your lock screen and/or homescreen from pre-loaded images.

3.5 Sound

Adjusting volume

- Press the volume keys that are located on the right side of the device to adjust the Ringtone & Notification volume.
- You can also go to **Settings > Sound** to adjust the volume for media, alarm and notification.

Adjusting other sounds

All other sounds that are related to notification, media, alarm, screen locking, charging and touching can be adjusted to by doing the following:

Go to **Settings > Sound**.

3.6 Digital Wellbeing & parental controls

- Go to **Settings** and touch **Digital Wellbeing & parental controls** to find out how much time you have spent on the tablet and even on each app. You can customize the time limit for using the tablet.
- In addition, parents can restrict their children's usage time and manage their browsing habits.

3.7 Gestures

You can change the system navigation by going to **Settings > System > Gestures > System navigation**, then choose one type of navigation.

Gesture navigation

Touch **Gesture navigation** to enable different interfaces access by swiping the tablet screen.

- Go to recent apps interface: swipe up from the bottom of the screen, and hold.
- Go home: swipe up from the bottom of the screen.
- Go back: swipe from either the left or right edge of the screen.

3-button navigation

Touch **3-button navigation** to display the following buttons on the bottom of the screen.

■ Recent Apps button

- Touch to view recently used applications. Swipe up on the screen to remove a specific thumbnail from the list, or scroll all the way to the left and touch **CLEAR ALL** to remove all thumbnails from the list.
- Pressing the **Recent Apps** button will also allow access to **Screenshot**. Touch **Screenshot** to immediately capture what is on the screen.

● Home button

- From any application or screen, touch to return to the Home screen.
- Touch and hold to launch Google Assistant, with which you can search for information online, open apps on your tablet, or send messages.

◀ Back button

Touch to go back to the previous screen, or to close a dialog box, options menu, or the Notification panel.

3.8 Multiple users

You can share your tablet with other users by going to **Settings > System > Multiple users**, then turn on . And you will see the following choices.

- You (Owner): Touch it and you can set your profile information.
- Add guest: Touch it to create new guest and finish other settings.
- Add user: Touch it to add new user and allow him to set up his space.

Note: Touch **Add users from lock screen** to allow user adding in lock screen.

3.9 Backup & Factory Reset

- To transfer data from your device to another one, go to **Settings > System > Backup > Back up to Google Drive**, then you need set your backup account.
- To wipe all data in your device, go to **Settings > System > Reset options > Erase all data (factory reset) > Erase all data > Erase all data**. Then the tablet will restart.

4 Applications

4.1 Contacts

 
Contacts enables quick and easy access to the contact you want to reach.

To access this function, touch **Contacts**  from the Apps menu.

You can view and create contacts on your tablet and synchronize them with your Gmail contacts or other applications on the web or on your tablet.

Adding a contact

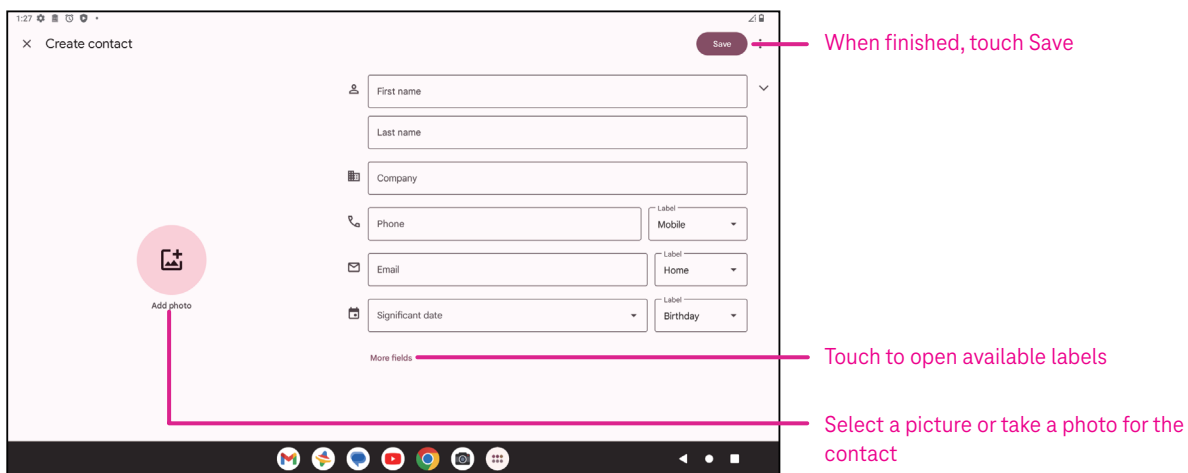

- Touch **+** in the contact list to create a new contact.
- Enter the contact's name and other contact information.
- When finished, touch **Save**.
- To exit without saving, you can touch **X** and then touch **Discard**.



Editing your contacts




Touch  in the contact details screen to edit. When finished, touch **Save**.

Add to/remove from Favorites⁽¹⁾

- Touch a contact to view details then touch  to add the contact to favorites.
- Touch  again to remove a contact from favorites.

Deleting a contact

From the contact list screen:

- Touch and hold the contact you want to delete, then touch  and **Delete** to delete.
- Touch  > **Select** to choose contacts, then touch  and **Delete** to delete selected contacts.


From the contact details screen:

- Touch  then select **Delete**. Select **Delete** when prompted to confirm.



The contact you have deleted will also be removed from other applications on the tablet or web the next time you synchronize your tablet.

Sharing a contact

You can share a single contact with others by sending the contact's vCard to them via Messages, Email, and Bluetooth. Select a contact you want to share, touch  and then select **Share**.

Available options

From the contact list, you may also make further adjustments by touching **Fix & manage**.

Import from file/Export to file:

Import/Export

Import or export contacts between tablet, SIM card, microSD card and tablet storage.


Settings:

- Your info Touch to set up your profile.
- Accounts Touch to add account and configure related info.
- Sort by Touch to sort the list by the first name or last name.
- Name format Touch to choose whether to display first name first or last name first.
- Theme Touch to choose screen theme on contact app.
- Default account for new contacts Touch to choose the default place to save a new contact.
- Phonetic name Touch to choose display or hide phonetic name.




4.2 Messages


Use the messaging app  to send and receive text (SMS) and multimedia (MMS) messages.

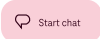Creating a message

On the Messaging list screen, touch  to write text/multimedia messages.

Sending a text message

 - Enter the name, phone number or email of the recipient in the **To** bar or touch  to add recipients.
- Touch the **Text message** bar to enter the text of the message.
- Press and hold  to access emoticons.
- When finished, touch  to send the text message.

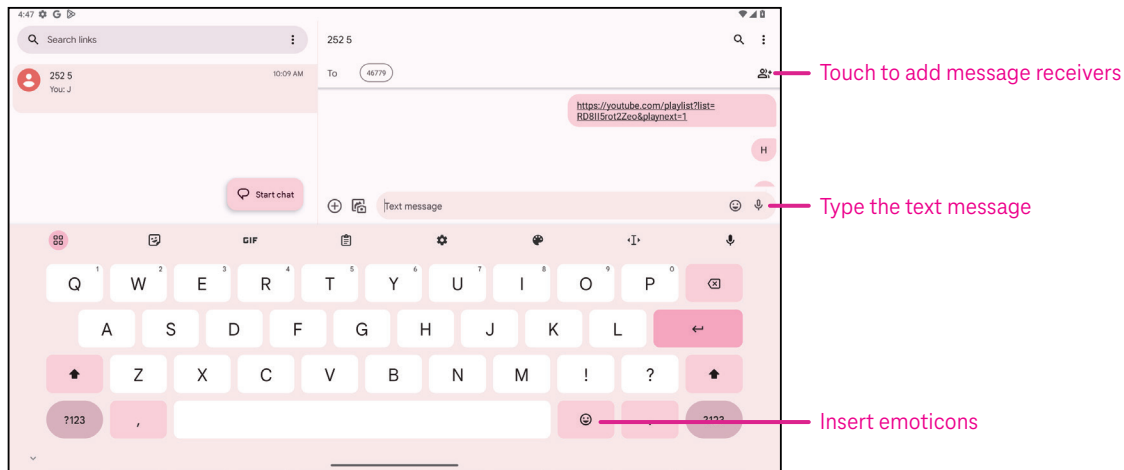




An SMS message of more than 160 characters will be charged as several SMS. A counter will be on the right of the text box to remind you how many characters can be entered in one message.




Specific letters (accented) will also increase the size of the SMS, this may cause multiple SMS to be sent to your recipient.

Sending a multimedia message

MMS enables you to send video clips, images, audio and vCard to other compatible mobiles and e-mail addresses.






- Enter the recipient's phone number in the **To** bar.
- Touch the **Text message** bar to enter the text of the message.
- Touch  to attach a emoticons, your location, contact or file; Touch  to choose a picture or video.
- When finished, touch  to send the multimedia message.

Managing messages

When receiving a message,  will appear on the Status bar as a notification. Drag down the Status bar to open the Notification panel, touch the new message to open and read it. You can also access the Messaging application and touch the message to open it.

Messages are displayed as a conversation.

 
Touch a message to enter the message composing screen:

- Touch  to save the number to contacts, view the contact details, archive or delete the message,
- To reply to a message, enter the text. When finished, touch .
- If you touch and hold a message, the following options will be available:  copy,  delete, view details,  add to favorite.

4.3 Gmail





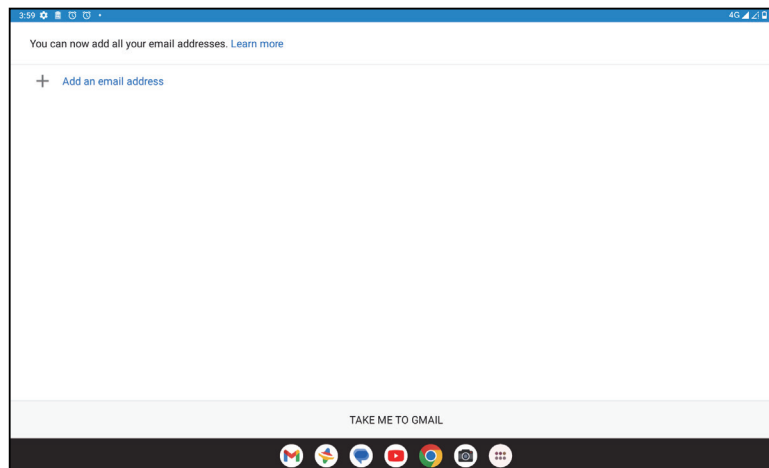


Setting up Gmail

To set up your email account, swipe up from the Home screen, then select Gmail.



- Select **+** to add an email address.
- An email setup process will guide you through the steps to set up an email account.
- Select the type of email account that you have and enter the email address and password of the account you want to set up.
- If the account you entered is not provided by your service provider in the device, touch **Other** and enter the email address, touch **NEXT** to select an account type and enter password of your email, then correctly fill in server and port in both Incoming server settings and Outgoing server settings interfaces. Touch **Finish** to complete setup.
- To add another email account, click + **Add an email address**. Choose Other from the set up email options. Or you can touch the account name on the upper right corner and select **Add another account** to implement this function (this is unavailable when not log in Google).


Sending an email

 
- Touch  **Compose** from the Inbox screen.
- Enter recipient(s) email address(es) in the **To** field.
- If necessary, touch  **>Cc/Bcc** to add a copy or a blind copy to the message.
- Enter the subject and the content of the message.
- Touch  to add an attachment.
- If you do not want to send the mail right away, you can touch  and **Save draft** or touch the Back key to save a copy.
- Touch  to send.
- If you do not want to send or save the email, you can touch  and then select **Discard**.
- To add a signature that will appear on all of your emails, touch  and select **Settings**, then choose the account that you want to create or modify the signature, touch **Mobile signature** to edit.

4.4 Calendar

You can use Calendar to keep track of important meetings, appointments, and more. To access the function, swipe up from the Home screen, then touch **Calendar**.



Viewing calendars

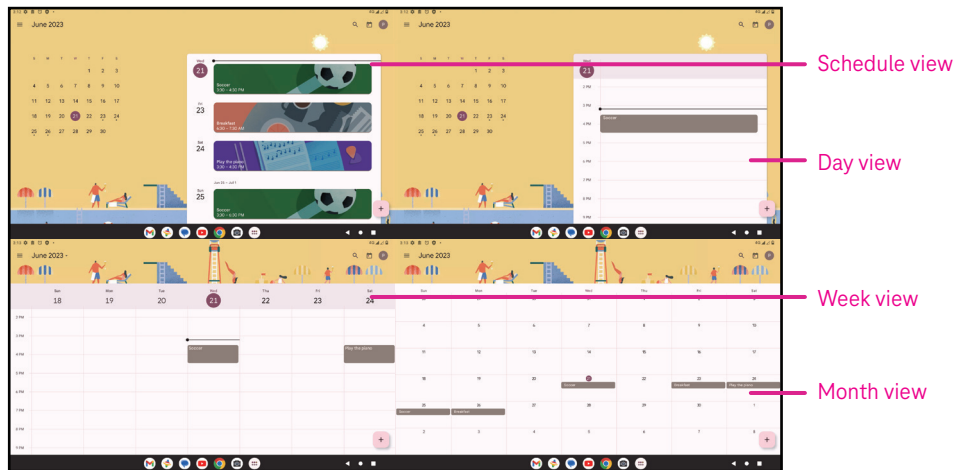
You can display the Calendar in Schedule, Day, Week or Month view. Touch  and select your desired calendar view.





Creating a new event

You can add new events from any Calendar view.

- Touch .
- Fill in all required information for this new event. If it is a whole-day event, you can turn  on to All-day.
- Invite guests to the event. Enter the email addresses separated by commas of the guests you want to invite to separate. The guests will receive an invitation from Calendar and Email.
- When finished, touch **Save** from the top of the screen.

To quickly create an event from the Day, week, or month views, touch an empty spot to select a target area which will then turn into , and touch the icon to create the new event.

Deleting or editing an event

- To delete or edit an event, touch the event to enter its details screen, then touch  to edit the event.
- Touch  and **Delete** to remove the event, or **Duplicate** to copy the event.

Event reminder

If a reminder is set for an event, the upcoming event will appear in the home screen.



- Touch an event name to view the Calendar notification list.

4.5 Camera

Accessing the camera

From the Home screen, touch **Camera**.




Taking a picture

- Position the object or landscape in the viewfinder, and touch the screen to focus if necessary.
- Touch  to take the picture which will be automatically saved.
- To take burst shots, touch and hold .








- | | |
|--|--|
| 1 Access more options | 7 Adjust shooting distance |
| 2 Select shot size | 8 Select a beauty mode |
| 3 Set countdown seconds | 9 Switch between front/back camera |
| 4 Choose HDR mode | 10 Take a photo |
| 5 Select flash mode to select flash mode: Off, Auto, On, or Always | 11 View photos or videos you have taken |
| 6 Select a filter | 12 Select a filter shooting mode: LIVE FOCUS, VIDEO PHOTO, PRO, PANORAMA |

Making a video

- Touch **VIDEO** to enter the Video mode.
- Touch  in the center of the screen to start video recording.
- You can also touch  to take a picture during video recording.
- Touch  to stop recording. The video will be automatically saved.

Viewing, Editing, & Sharing

- Touch  then choose a way like **Messages** to share the photo or video.
- Touch  to edit.
- Touch  to search what you see with Google Lens.
- Touch  to delete.
- Touch  to go back to Camera mode.

4.6 Photos




Photos acts as a media player for you to view photos and play videos.

Pictures and videos are displayed by moments and albums in Photos.

- Touch the picture/video directly to view or play.
- Swipe left/right to view previous or next pictures/videos.

Working with photos

You can work with pictures by rotating or cropping them, sharing them with friends, setting them as a contact photo or wallpaper, etc.

- Locate the picture you want to work on and touch the picture in the full screen picture view.
- Touch  to share the picture, or touch  to delete the picture. Touch  and select **Use as** to set the picture as Contact photo or Wallpaper.



Tap  to enter editing screen.

Suggestions

Choose Enhance, Warm, or Cool to adjust the picture color.

Crop

Select between Auto, Crop, Rotate, Preview, and Reset.

Adjust

Manage brightness, contrast, and more.

Filters

Choose between a variety such as Vivid, West, Palma, and more.



Markup

Personalize your picture by drawing on it or adding words to it.




4.7 Clock





To access Clock, swipe up from the Home screen, then touch Clock.

Setting world clocks







- Touch  on the clock screen.
- Touch  to add a time zone.

Setting alarms






- Touch  on the clock screen.
- Turn  on to enable existing alarm, or touch  to add a new alarm. The following options will appear:

	Add label	Touch to set a name for the alarm.
	Schedule alarm	Touch to select the date of the setting alarm.
	Ringtone	Touch to select a ringtone for the alarm.
	Dismiss	Touch to dismiss the alarm.
	Delete	Touch to delete the alarm.

Setting timer

- Touch  on the clock screen.
- Enter time in the sequence of seconds, minutes, and hours.
- Touch  to activate Countdown.
- Touch  to add another timer in panel.
- Touch  to deactivate Countdown.
- Touch  to activate Countdown.
- Touch  to delete current countdown timer.

Setting stopwatch

- Touch  on the clock screen.
- Touch  to start the timer.
- Touch  to show a list of records according to the updated time.
- Touch  to halt the total and lap times.
- Touch  to clear all new timers.

Bedtime

Set a bedtime to silence your tablet and choose to listen to soothing sounds. Set a wakeup time to receive alerts again.

5 Google applications

Google apps are preinstalled on your tablet to improve work efficiency and provide an enjoyable user experience.

This manual briefly introduces the apps. For detailed features and user guides, refer to related websites or the introduction provided in the apps.

Register with a Google Account to enjoy full functionality.



Google

Your bookmarks, browsing history, and settings across all devices on which the browser is installed can be synchronized with your Google Account.



Gmail

As Google's web-based email service, Gmail is configured when you first set up your tablet. With this application, you can send and receive emails, manage emails by labels, archive them, and more. Emails can be automatically synchronized with your Gmail account.



Maps

Google Maps offers satellite imagery, street maps, 360° panoramic views of streets, real-time traffic conditions, and route planning for traveling by foot, car, or public transportation. By using this application, you can find your own location, search for a place, and get suggested route planning for your trips.



YouTube

YouTube is an online video-sharing application where users can upload, view, and share videos. Available content includes video clips, TV clips, music videos, and other content such as video blogging, short original videos, and educational videos. It supports a streaming function that allows you to start watching videos almost as soon as they begin downloading from the internet.



Drive

A file storage and synchronization service created by Google, which allows users to store files in the cloud, share and edit files. Files in Drive are kept secure and can be accessed from any device by logging in to your Google Account. Files or folders can be shared privately with other Google Account users.



Meet

This is a video chat mobile app that allows users to make video calls to people in their contact list once their phone numbers are verified.



Photos

Google Photos stores and backs up your photos and videos. It also automatically analyzes photos and organizes them into groups so that you can quickly find the photos you need.



Chrome

Enjoy surfing the Web using the Chrome browser.



YT Music

YT Music Downloader is a Windows program that simplifies downloading videos and music from YouTube. YT Music Downloader lets you download videos and/or audio from YouTube. The program is geared toward music, so you can save music videos (or any videos) or convert those videos to just music, and the app will automatically save them in the MP3 format. Provided an appropriate YouTube link, the program is very fast at converting and saving these items to file, and once done, you have access to this music offline and via any others devices to which you transfer these files.



Play Store

Serves as the official app store for the Android operating system, allowing users to browse and download applications and games. Applications are either free of charge or at a cost.



Files

Files displays all data stored on the tablet, including both external SD card and internal storage, such as applications, media files downloaded from Google Play Store, YouTube or other locations; videos, pictures or audio you have captured; other data transferred via Bluetooth, USB cable, etc.



 
Assistant

Google Assistant helps you get everyday tasks done more easily . Set reminders, get quick answers, find directions with Google Maps, and more while on-the-go with the help of your Google Assistant.



Calculator

You can use calculator to add, subtract, multiply, and divide numbers. You can also raise a number to a power, find a number's square root, add and subtract a specific percentage, and even find the percentage of a number.

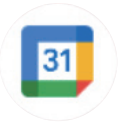

Calendar

You can create as many calendars as you want and share them to your friends. And calendar will show you your schedule to help you to arrange your time seamlessly.



Clock

Clock helps you to manage your time reasonably. You can set alarms, countdowns and so on.



Contacts

This provides a place for storing contacts.



Find Device

Allow your device to lock or erase a lost device.



Google One

The Google One app lets you back up your tablet and manage your Google account storage.



Google TV

Google TV makes it easy to find and enjoy the entertainment you love in one place. With Google TV, you'll be able to: Find what to watch next.



Home

With Google Home, you can create a more organized and personalized smart home. Set up, manage, and control your Google Nest, Wifi, or other compatible smart home products like lights, cameras and more.



Kids Space

Kid Space offer educational app for kids. Famous cartoon, educational activities and games are included in this app.



Messages

Send SMS and MMS message. Unlimited texts, photos, videos, documents, emoticons and so on can be shared to your contacts.



Play Books

Show you different types of ebooks, so you can read or download some ebooks that you love. When read, you can also highlight some sentences that you like.



Wallet

Enable users to pay for merchandise at retail outlets with tablets. Google Wallet supports loyalty and gift cards as well as payments between individuals via Gmail.



YT Kids

An app made just for kids, including all kinds of videos for all kinds of kids. And parental controls are available to set contend levels by age.



Safety

An app about safety settings. Here you can set emergency response, detection & alerts, emergency contacts information and so on.

6 Security

6.1 Screen lock

Swipe up from the Home screen, access **Settings** in the search apps list. Go to **Security > Screen lock**.

Screen lock allows you to secure your tablet from being used by others without your permission. Activate the following security options: Pattern, PIN, or Password. Whoever turns on your tablet will be required to unlock the screen in order to access your device. Your device can be unlocked by anyone if you select None or Swipe.

6.2 Face Unlock

Face unlock allows you to unlock your device with your facial data. Set it according to the on-screen steps. Make sure you are facing the tablet screen when using face recognition.

Note: you need to set a pattern, PIN, or password before using face unlock.

6.3 Smart Lock

Under **More security settings**, this function is inactive by default; you need to set a screen lock to activate it. If Smart lock is turned on, your device remains unlocked when it is safe with you.

6.4 SIM card lock

Under **More security settings**, a SIM PIN prevents access to the cellular data networks. When it's enabled, any device containing the SIM card will request the PIN upon restart. A SIM PIN is not the same as the lock code used to unlock the device.

6.5 Encryption & credentials

Under **More security settings**, touch to view your device encryption status and the credentials items. You can modify and clear all of the stored credentials.

7 Account

7.1 Account information

You can also access account information from your tablet.

- Go to **Settings > Passwords & accounts**.

7.2 Software update

To access Software Updates, follow the steps below:

- Connect your device to a Wi-Fi network and make sure it has a strong data connection.
- Ensure your battery is fully charged before starting the software update. Your device's current battery level can be found on your device under **Settings > Battery**.
- Go to **Settings > System > System update**.
- If you want to update the system, tap **Check for update** and when that's finished, your tablet will have the latest version of the software.

8 Safety & regulatory information

Read this chapter carefully before using your mobile device.

Safety and Use

The manufacturer disclaims any liability for damage, which may result as a consequence of improper use or use contrary to the instructions contained herein. Use of connected devices subject to T-Mobile's Terms and Conditions.

Traffic Safety

Always obey the local laws and regulations addressing the use of wireless mobile devices and their accessories in the areas where you drive. The use of mobile devices while driving may be prohibited or restricted in certain areas.

Conditions of Use

Remember to abide by local authority rules of mobile device use on aircrafts.

Operational Warnings

Only use your mobile device in accordance with local laws and regulations and obey all posted notices in public areas.

Read and follow the directions from the manufacturer of your implantable medical device. If you have any questions about using your mobile device with your implantable medical device, consult your healthcare provider.

- It is recommended to have proper supervision while small children use your mobile device.
- Do not attempt to disassemble your mobile device. If you disassemble your mobile device, the warranty will not apply.
- Always handle your mobile device with care and keep it in a clean and dust-free place.
- Do not allow your mobile device to be exposed to adverse weather or environmental conditions (moisture, humidity, rain, infiltration of liquids, dust, sea air, etc.). The manufacturer's recommended operating temperature range is 0°C (32°F) to +40°C (104°F)
- **Note: The max value depends on the device condition, materials around it and the housing paint and texture.**
- At over 40°C (104°F), the legibility of the mobile device's display may be impaired, though this is temporary and not serious.
- Do not open or attempt to paint or repair your mobile device.
- Do not drop, throw or try to bend your mobile device.
- Do not use the mobile device if the screen is damaged, cracked or broken to avoid any injury.
- Use only batteries, battery chargers, and accessories which are recommended by device manufacturer and its affiliates and are compatible with your mobile device model. Device manufacturer and its affiliates disclaim any liability for damage caused by the use of other chargers or batteries.

Please check local laws and regulations in your jurisdiction to learn how to best dispose of your mobile device.



PROTECT YOUR HEARING

To prevent possible hearing damage, do not listen at high volume levels for long periods. Exercise caution when holding your device near your ear while the loudspeaker is in use.

Privacy

Please note that you must respect the laws and regulations of your jurisdiction or other jurisdiction(s) where you will use your mobile device regarding taking photographs and recording sounds with your mobile device. Pursuant to such laws and regulations, it may be strictly forbidden to take photographs and/or to record the voices of other people or any of their personal attributes, and reproduce or distribute them, as this may be considered to be an invasion of privacy.

It is the user's sole responsibility to ensure that prior authorization be obtained, if necessary, in order to record private or confidential conversations or take a photograph of another person; the manufacturer, the seller or vendor of your mobile device (including the operator) disclaim any liability which may result from the improper use of the mobile device.

Legal Information

In order to provide you with better access to this important information, we've made the materials accessible from the tablet's Settings menu. Review these materials prior to using your mobile device. To access the materials on your mobile device, swipe up from the home screen, and tap **Settings > About tablet > Legal information**, and select a topic.

Regulatory Information (e-label)

Your mobile device uses an electronic label (e-label) that provides regulatory information about your device. To view the regulatory information for this device on the device, swipe up from the home screen, then tap **Settings > About tablet > Regulatory labels**.



This tablet has been tested and rated for use with hearing aids for some of the wireless technologies that the tablet uses. However, other wireless technologies may be used in this tablet that have not been tested for use with hearing aids. It is important to try the different features of your tablet thoroughly and in different locations to determine if you hear any interfering noise when using this tablet with your hearing aid or cochlear implant. Consult your wireless service provider about its return and exchange policies, and for information about hearing aid compatibility.

Your device includes a radio transmitter and receiver. It is designed and manufactured not to exceed the exposure limits for Radio Frequency (RF) set by the CONFORMITE EUROPEENNE(CE). The RF exposure limits set by the CE for wireless mobile devices utilize a unit of measurement referred to as Specific Absorption Rate (SAR), which is a measure of the amount of RF energy absorbed by the body when using a mobile device. The CE limit for public exposure from cellular tablet is a SAR level of 2.0 watts per kilogram (2.0 W/kg). And the highest SAR value for this device when tested at the body was 1.34W/kg (10g).

This device complies with CE radiation exposure limits set forth for an uncontrolled environment. To ensure compliance with the RF exposure guidelines, the device must be used at least 0 mm from your body.

To view additional SAR information on your tablet, swipe up from the home screen, then tap Settings > About tablet > Legal information > RF Exposure.

Battery and Accessories

Observe the following precautions for battery use:

- Do not attempt to open the battery (due to the risk of toxic fumes and burns).
- Do not disassemble or cause a short-circuit in the battery.
- Do not burn or dispose of a used battery in household garbage or store it at temperatures above 45° C.
- Do not disassemble or open, crush, bend or deform, puncture or shred.
- Do not modify or remanufacture, attempt to insert foreign objects into the battery, immerse or expose to water or other liquids, expose to fire, explosion or other hazards.

Products that have the below symbol must be taken to collection points at the end of their life:



- Municipal waste disposal centers with specific bins for these items of equipment.
- Collection bins at points of sale.

You can learn more about how to recycle your mobile device by visiting the CTIA website at www.ctia.org/news/how-to-recycle-your-mobile-device

CAUTION: IF BATTERY IS REPLACED BY AN INCORRECT TYPE, DEVICE MIGHT EXPLODE. DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTION.



Recycling Information

Call Recycle Customer Support at 1-855-368-0829 for recycling instructions or just mention this: In the United States you may learn more about CTIA's Recycling Program at <http://www.recyclewirelessphones.com>.

Chargers

Home A.C./Travel chargers will operate within the temperature range of: 0°C (32°F) to 45°C (113°F).

Due to different applicable electrical specifications, a charger you purchased in one jurisdiction may not work in another jurisdiction. They should be used for this purpose only.

This product should be operated with the recommended power supply unit(s).

Travel charger: Input: 100–240V~ 50/60Hz 0.5A

Output: 5V 3A

Licenses



microSD logo is a trademark of SD-3C, LLC.



The Bluetooth® word mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by Device Manufacturer and its affiliates is under license. Other trademarks and trade names are those of their respective owners.



The Wi-Fi Logo is a certification mark of the Wi-Fi Alliance.

9 Specification

Mode	Band	Output Power
GSM	B2	30dBm+/-1dB
	B3	30dBm+/-1dB
	B5	32.5dBm+/-1dB
	85	32.5dBm+/-1dB
WCDMA	B1	23.5dBm+/-1dB
	B2	24dBm+/-1dB
	B5	23.5dBm+/-1dB
	B8	23.5dBm+/-1dB
LTE	LTE B1	23dBm+/-1dB
	LTE B2	23.5dBm+/-1dB
	LTE B3	23dBm+/-1dB
	LTE B4	24dBm+/-1dB
	LTE B5	23dBm+/-1dB
	LTE B7	23dBm+/-1dB
	LTE B8	23dBm+/-1dB
	LTE B20	23dBm+/-1dB
	LTE B28	23dBm+/-1dB
	LTE B38	26dBm+/-1dB
NR	5G N1	23dBm+/-1dB
	5G N3	23dBm+/-1dB
	5G N7	23dBm+/-1dB
	5G N28	23dBm+/-1dB
	5G N38	23dBm+/-1dB
	5G N66	24dBm+/-1dB
	5G N78	26dBm+/-1dB
WIFI 2.4G	2.412–2.472	16dBm+/-1dB
WIFI 5G	5.15–5.25	17dBm+/-1dB
	5.25–5.35	17dBm+/-1dB
	5.47–5.725	17dBm+/-1dB
	5.725–5.85	9dBm+/-1dB
Bluetooth	2.4G	10dBm+/-1dB
GPS	1575.42MHz	L1

Frequency band: 5150 - 5250 MHz:

Indoor use: Inside buildings only. Installations and use inside road vehicles and train carriages are not permitted.

Limited outdoor use: If used outdoors, equipment shall not be attached to a fixed installation or to the external body of road vehicles, a fixed infrastructure or a fixed outdoor antenna. Use by unmanned aircraft systems (UAS) is limited to within the 5170 - 5250 MHz band.

Frequency band: 5250 - 5350 MHz:

Indoor use: Inside buildings only. Installations and use in road vehicles, trains and aircraft are not permitted.

Outdoor use is not permitted. Operation of WAS/RLAN installations in large aircraft (excluding multi-engined helicopters) is permitted until 31 December 2028.

Frequency band: 5470 - 5725 MHz:

Installations and use in road vehicles, trains and aircraft and use for unmanned aircraft systems (UAS) are not permitted. Operation of WAS/RLAN installations in large aircraft (excluding multi-engined helicopters), except in the frequency band 5600 - 5650 MHz, is permitted until 31 December 2028.

10 Troubleshooting.....

Review some of these common issues and their solutions.

I can't find my contacts

- Make sure that your SIM card is not broken.
- Make sure that your SIM card is inserted properly.
- Import all contacts stored in SIM card to tablet.

I can't use the features described in the manual

- Check to make sure that your subscription includes this service.
- Make sure that this feature doesn't require any additional accessory.

My tablet can't connect to a network or "No service" is displayed

- Try connecting to the network by moving to another physical location.
- Verify the network coverage in your current area.
- Check that your SIM card is valid.
- Make sure your tablet's setting is not in airplane mode.
- If you are away from your T-Mobile network, you may need to enable roaming in the tablet's settings to connect to another network. Roaming charges may apply.

My tablet can't connect to the internet

- Make sure that Cellular Data internet service is available in your wireless service plan.
- Check your tablet's settings. Make sure Cellular Data is enabled or Wi-Fi connected.
- Make sure that you are in a place with network coverage for cellular data or Wi-Fi internet connection.
- Try connecting at a later time or from another location.

Invalid SIM card

- Make sure that the SIM card has been correctly inserted (see "Inserting Nano SIM card").
- Make sure that the chip on your SIM card is not damaged.
- Make sure that the service of your SIM card matches the network you're on.

My tablet can't be switched on

- If the tablet can't be switched on, charge for at least 10 minutes to ensure the minimum battery power needed. Then switch it on again.

My tablet has not responded for several minutes

- If your tablet doesn't respond, turn off your tablet by pressing and holding the Power key until it turns off and then restart it again.

My tablet turns off by itself

- If your tablet turns off by itself, make sure that the Power key is not accidentally pressed.
- Check the battery charge level.
- If it still doesn't work, Factory reset the tablet via the Reset options in the tablet's Settings. Make sure you have backed up your data.

My tablet can't charge properly

- Make sure that you are using the proper charger that comes with the tablet.
- Make sure that your battery is not completely discharged; if the battery power has been discharged for a long time, it may take around 10 minutes to display the battery charging indicator on the screen.
- Make sure that charging is carried out under normal conditions (0°C (32°F) to 45°C (113°F)).

I can't add a contact

- Make sure that your SIM card contact list are not full; delete some files or save the files to the tablet.

I can't send and receive MMS

- Check your tablet storage as it might be full.
- Contact customer care to check service availability and MMS parameters.
- Verify the server center number or your MMS profile with customer care.
- The server center may be swamped. Try again later.
- Start a new Messaging string. Your messaging string may have reached its limit.

SIM card PIN locked

- Contact customer care to obtain the PUK (Personal Unblocking Key) code.

I can't connect my tablet to my computer

- Install Smart Suite.
- Check that your USB driver is installed properly.
- Open the Notification panel to check if the Smart Suite Agent has been activated.
- Check that you have marked the USB debugging checkbox.
- Check that your computer meets the requirements for Smart Suite installation.
- Make sure that you're using the right cable from the box.

I can't download new files

- Make sure that there is enough tablet storage space for your download.
- Select the microSD card as the location to store downloaded files.
- Check your subscription status.

The tablet can't be detected by others via Bluetooth

- Make sure that Bluetooth is turned on and your tablet is visible to other users.
- Make sure that the two devices are within Bluetooth's detection range.

The battery drains too fast

- Make sure that you follow the complete charge time (minimum 3 hours).
- After a partial charge, the battery level indicator may not be exact.
- Wait for at least 10 minutes after removing the charger to obtain an exact indication.
- Adjust the brightness of screen as appropriate.
- Extend the email auto-check interval for as long as possible.
- Update news and weather information manually or increase their auto-check interval.
- Exit background-running applications if they are not being used for extended periods of time.
- Deactivate Bluetooth, Wi-Fi, or GPS when not in use.

The tablet becomes warm following prolonged game playing, internet surfing or running other complex applications

- This heating is a normal consequence of the CPU handling excessive data. Ending the above actions will make your tablet return to normal temperature.

After Factory data reset is performed, I can't use my tablet without entering Google Account credentials

- After reset is performed, you must enter the original Google Account credentials that were used on this tablet.
- If you don't remember your Google Account credentials, complete Google Account recovery procedures.

The tablet doesn't ring when a message arrives

- Make sure that Do Not Disturb mode (go to **Settings > Sound > Do Not Disturb**) is not activated.
- Press the Volume key to adjust volume.